


ASSEMBLY INSTRUCTION

ITEM NO: 97037 97041

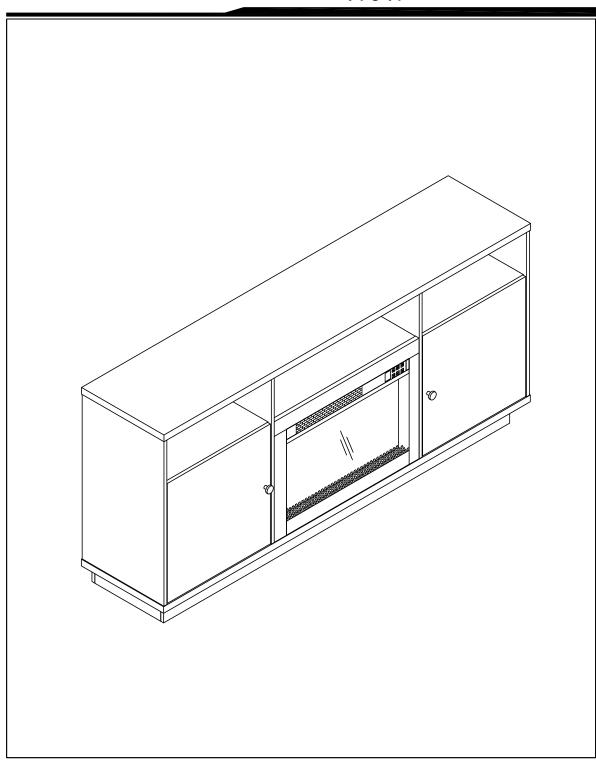

Necessary assmbly time: 60 minutes.

ΕN

Thank you for purchase on our products, please contact us if you have difficulty with assembly or need replacement parts. Our customer service is here to assist you.


Please attach your User Name or Order ID so that we can assist you better.

WARNING

Serious or fatal injury may occur from unexpected assembly or use .

- 1. During the assembly process, keep all parts away form babies or children.
- 2. Always securely fix this product to the wall. Make sure the wall area to be drilled is free from hidden electrical wires, water and gas pipes.
- 3. Use of tip-over restraints may only reduce, but not eliminate the risk oftip-over.
- 4. Unless specially designed to accommodate, do not set heavy objects on top of this product.
- 5. Place the heaviest items on the lowest shelf.
- 6. Never allow children to climb or bang on drawers, doors or shelves.

Parts List

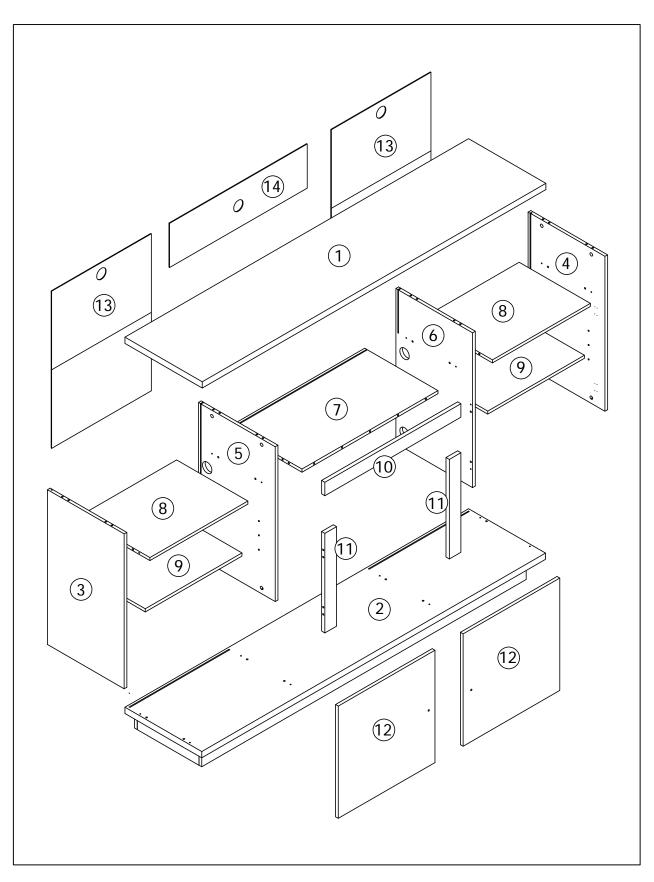

Hardware List









Not provided			
A	B	C	D
Cam bolt 35PCS	Cam lock 35PCS	Wood dowel 34PCS	Bracket 12PCS
E	F	G	H
Flat head screw 16PCS	Connecting iron sheet 2PCS	Hinge 4PCS	Flat head screw 24PCS
		K	
handle 2PCS	Bolt 2PCS	Shelf pin 8PCS	Heater 1PC
L1	L2	L3	L4
L-Brackets 2PCS	Screws 6PCS	LED light bars 2PCS	Hook 2PCS
Prevent from toppling 2PCS			

Assembly Steps

