




Assembly Instruction

Item No : 58903CH / 58904CH


Description: 4 Drawer Chest



TOOL REQUIRED

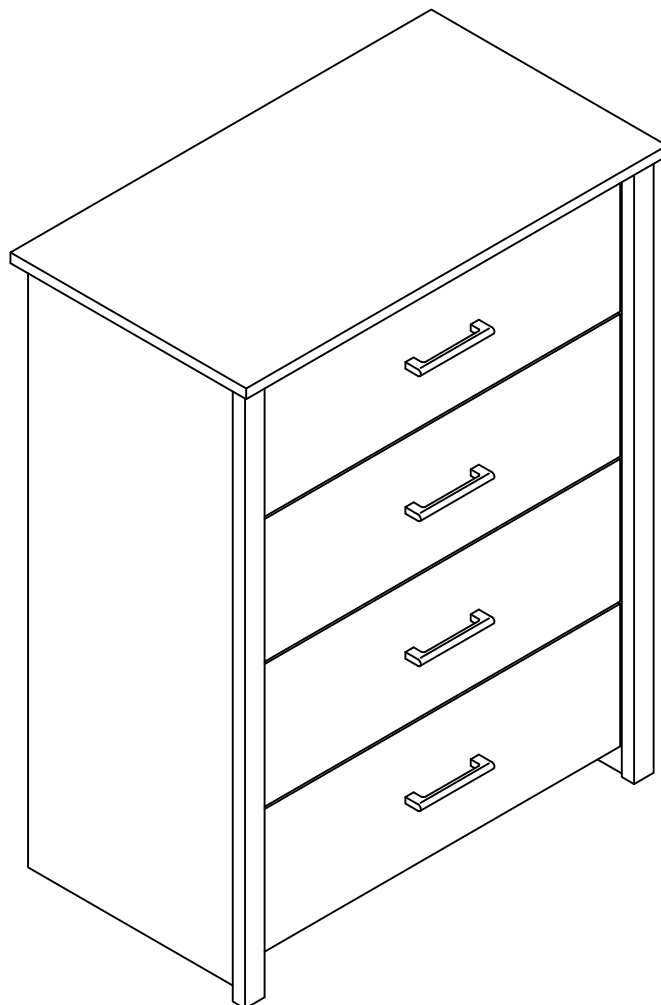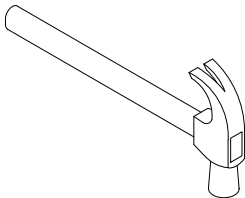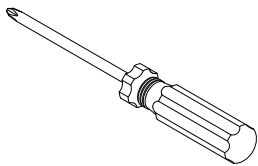

PARTS LIST

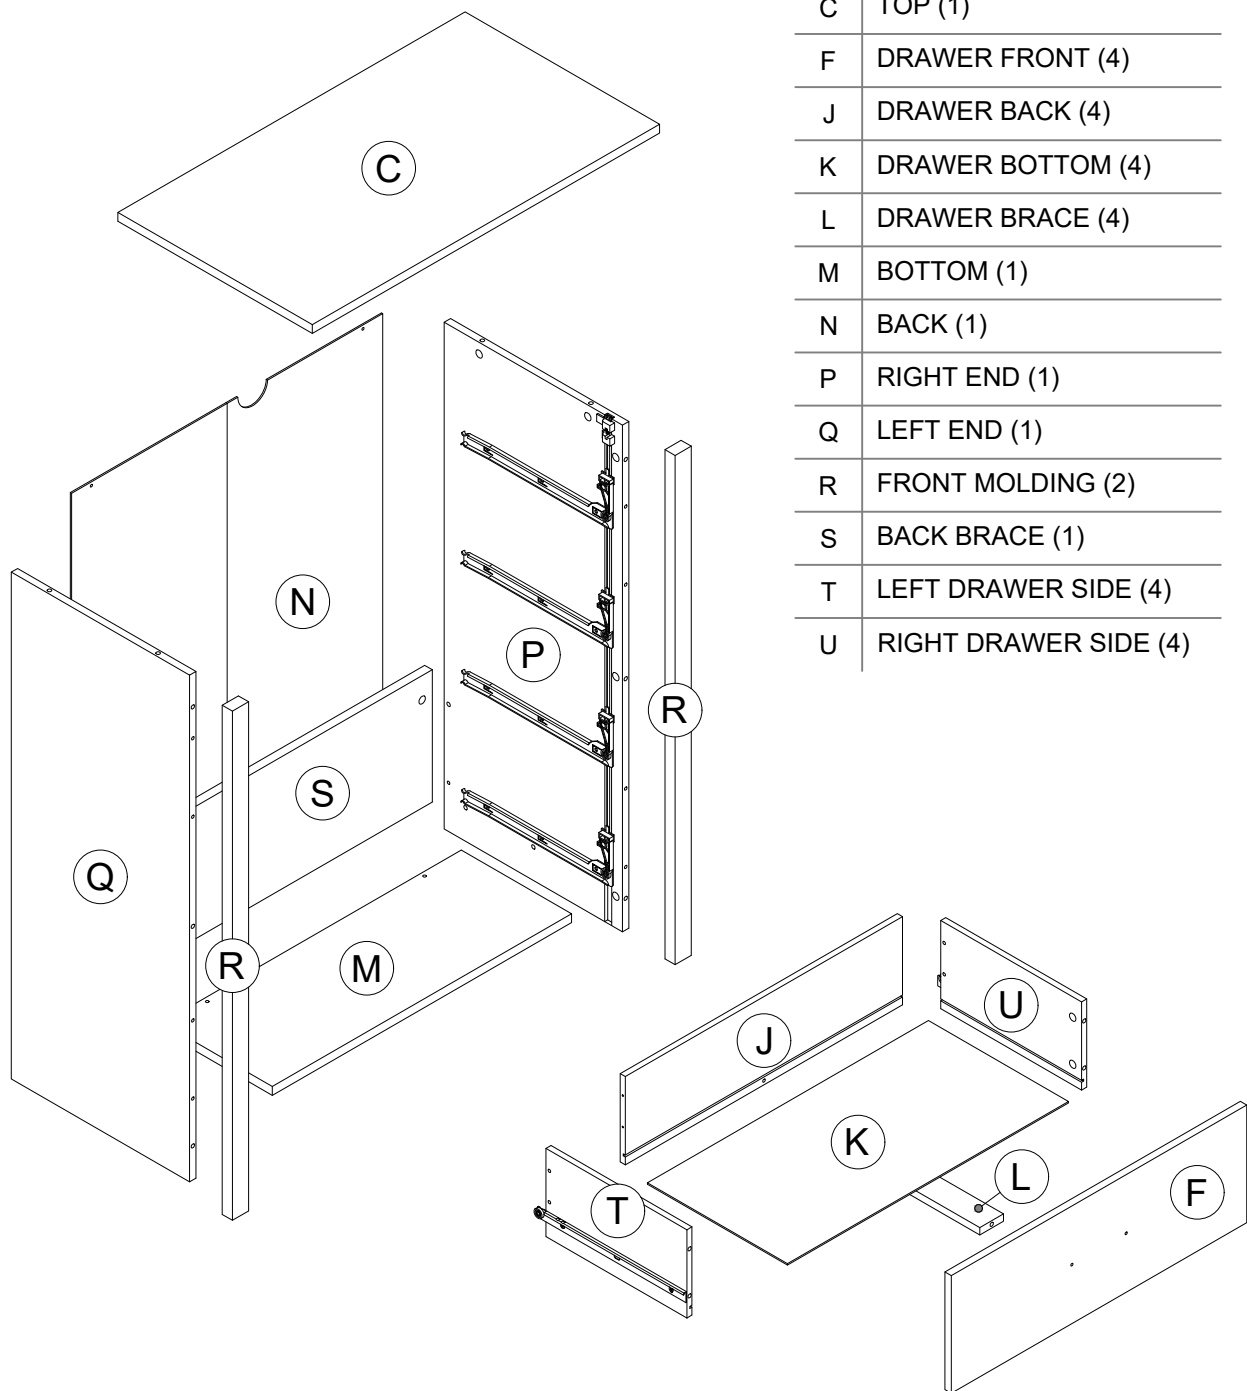


USEFUL HINTS BEFORE YOU START:


1. Read each step carefully before starting.
2. It is important that each step is performed in correct order to avoid difficulties.
3. Identify, sort and count the parts before assembly.
4. Assemble your furniture on packaging cardboard to prevent scratch or damage.
5. Clean the product with mild cleanser using soft damp cloth. Do not use harsh or abrasive cleanser.
6. Using incompatible hardware might cause damage to product.

HARDWARE LIST


- 1 BLACK LARGE
HIDDEN CAM - 20

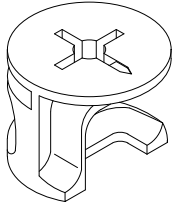


- 2 SMALL HIDDEN
CAM - 16

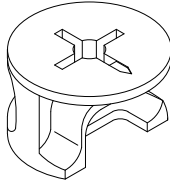


- 3 CAM DOWEL - 30

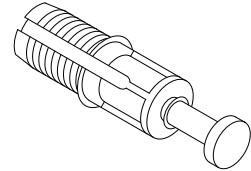


- 4 CAM SCREW - 6

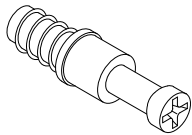


- 5 WOOD
DOWEL - 10

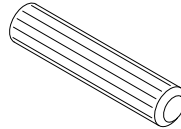


- 6 PULL - 4

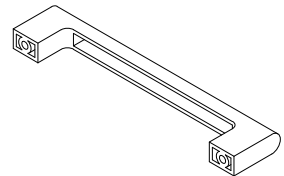


- 7 1-1/2" FLAT
HEAD SCREW - 22



- 8 3/4" MACHINE
SCREW - 8




- 9 1/2" PAN
HEAD SCREW - 4



- 10 NAIL - 20




- 96 FURNITURE TIPPING
RESTRAINT KIT - 1

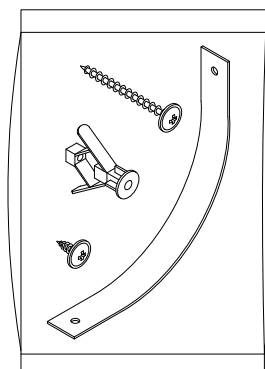


Step 1


The arrow in the HIDDEN CAM must point toward the hole in the edge of the board.

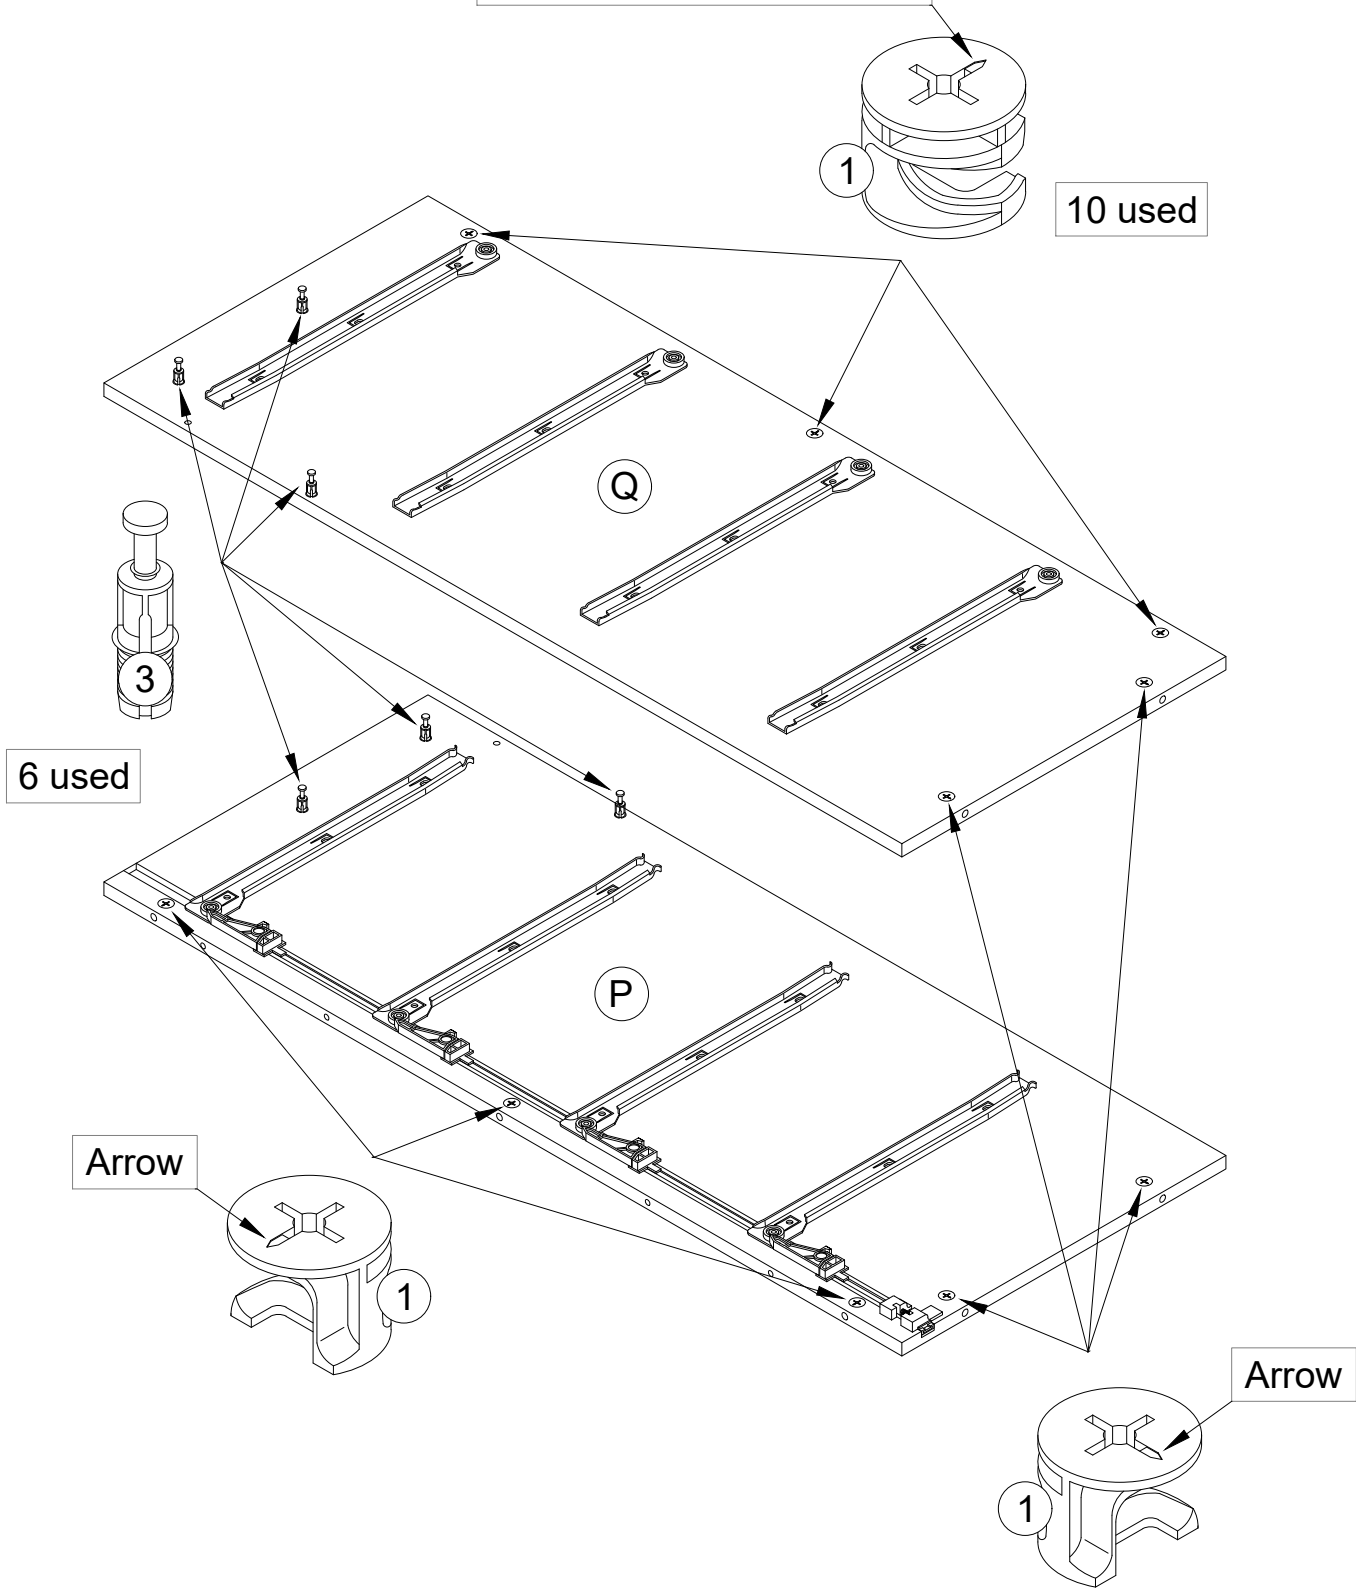


Step 2

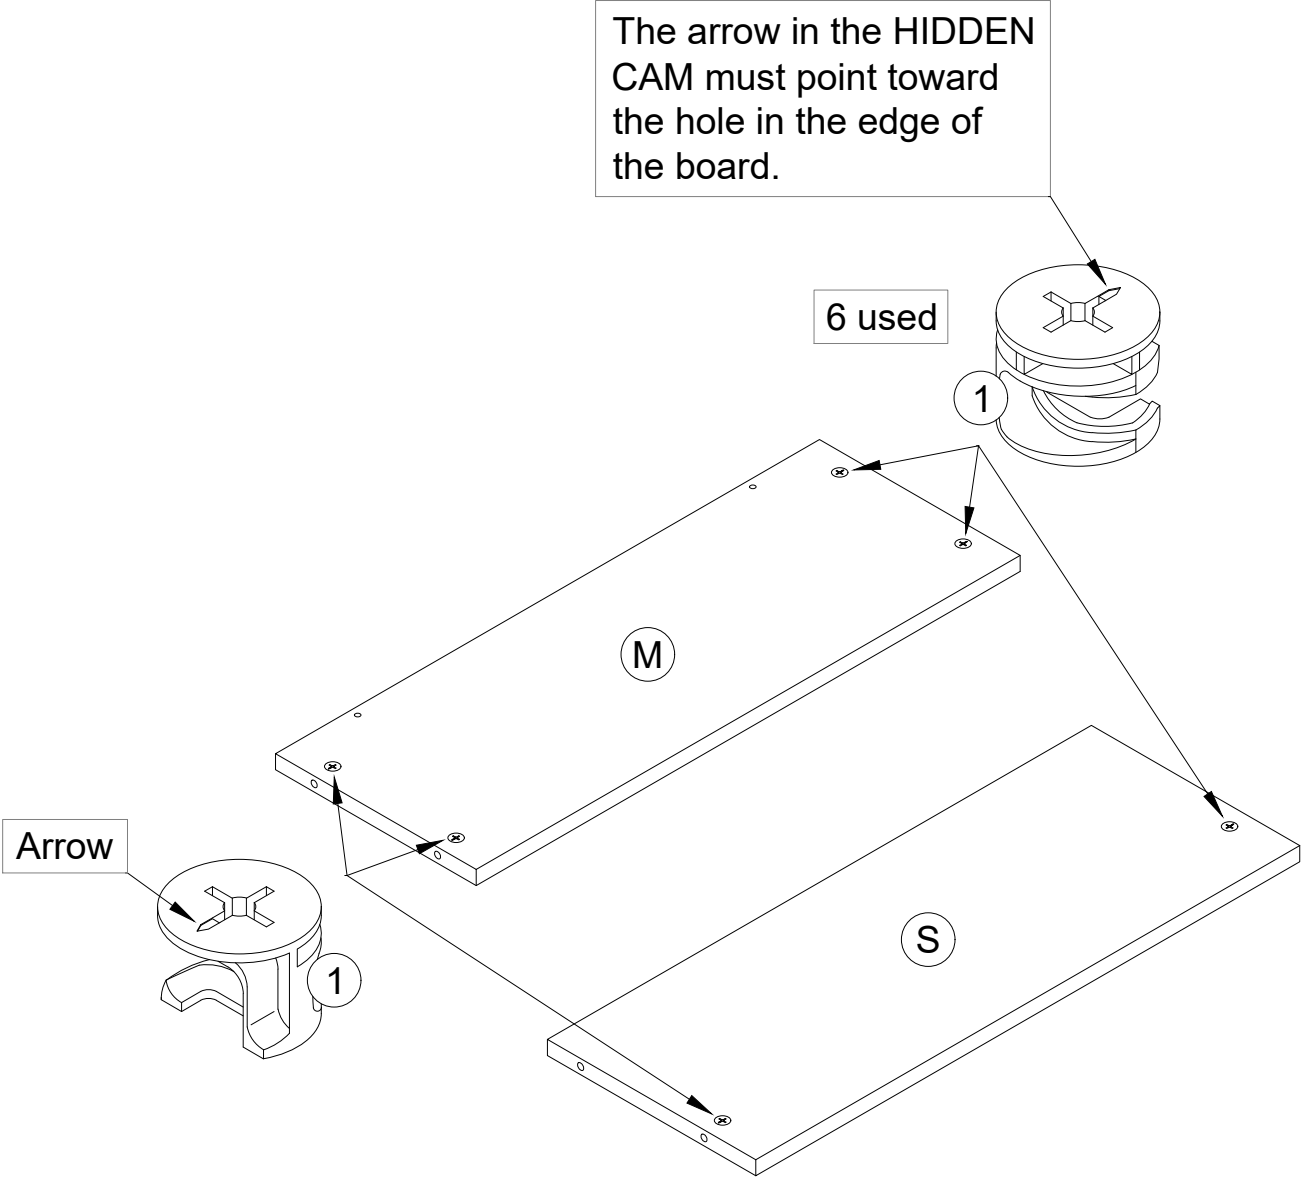


Step 3

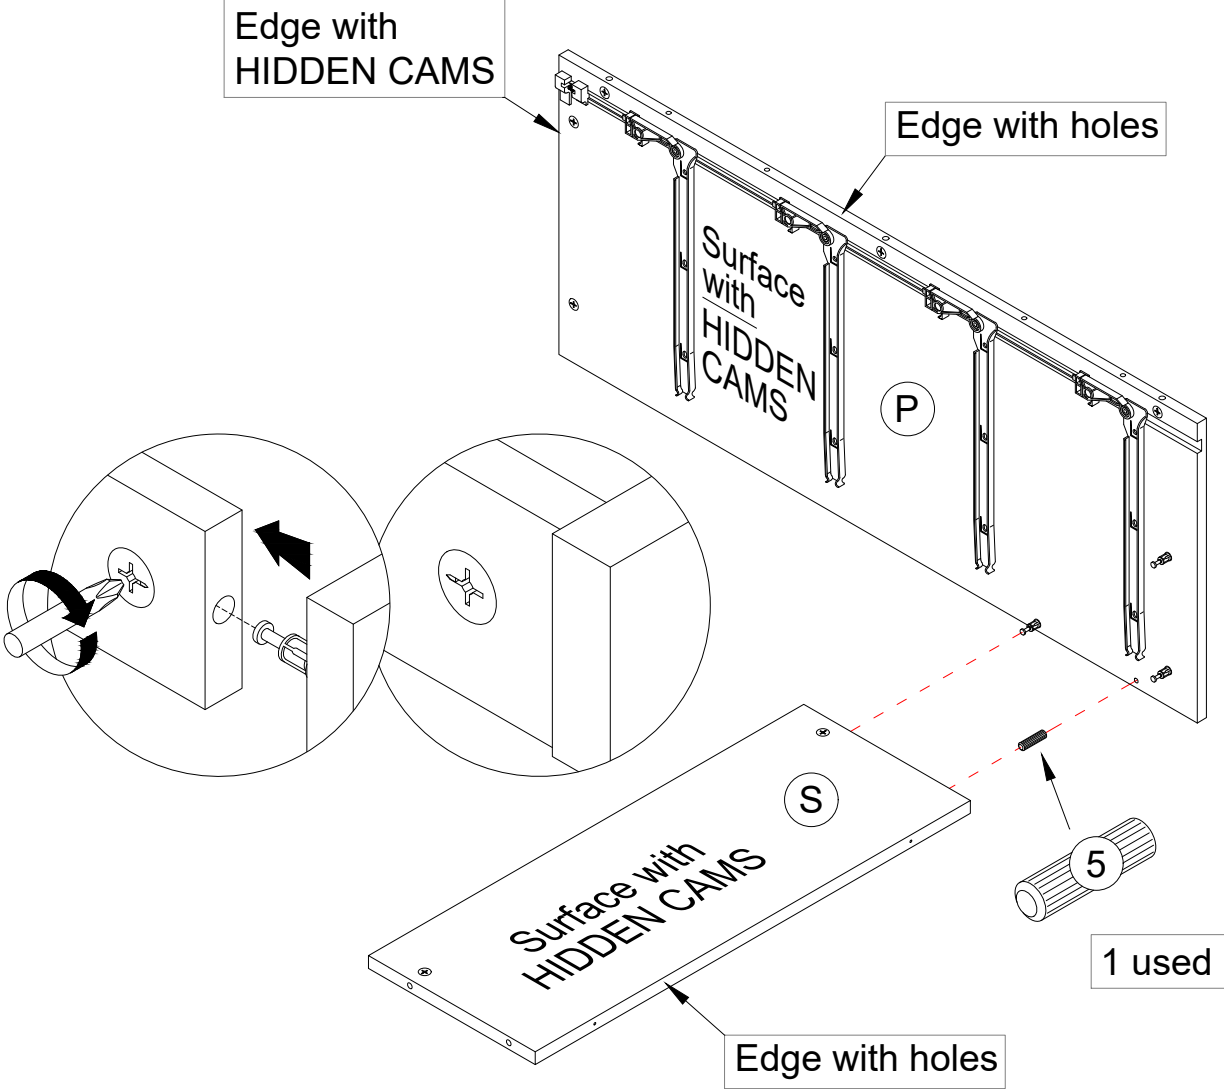


Step 4

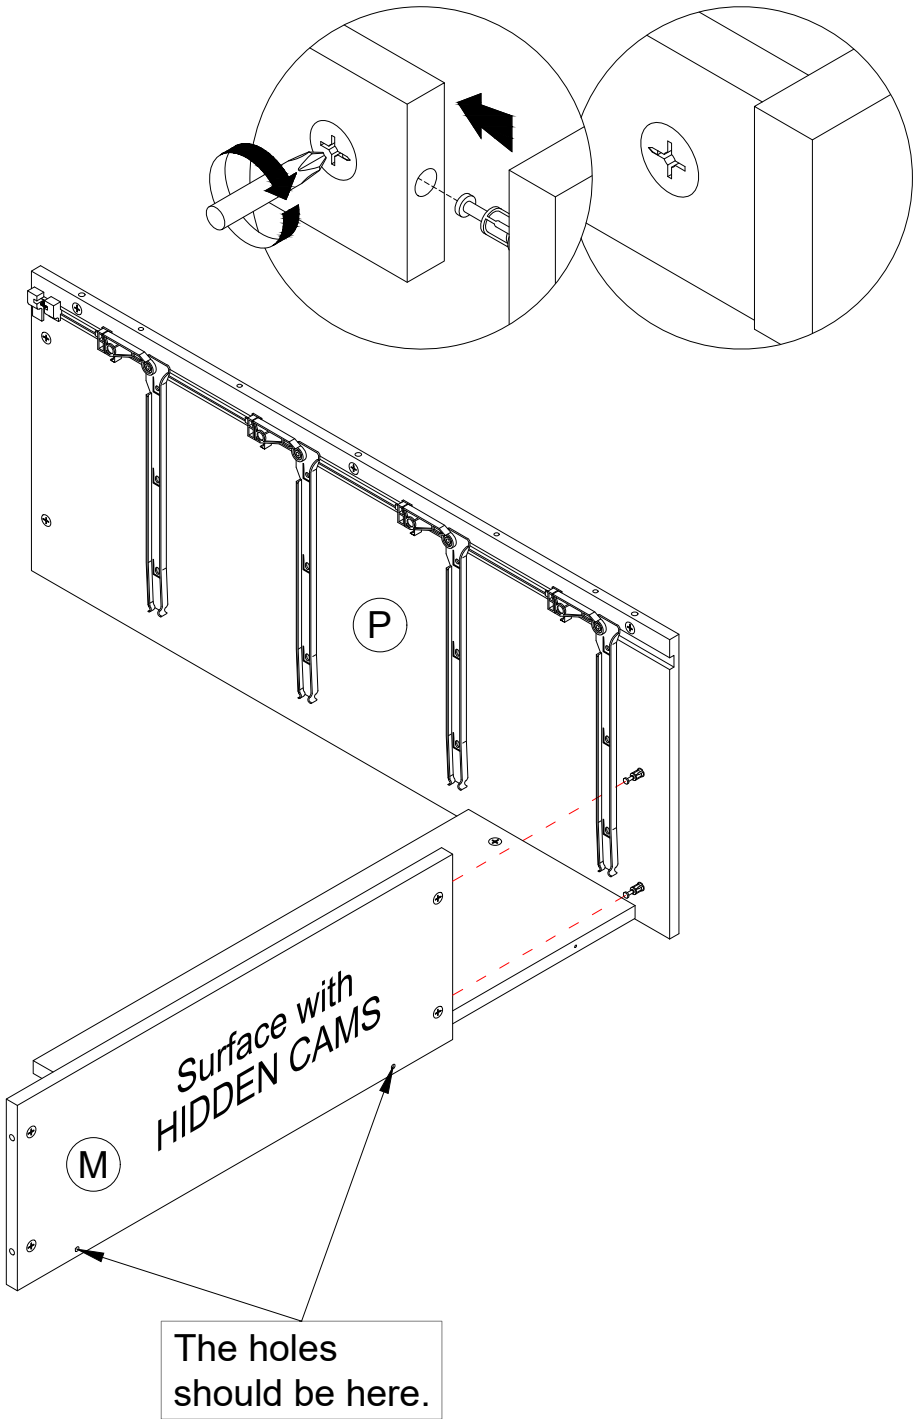

Step 5

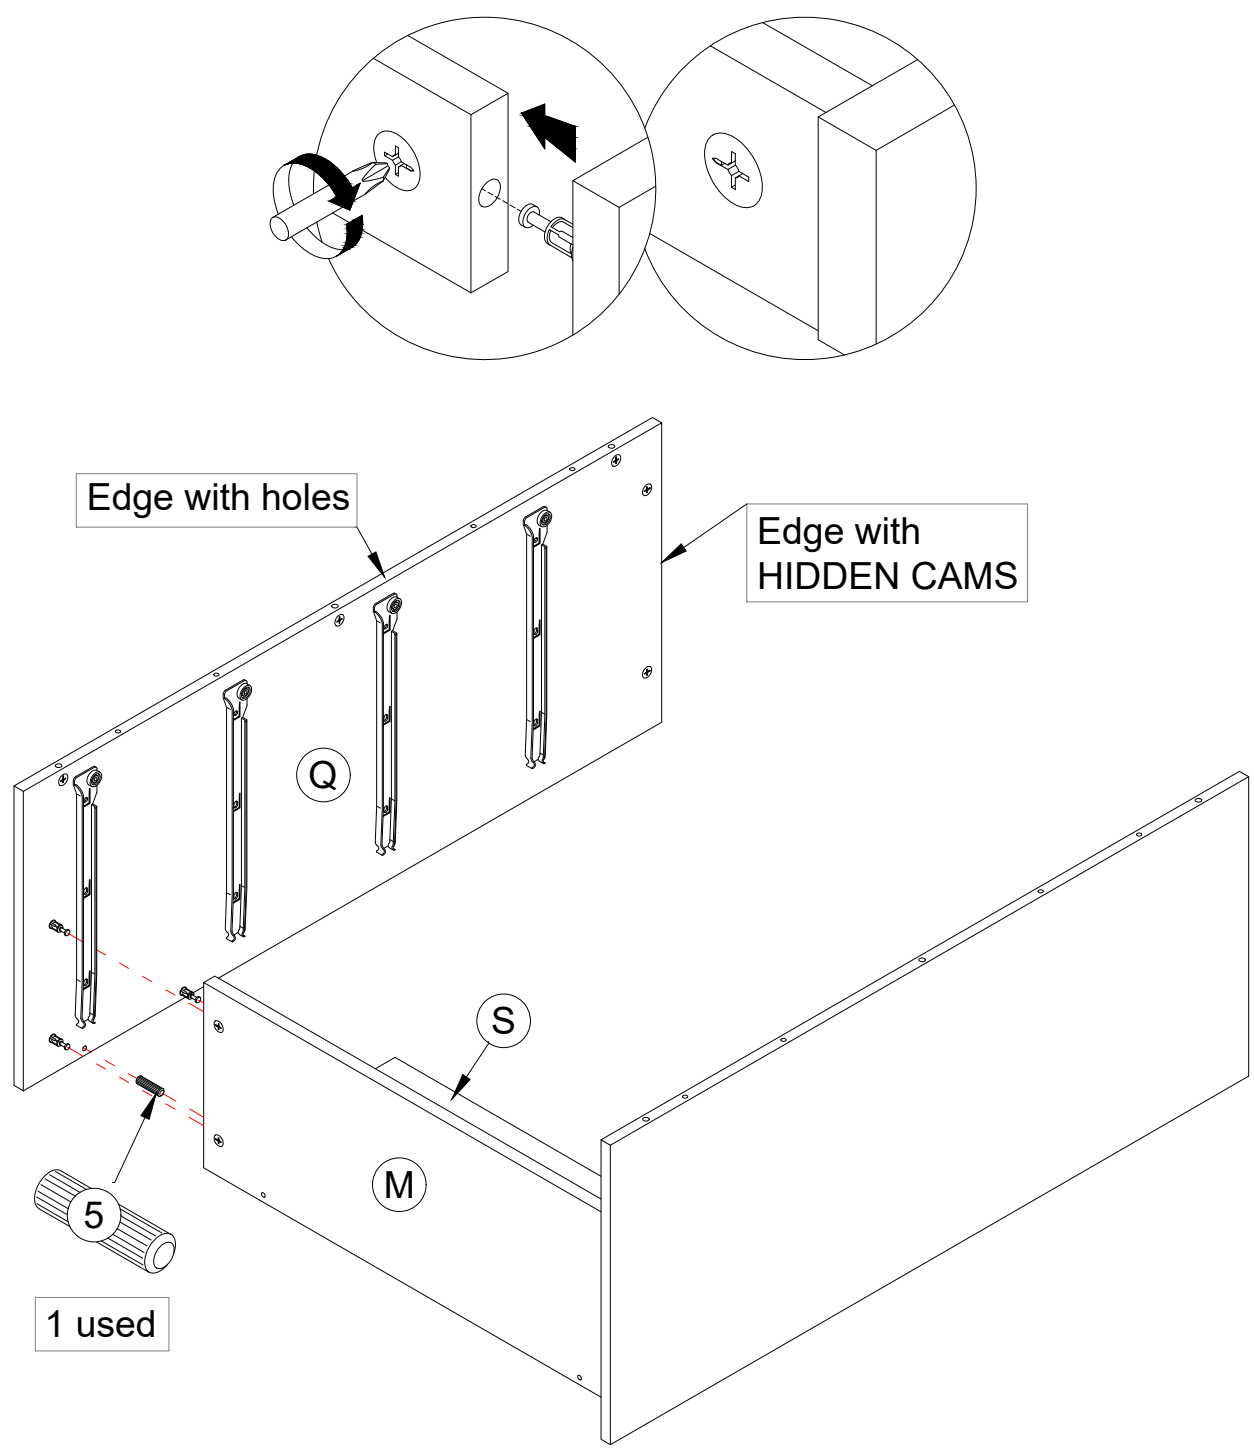


Step 6

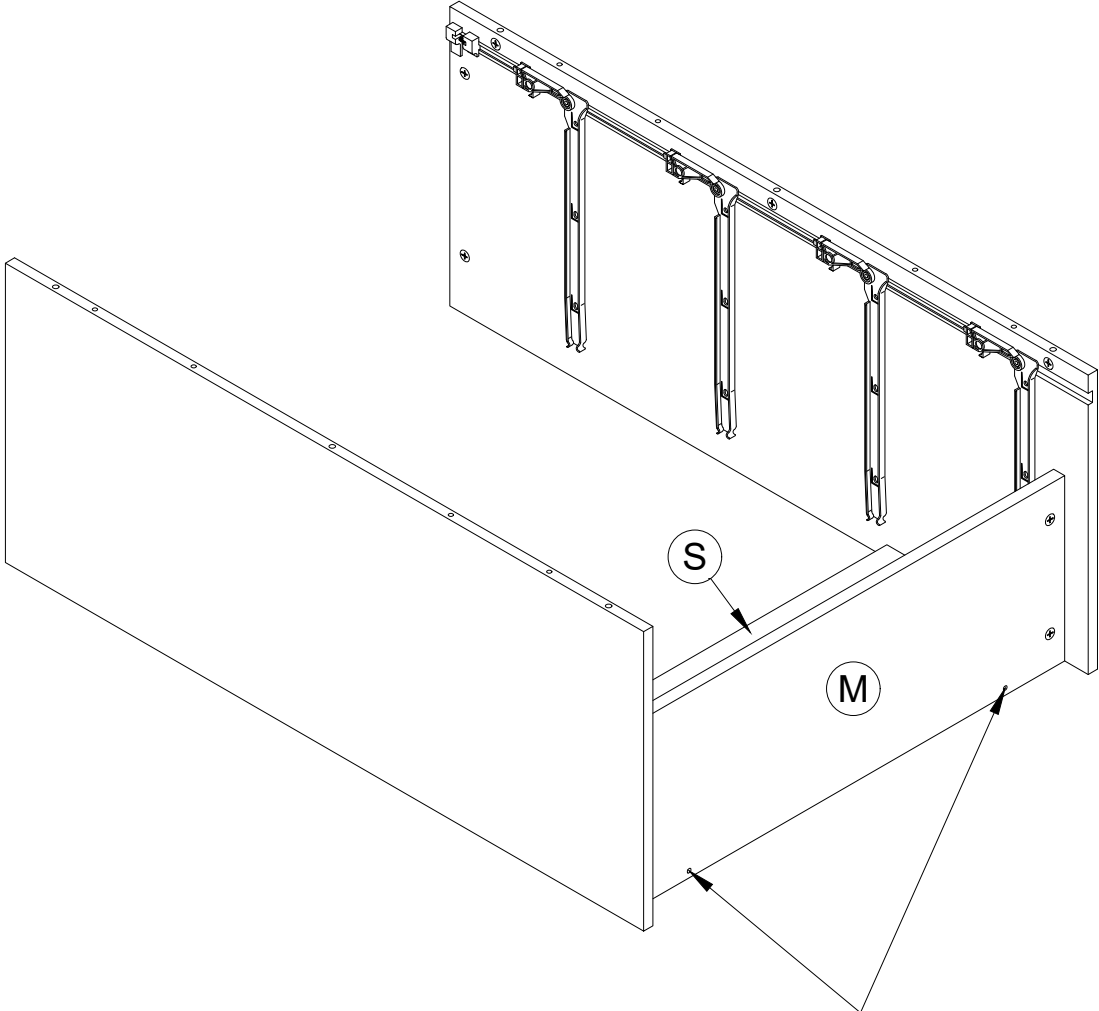




1-1/2" FLAT HEAD SCREW
(2 used in this step)


Step 7

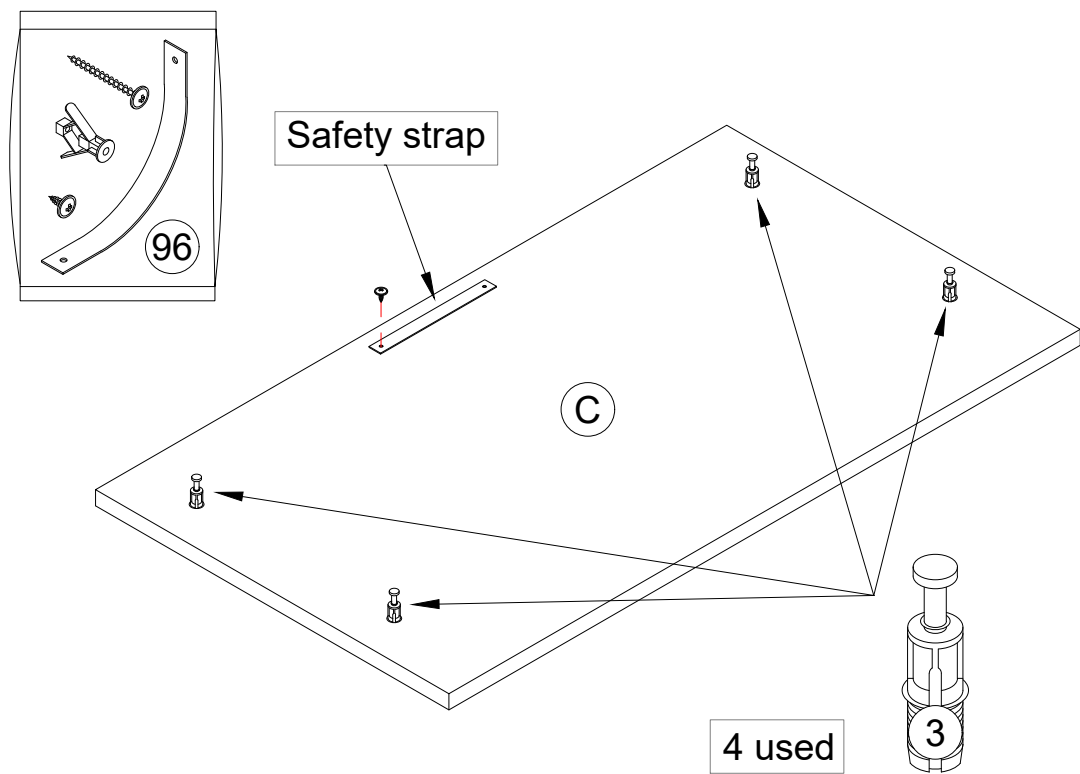


Step 8

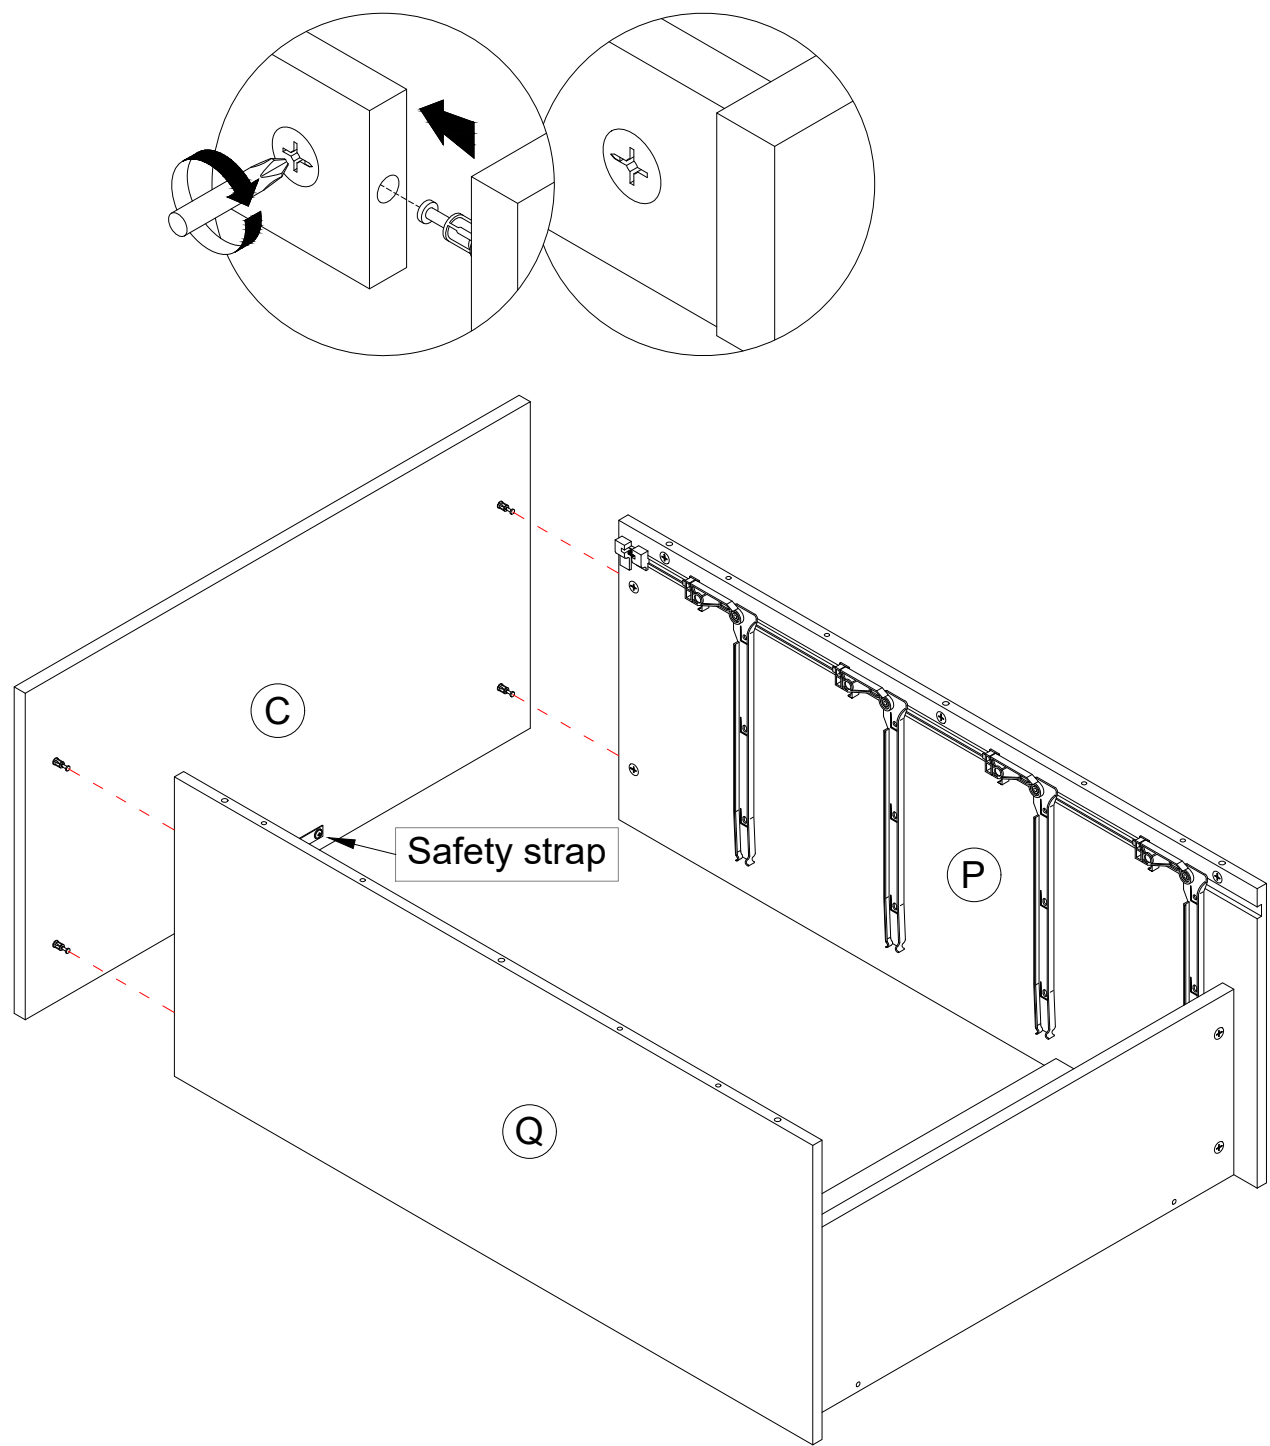


Step 9

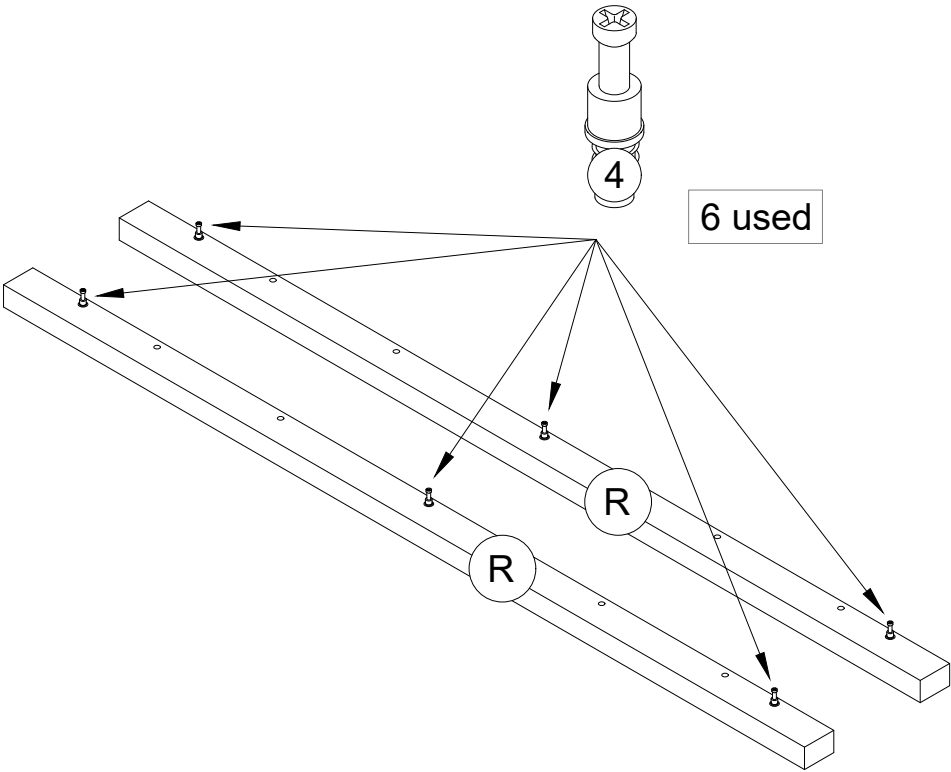

Step 10

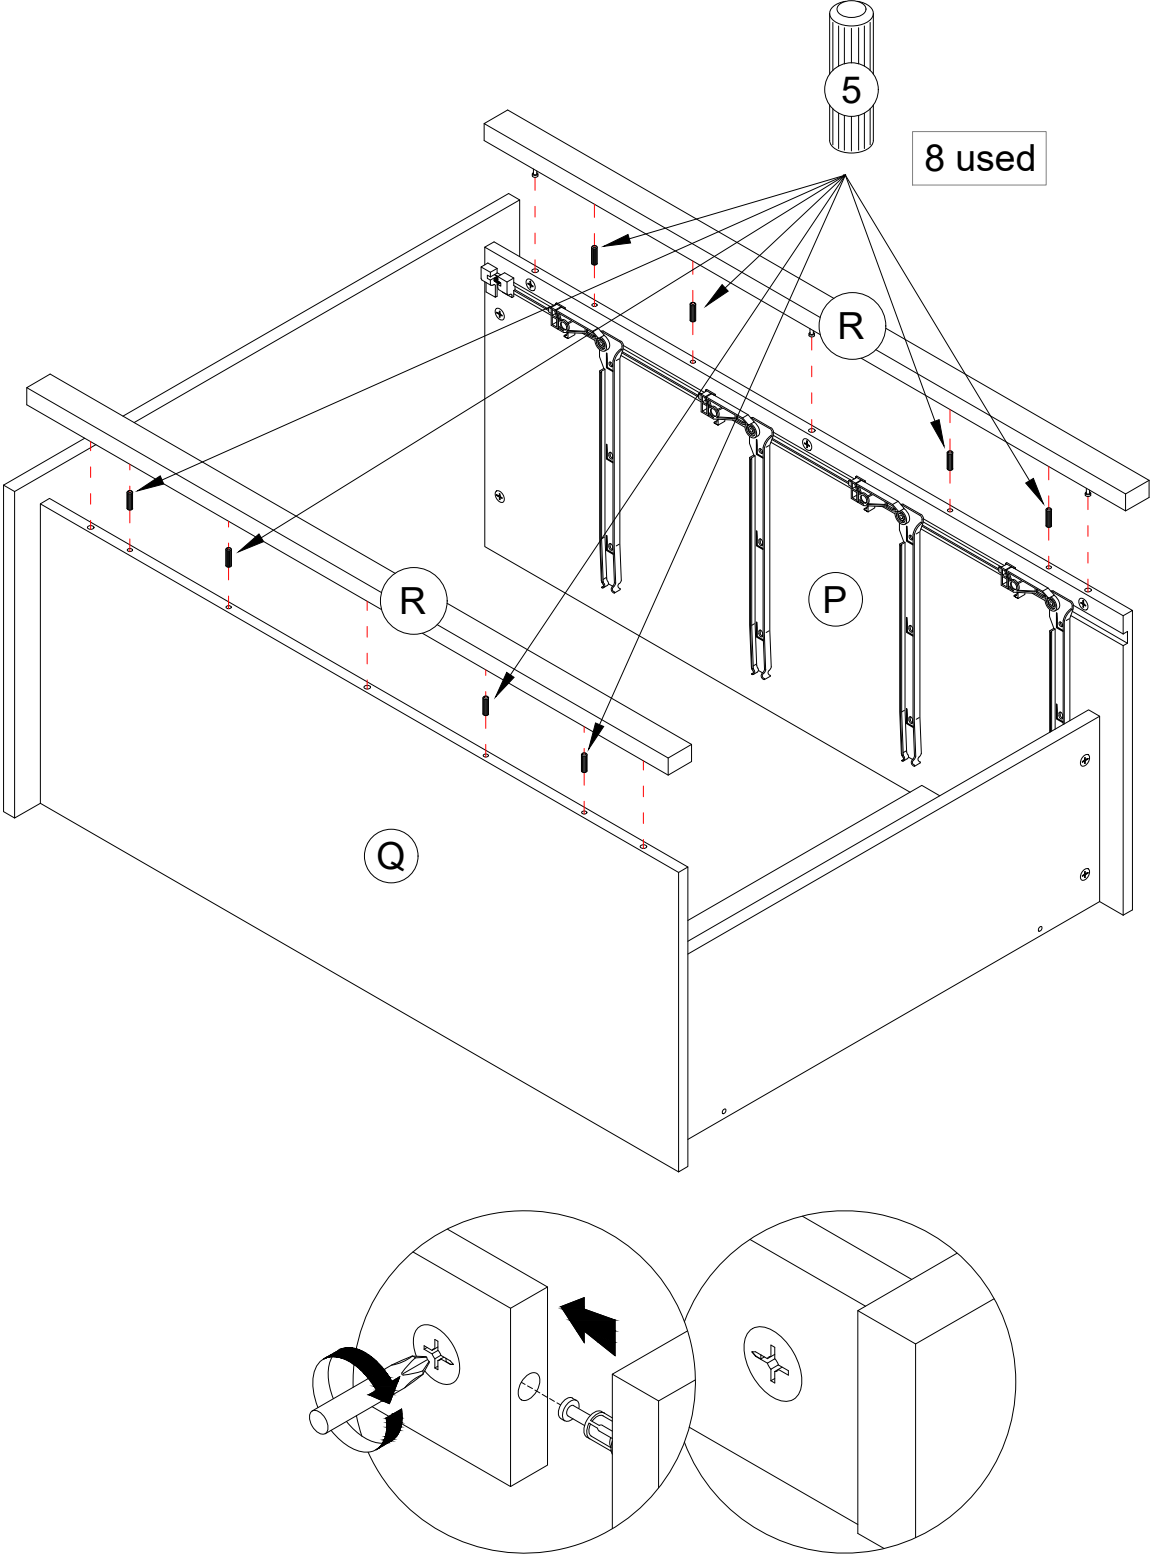

Step 11

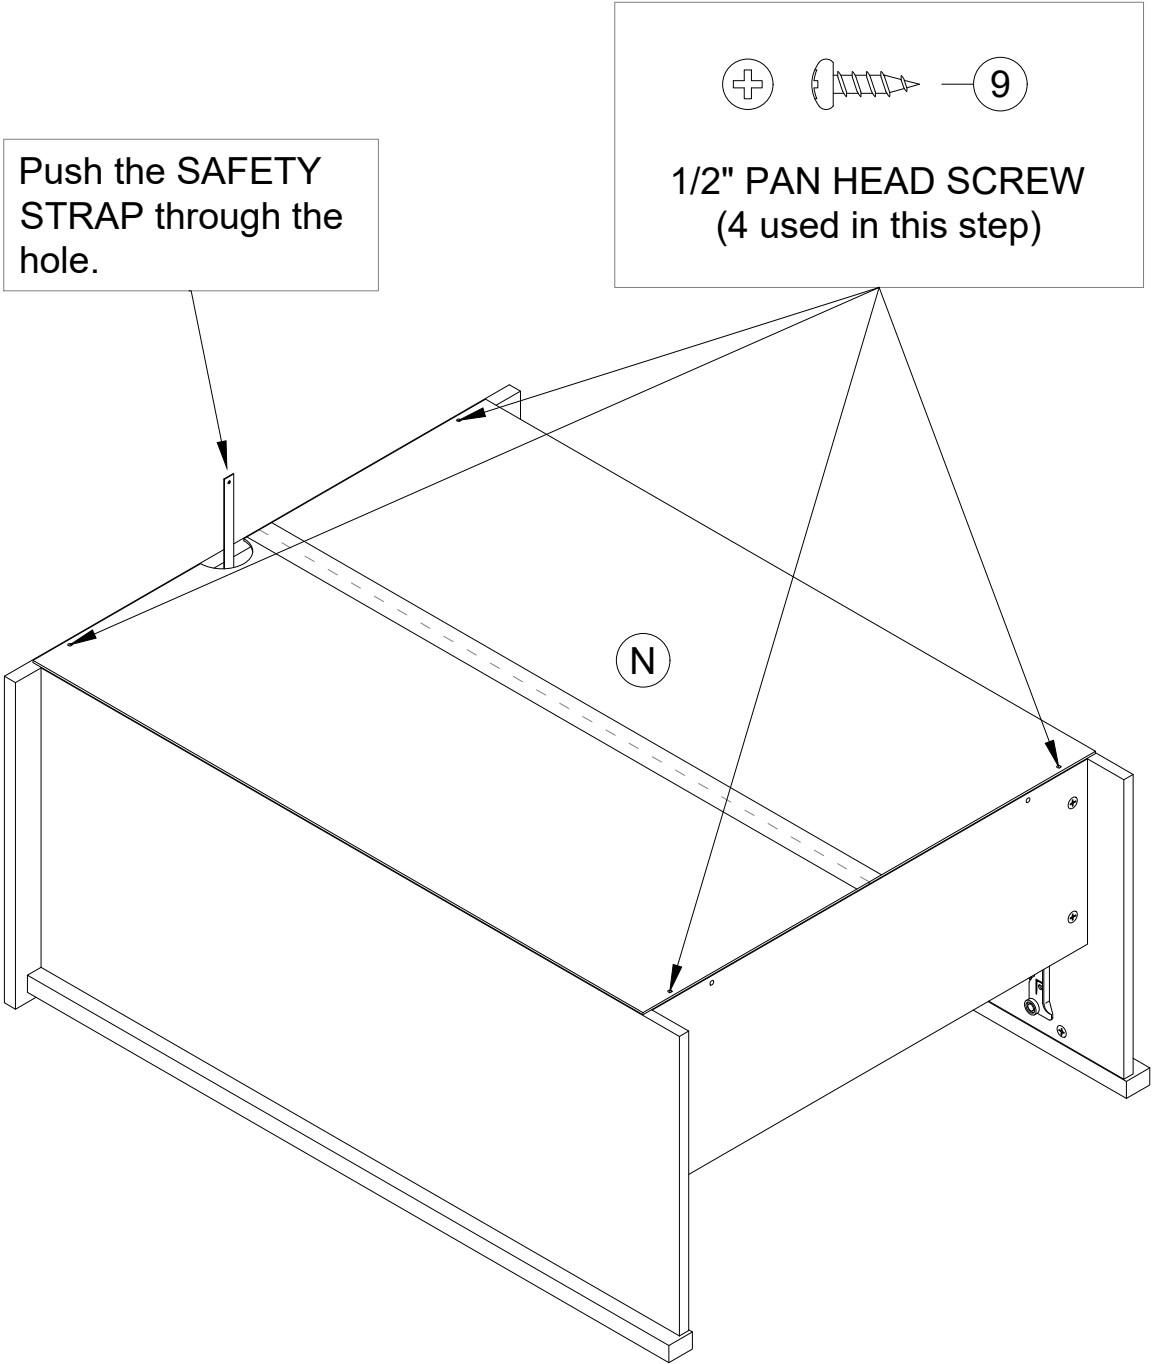


Step 12

Push the SAFETY STRAP through the hole.




NAIL
(20 used in this step)

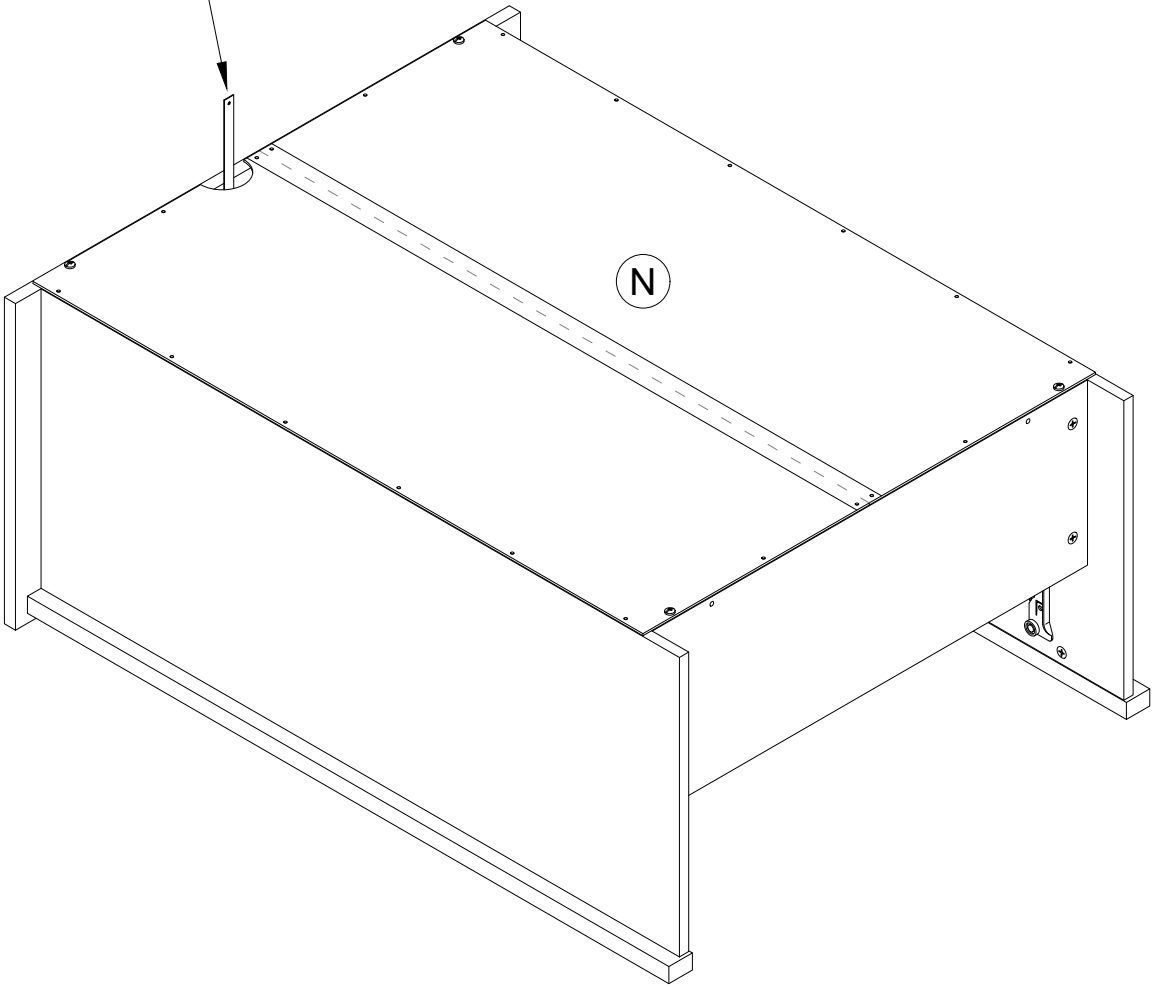


Step 13

Mark and drill
a 1/8" hole into
the wall stud.


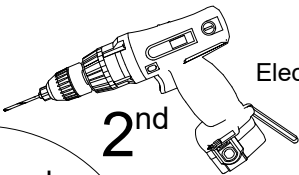


Electric drill with 1/8" bit


2nd

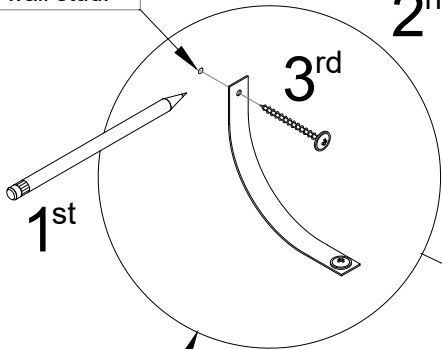


1st

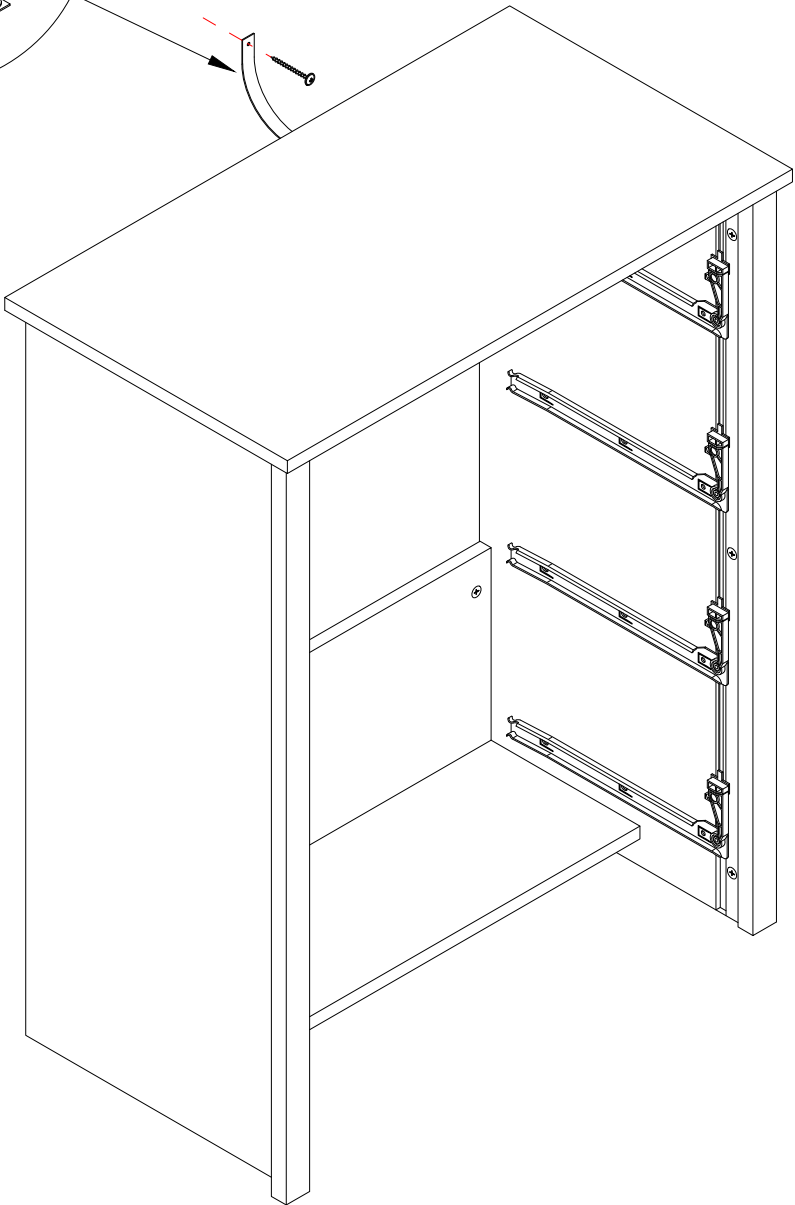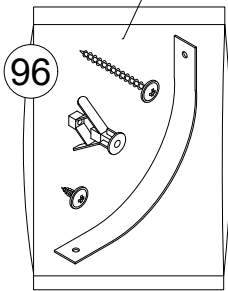


Step 14

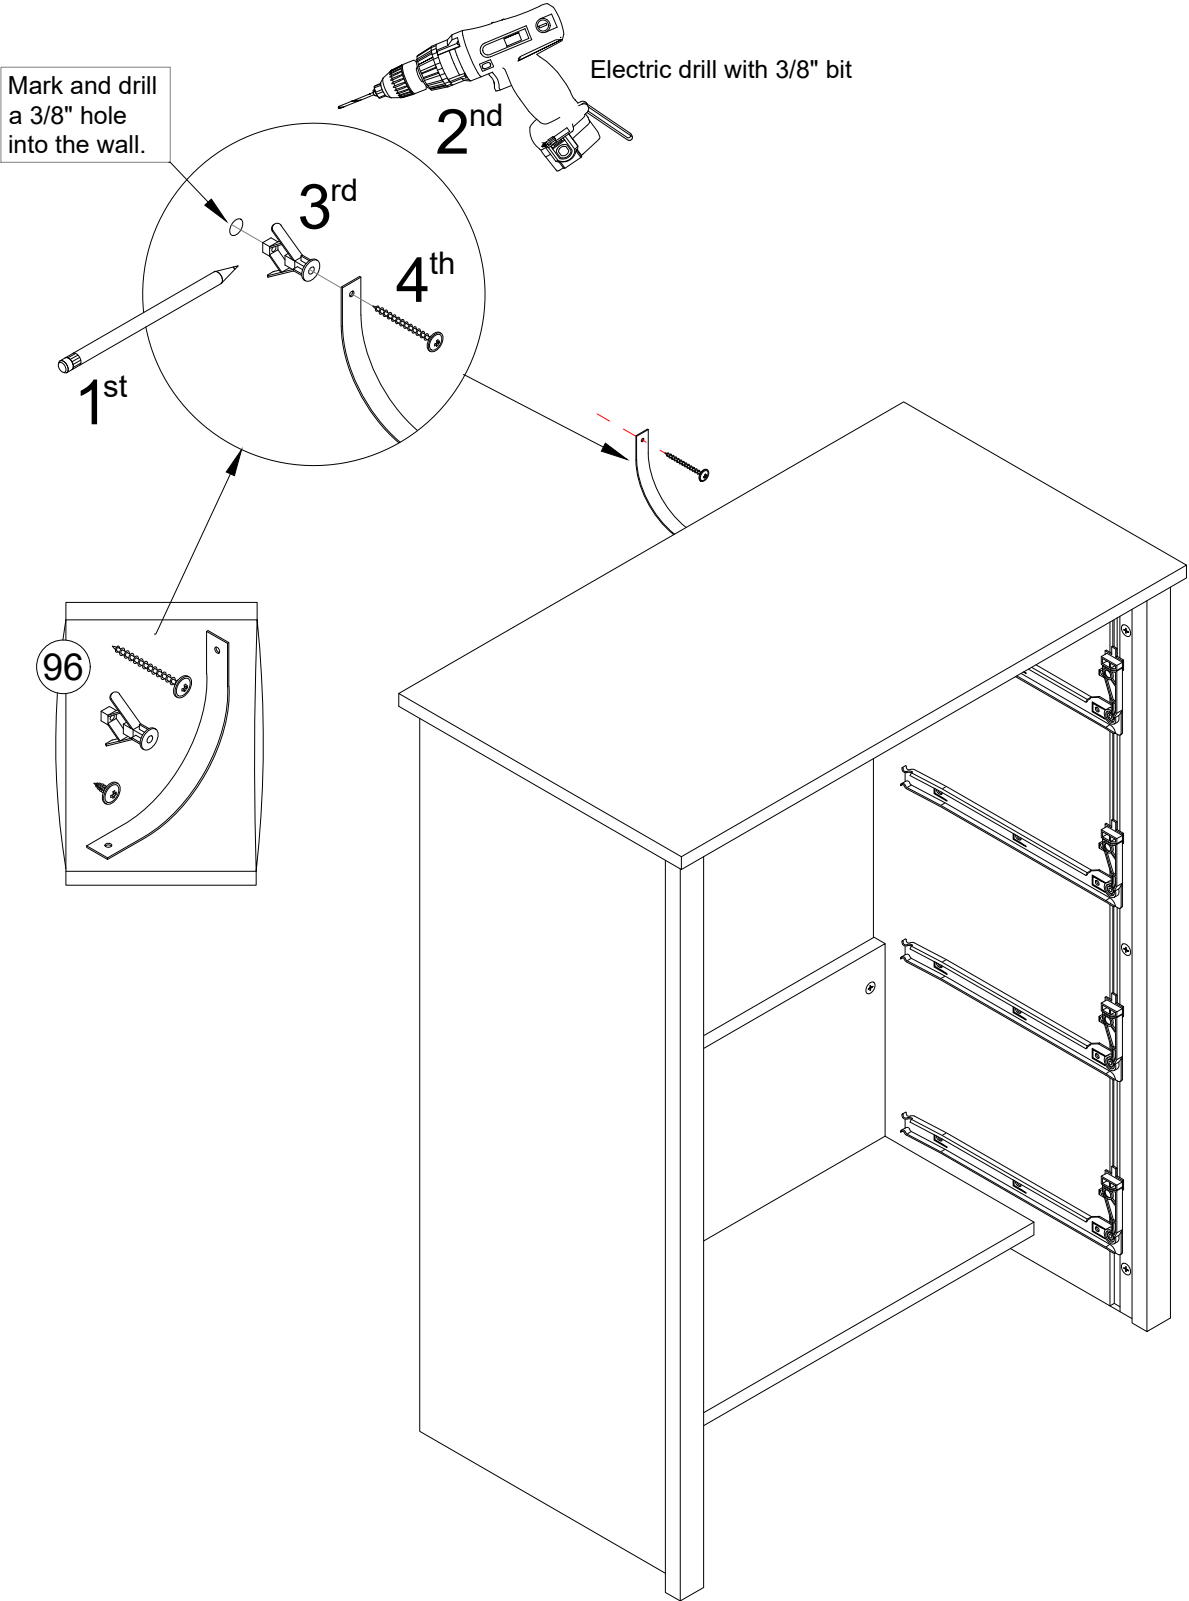


Step 15

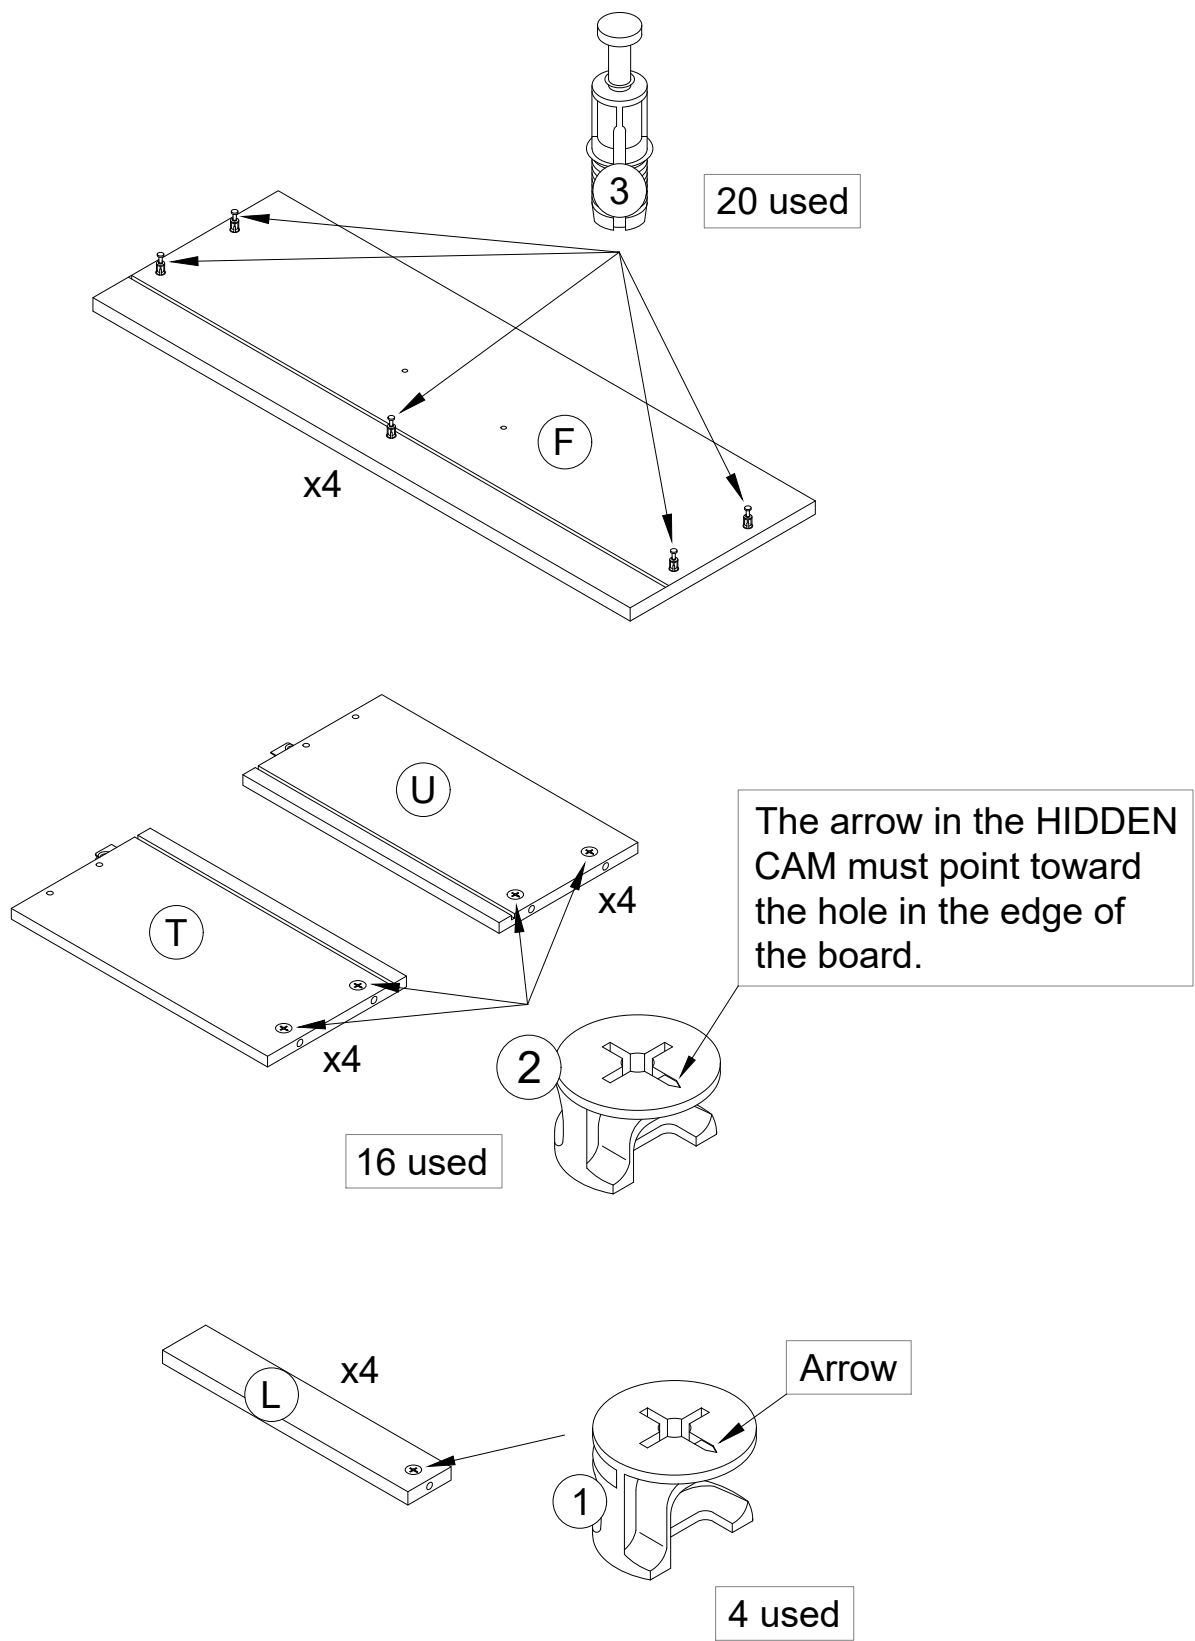


Step 16

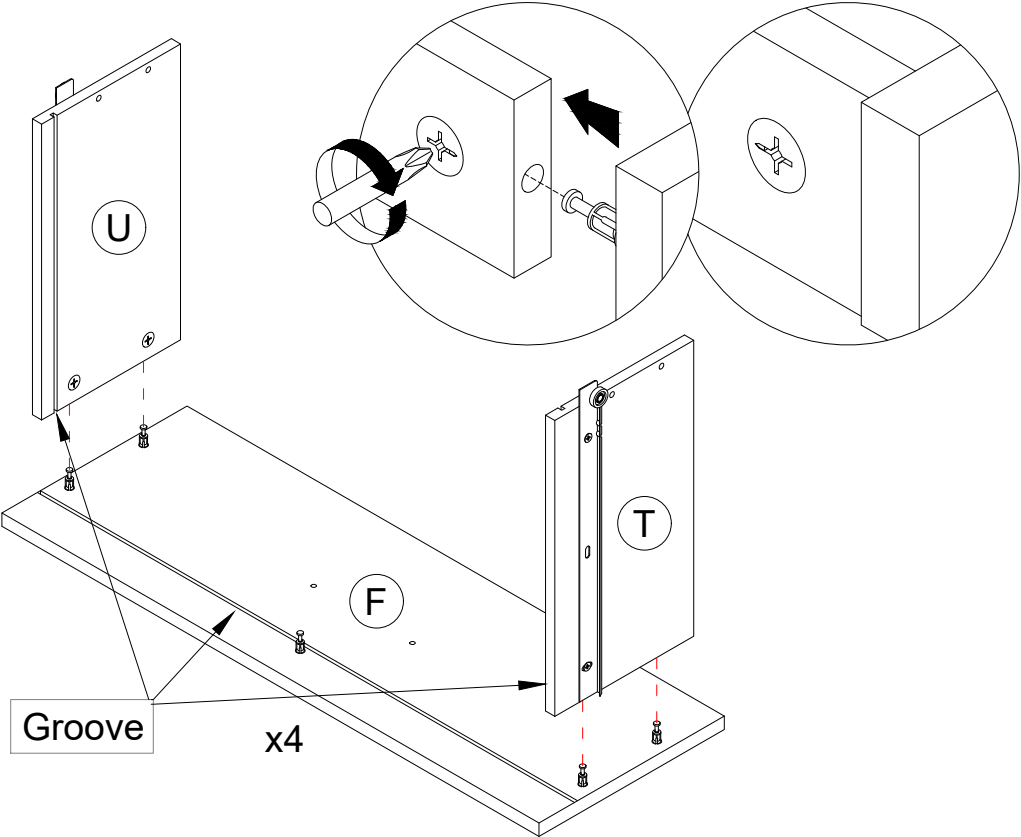


Step 17

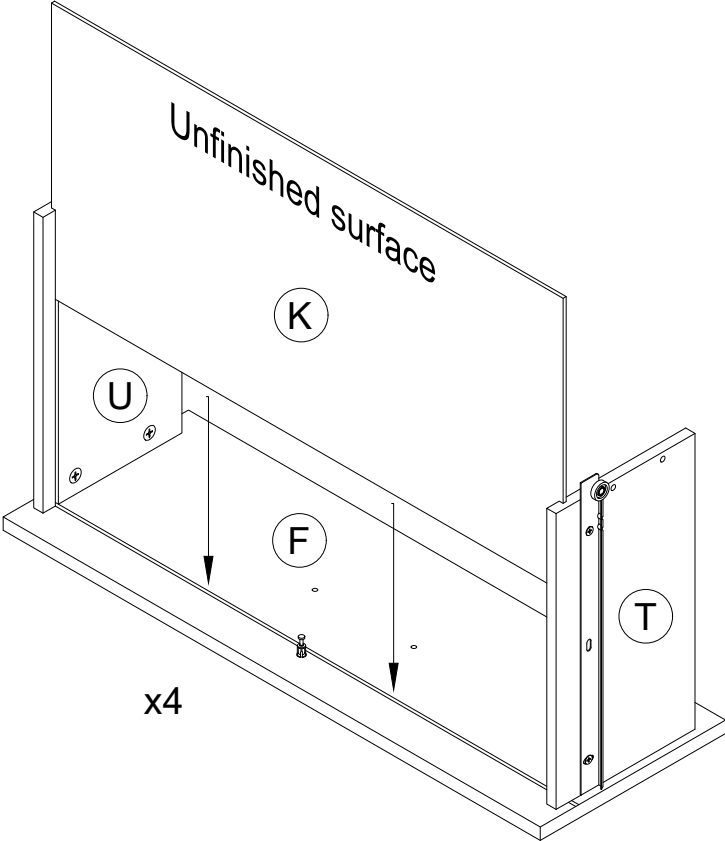


Step 18

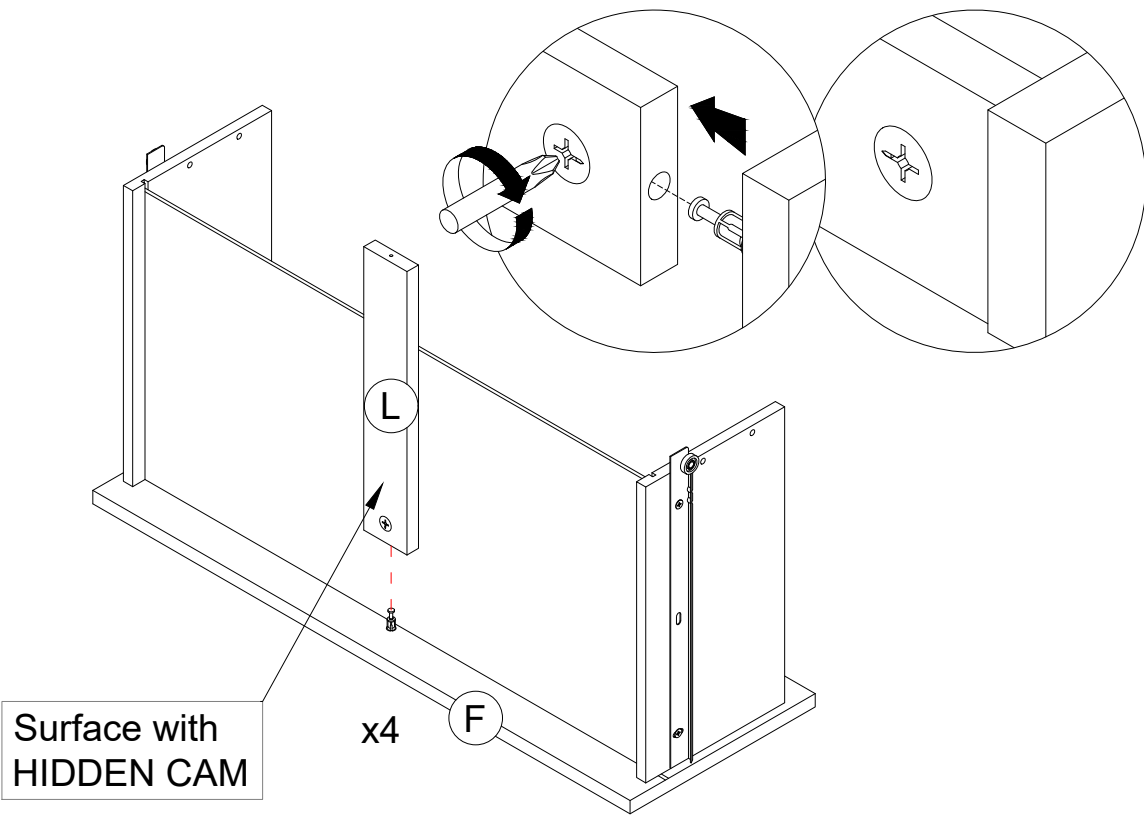


Step 19

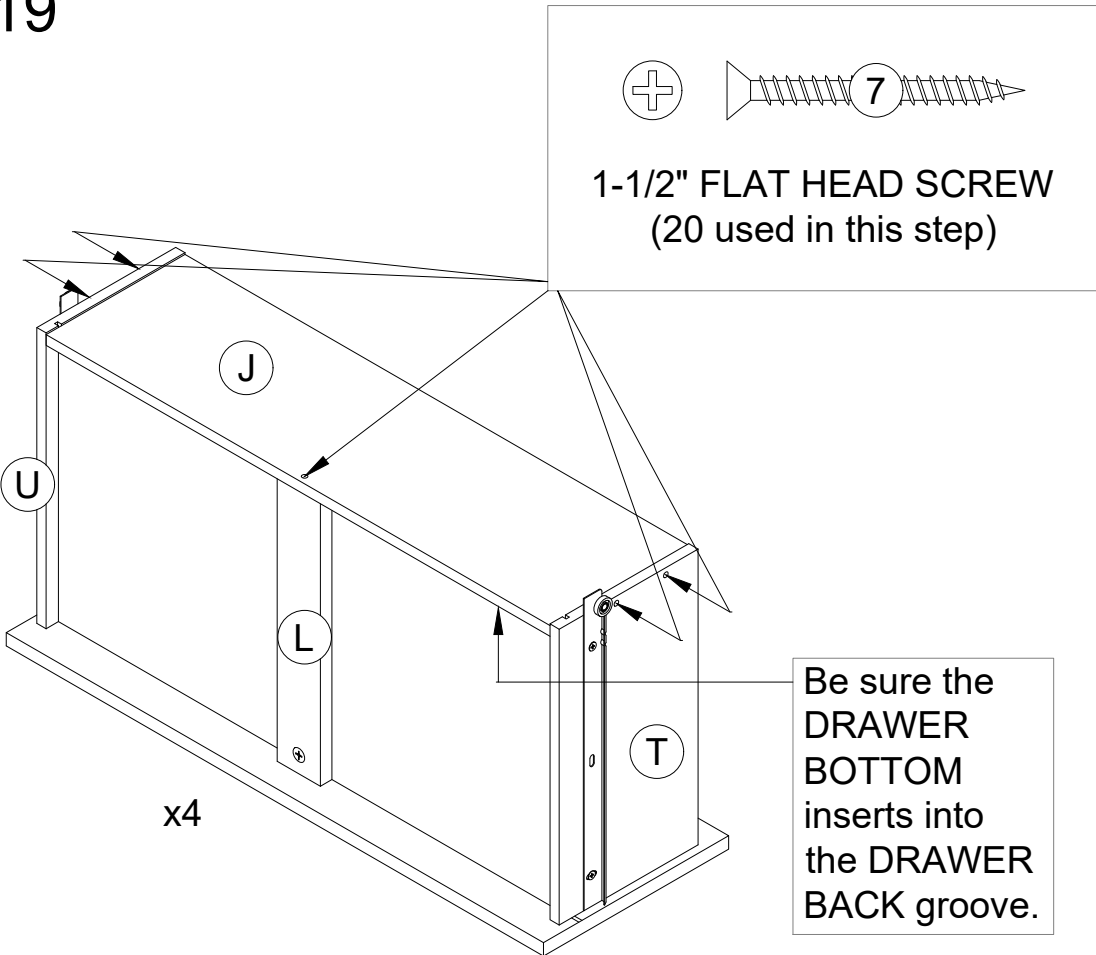

Step 20

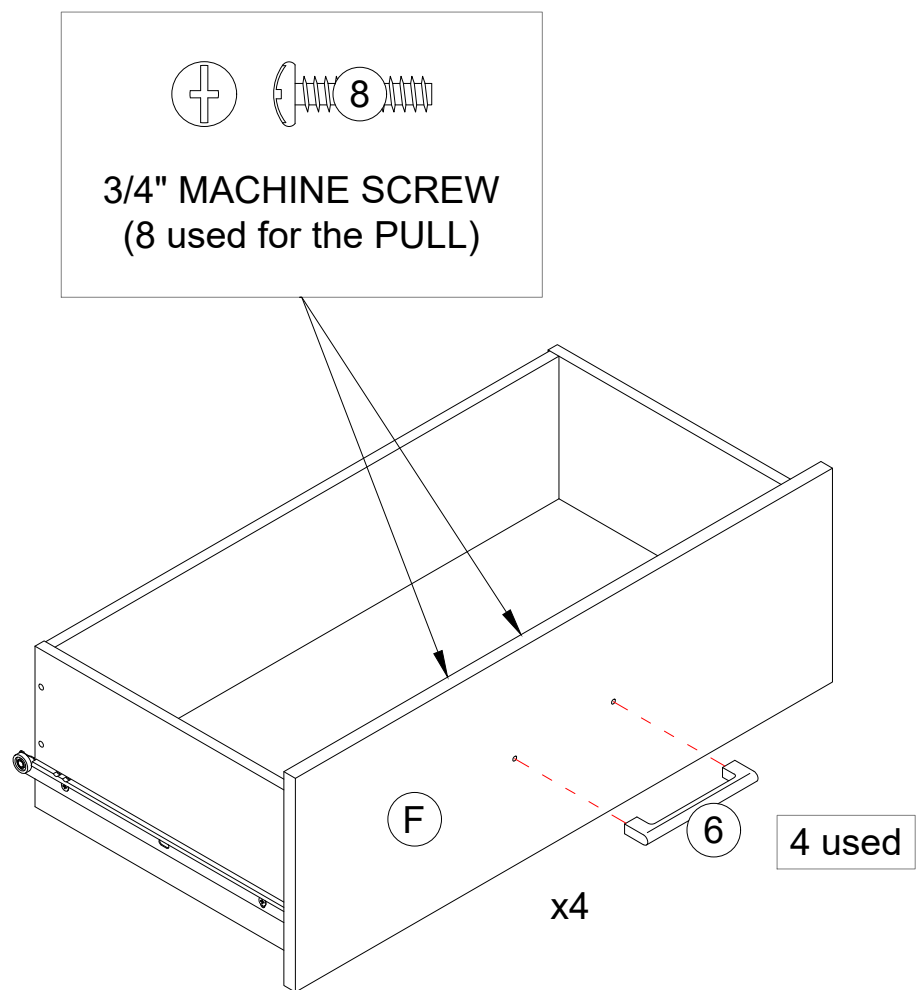


Step 21

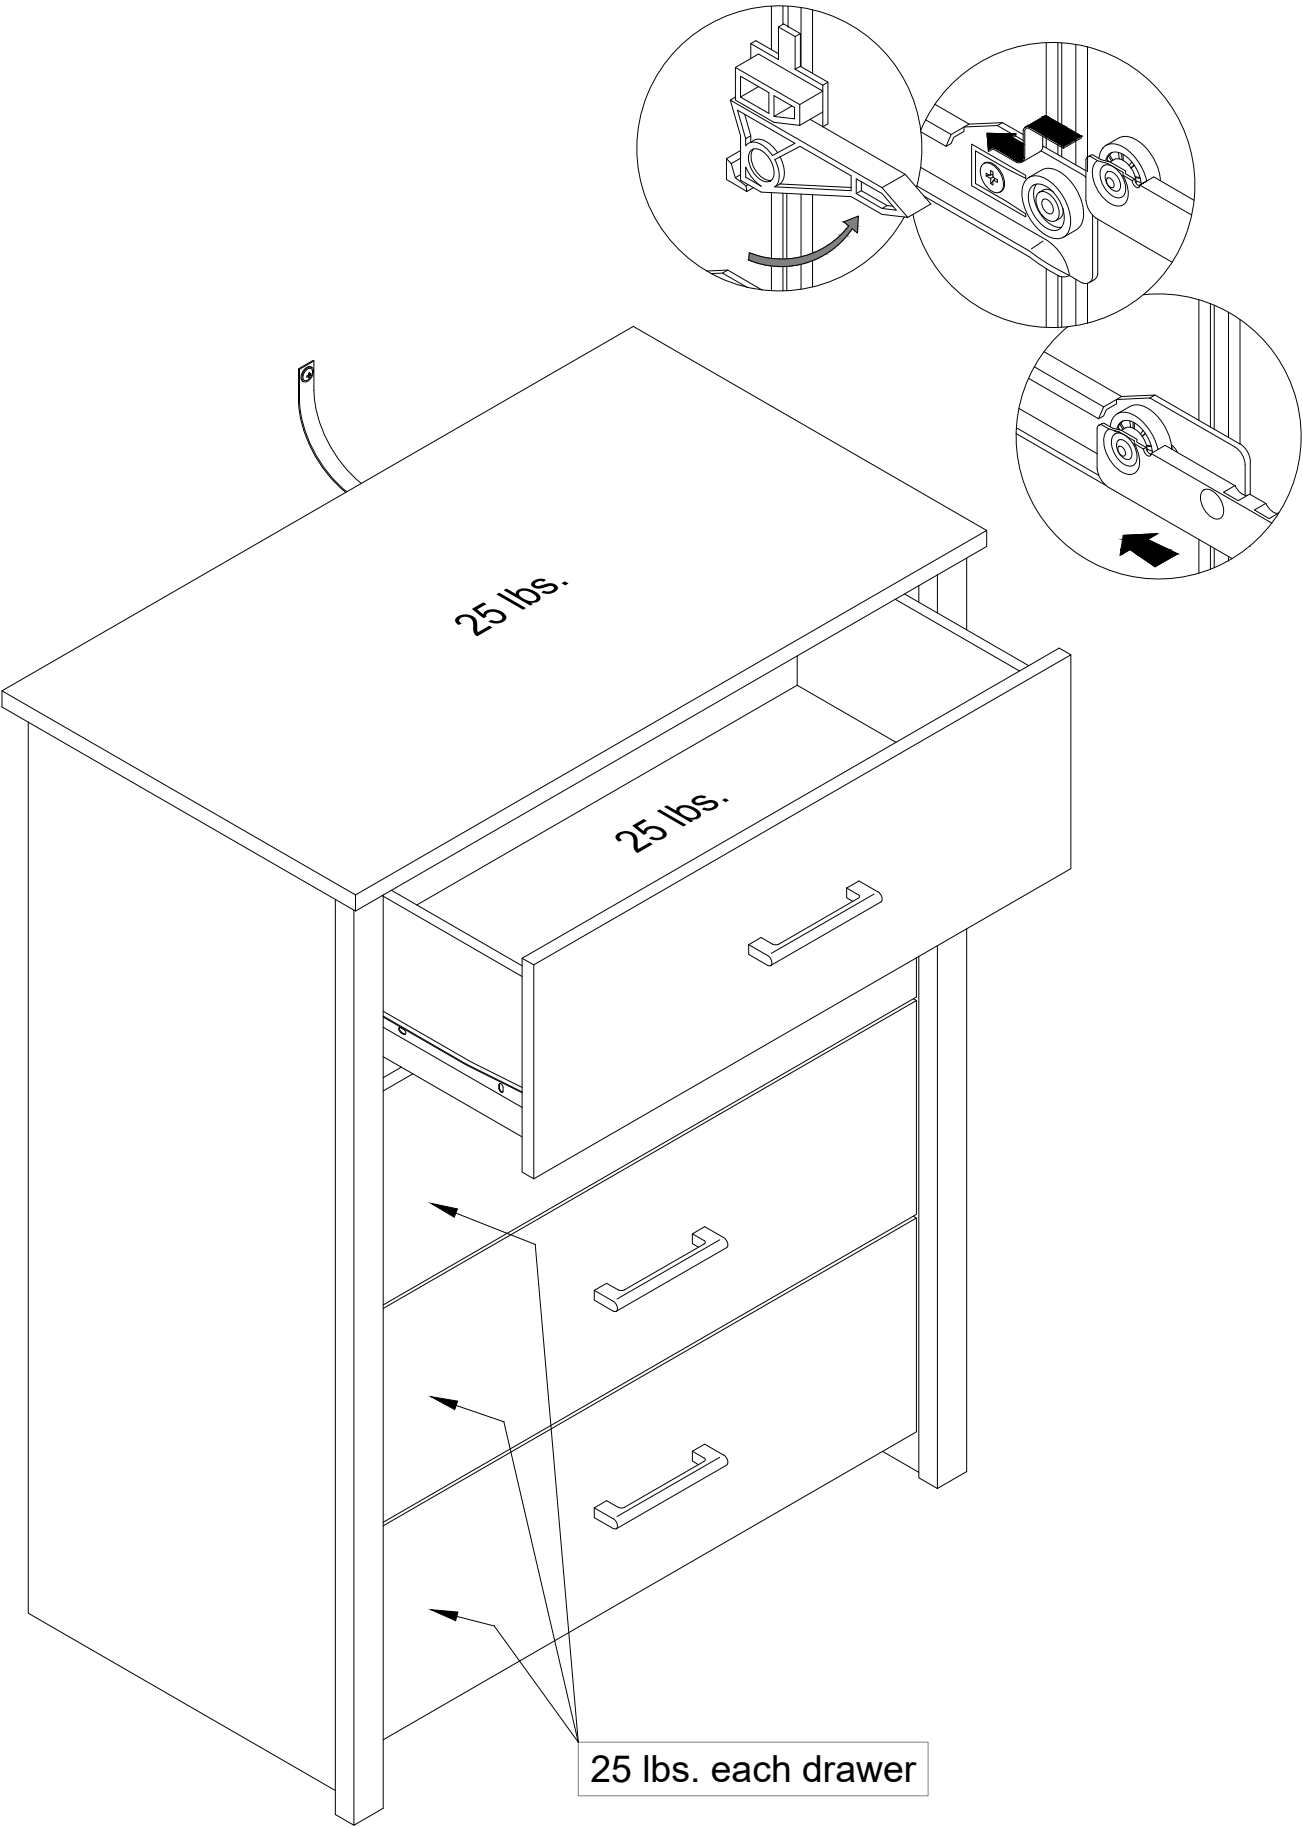

Step 22

Loosen screw #2 a 1/4 turn, the cam a 1/4 turn maximum in both the clockwise and counter-clockwise directions to make adjustments, and then tighten screw #2

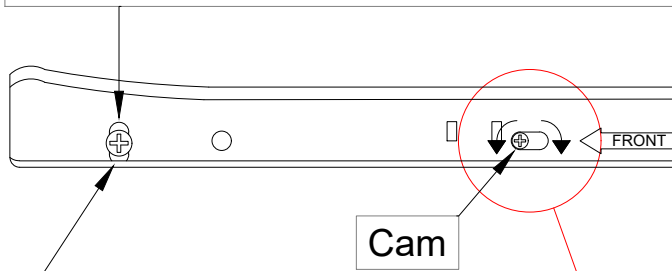

The higher the screw in the oblong hole, the higher your drawer front will be. The lower the screw, the lower the drawer front.

