




Assembly Instruction

Item No : 58903DR / 58904DR

Description: 6 Drawer Dresser

LILOLA
L I V I N G


TOOL REQUIRED

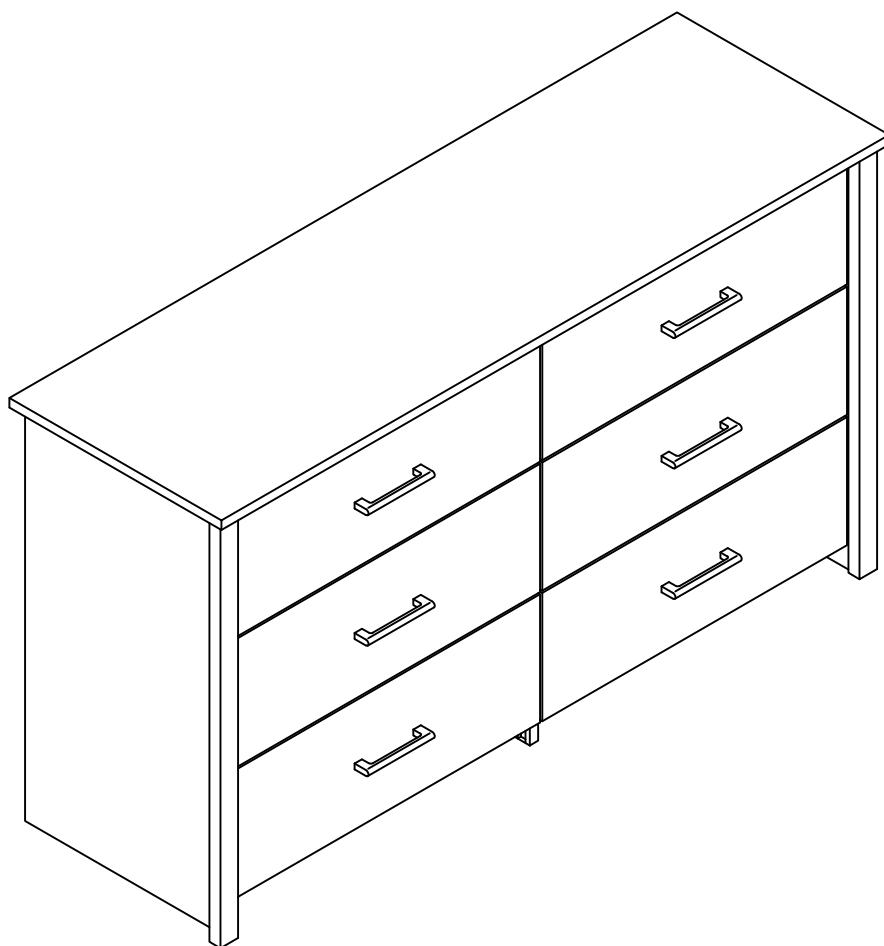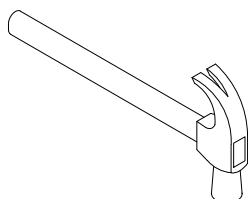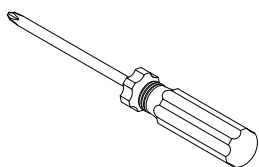

PARTS LIST

A	RIGHT END (1)
B	LEFT END (1)
C	TOP (1)
D	UPRIGHT (1)
E	BACK (1)

F	RIGHT DRAWER FRONT (3)
G	LEFT DRAWER FRONT (3)
H	FRONT MOLDING (2)
J	BOTTOM (2)
K	RIGHT DRAWER SIDE (6)
L	LEFT DRAWER SIDE (6)
M	DRAWER BACK (6)
N	DRAWER BOTTOM (6)
O	DRAWER BRACE (6)
P	BACK BRACE (2)

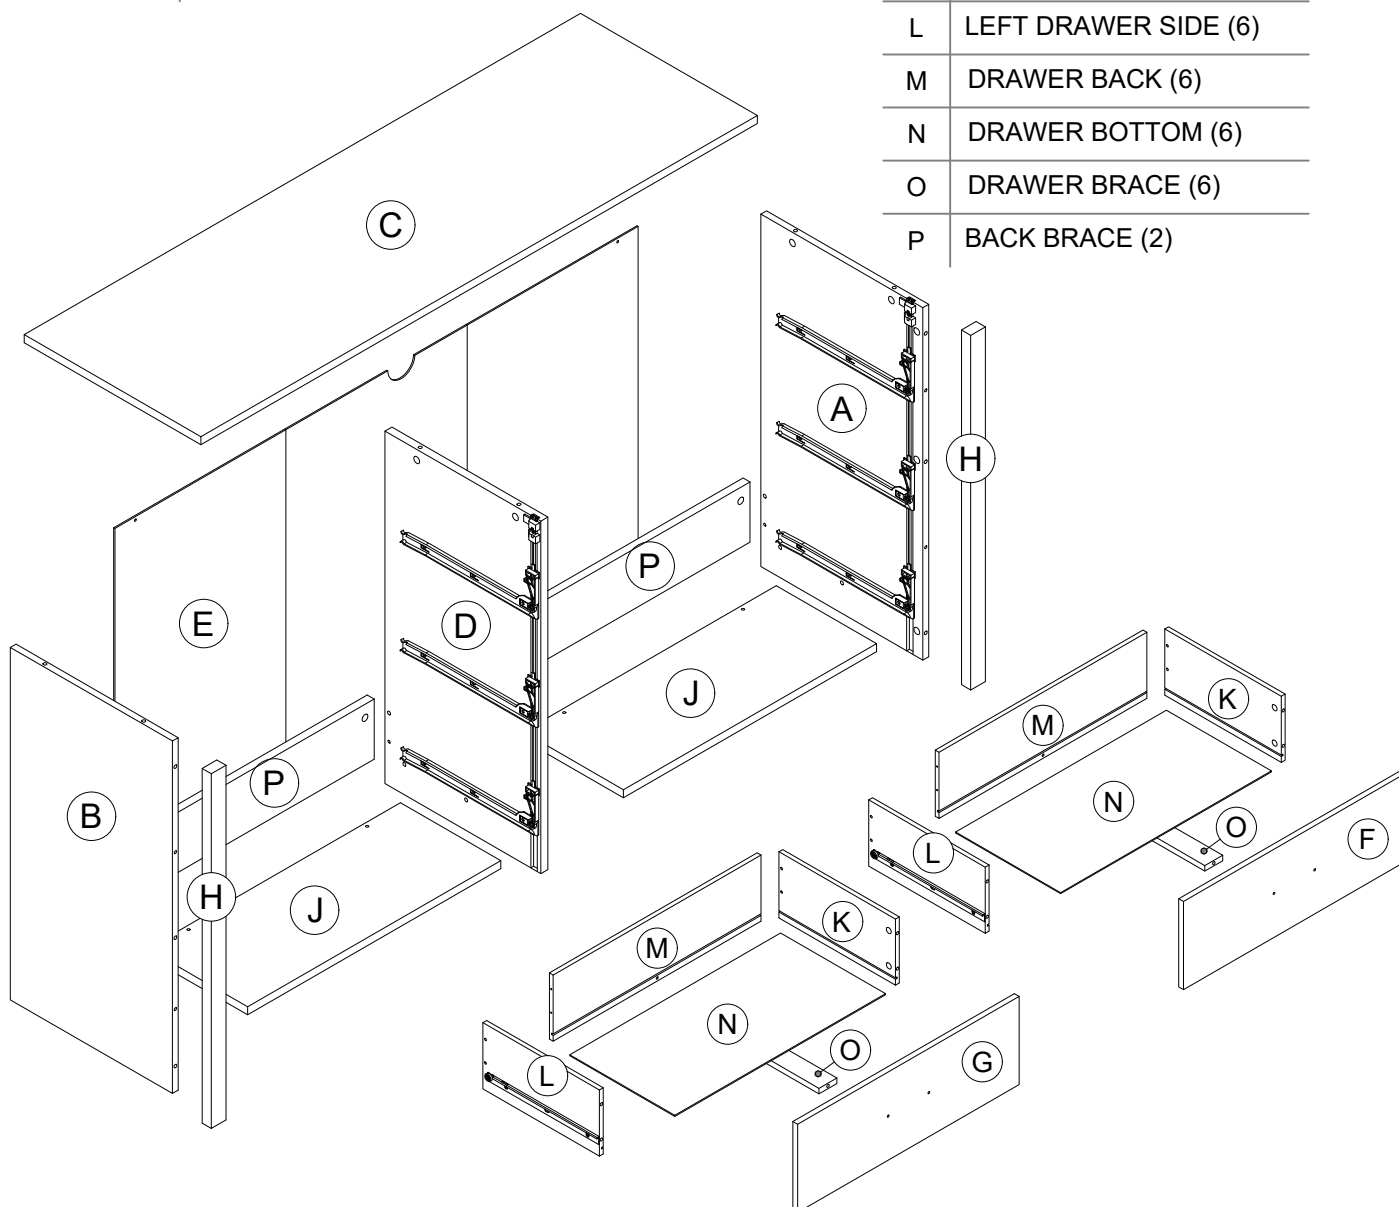


USEFUL HINTS BEFORE YOU START:


1. Read each step carefully before starting.
2. It is important that each step is performed in correct order to avoid difficulties.
3. Identify, sort and count the parts before assembly.
4. Assemble your furniture on packaging cardboard to prevent scratch or damage.
5. Clean the product with mild cleanser using soft damp cloth. Do not use harsh or abrasive cleanser.
6. Using incompatible hardware might cause damage to product.

HARDWARE LIST


- 1 BLACK LARGE
HIDDEN CAM - 30

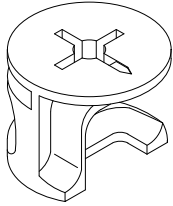


- 2 SMALL HIDDEN
CAM - 24

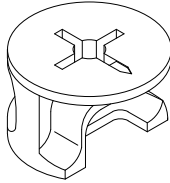


- 3 CAM DOWEL - 48

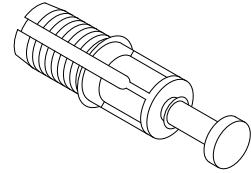


- 4 CAM SCREW - 6

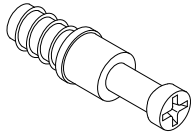


- 5 WOOD
DOWEL - 8

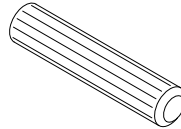

- 6 PULL - 6

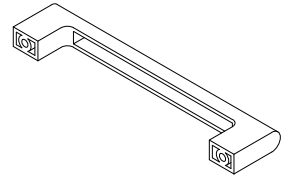


- 7 1-1/2" FLAT
HEAD SCREW - 34



- 8 3/4" MACHINE
SCREW - 12




- 9 1/2" PAN
HEAD SCREW - 4



- 10 NAIL - 38




- 96 FURNITURE TIPPING
RESTRAINT KIT - 1

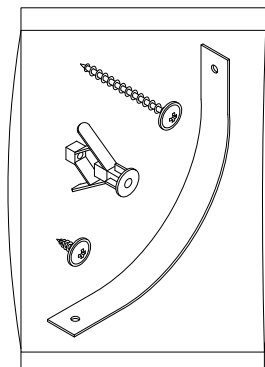


Step 1



The arrow in the HIDDEN CAM must point toward the hole in the edge of the board.

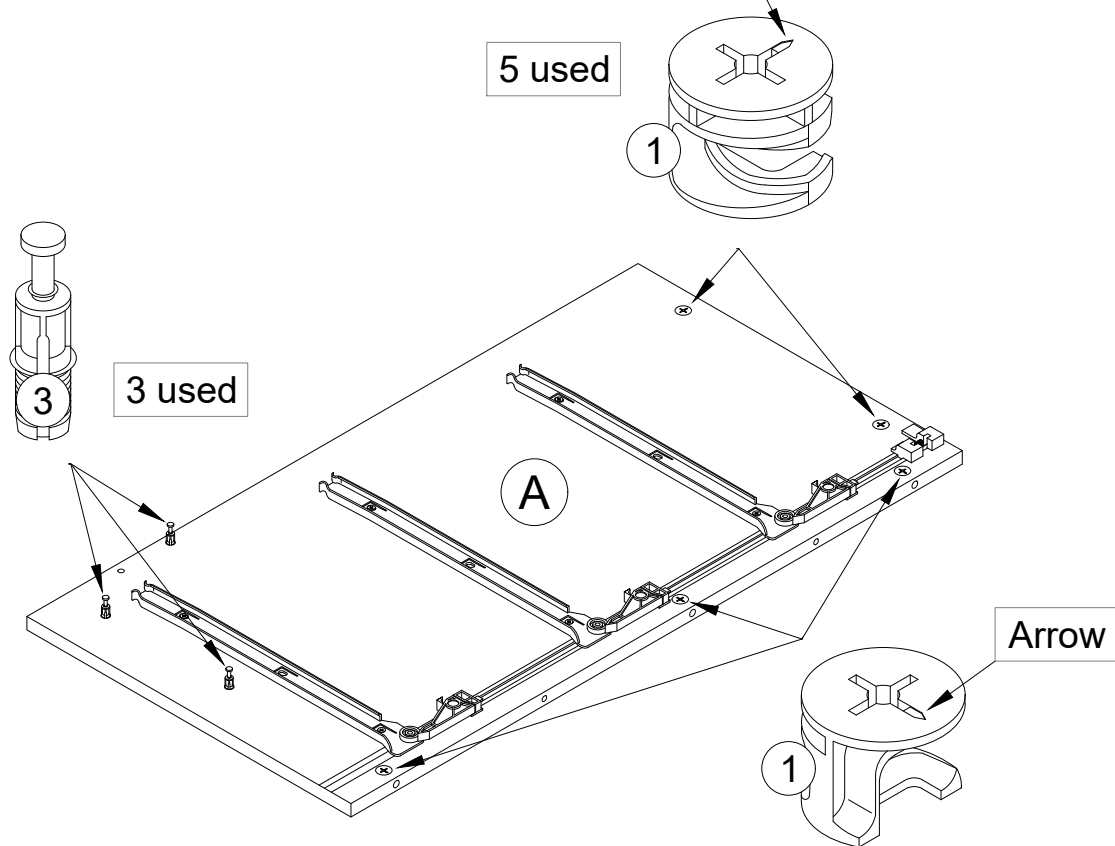


Step 2

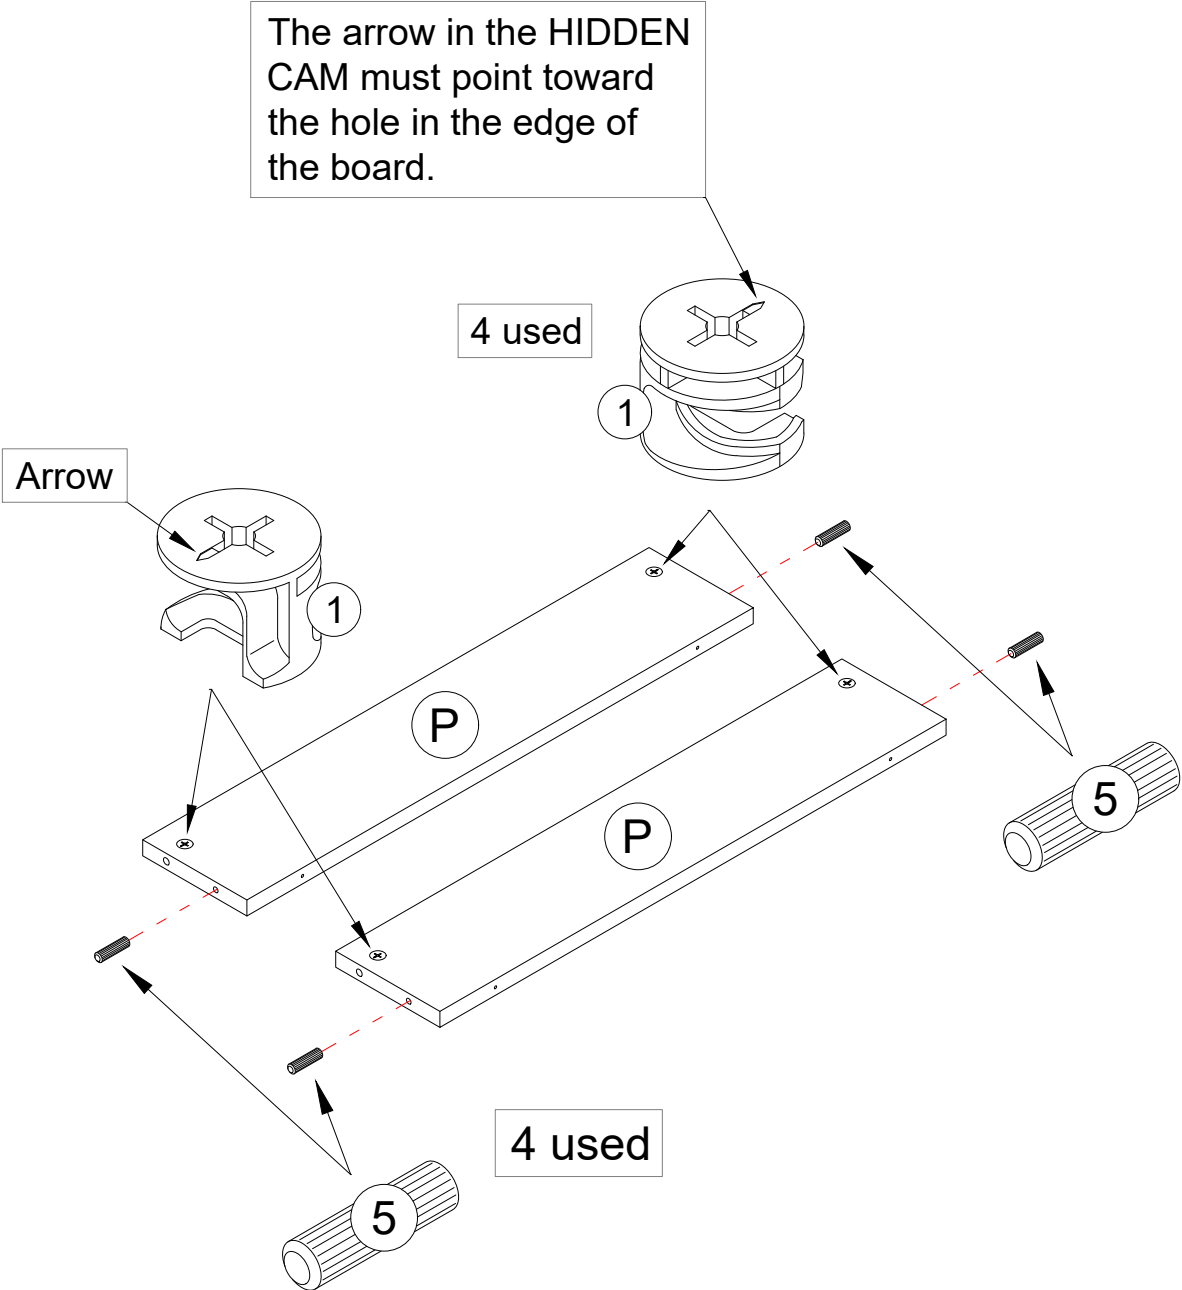


Step 3

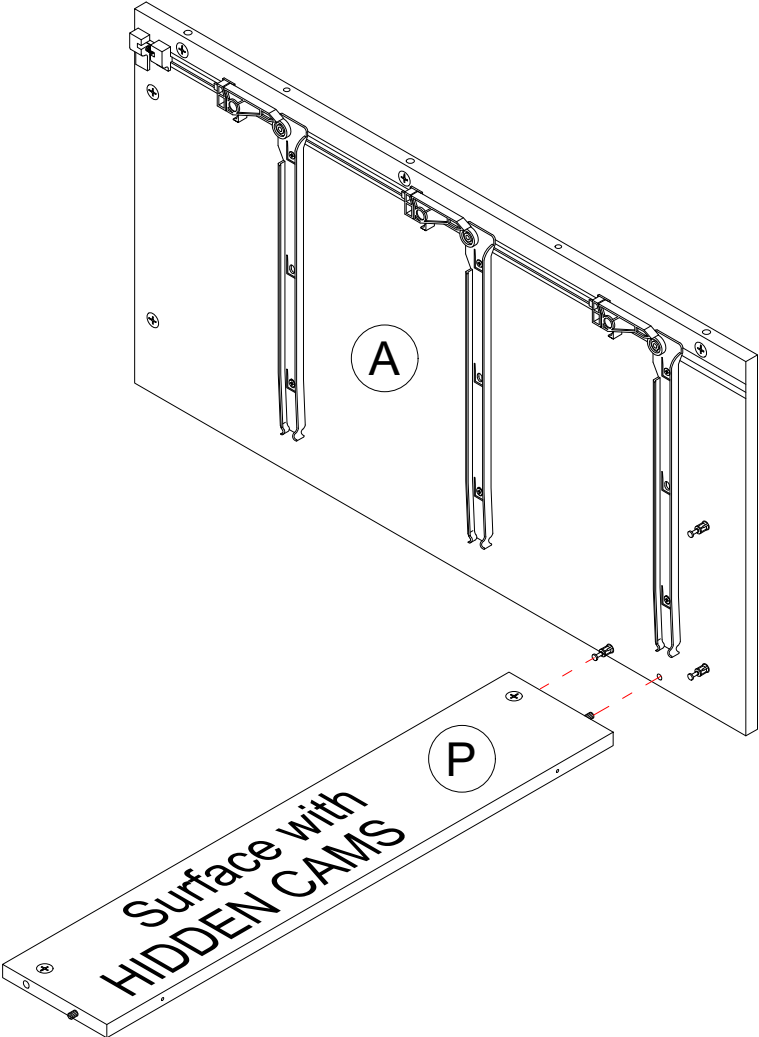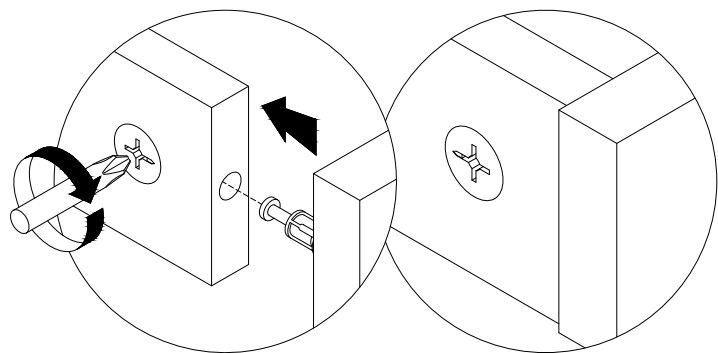


Step 4

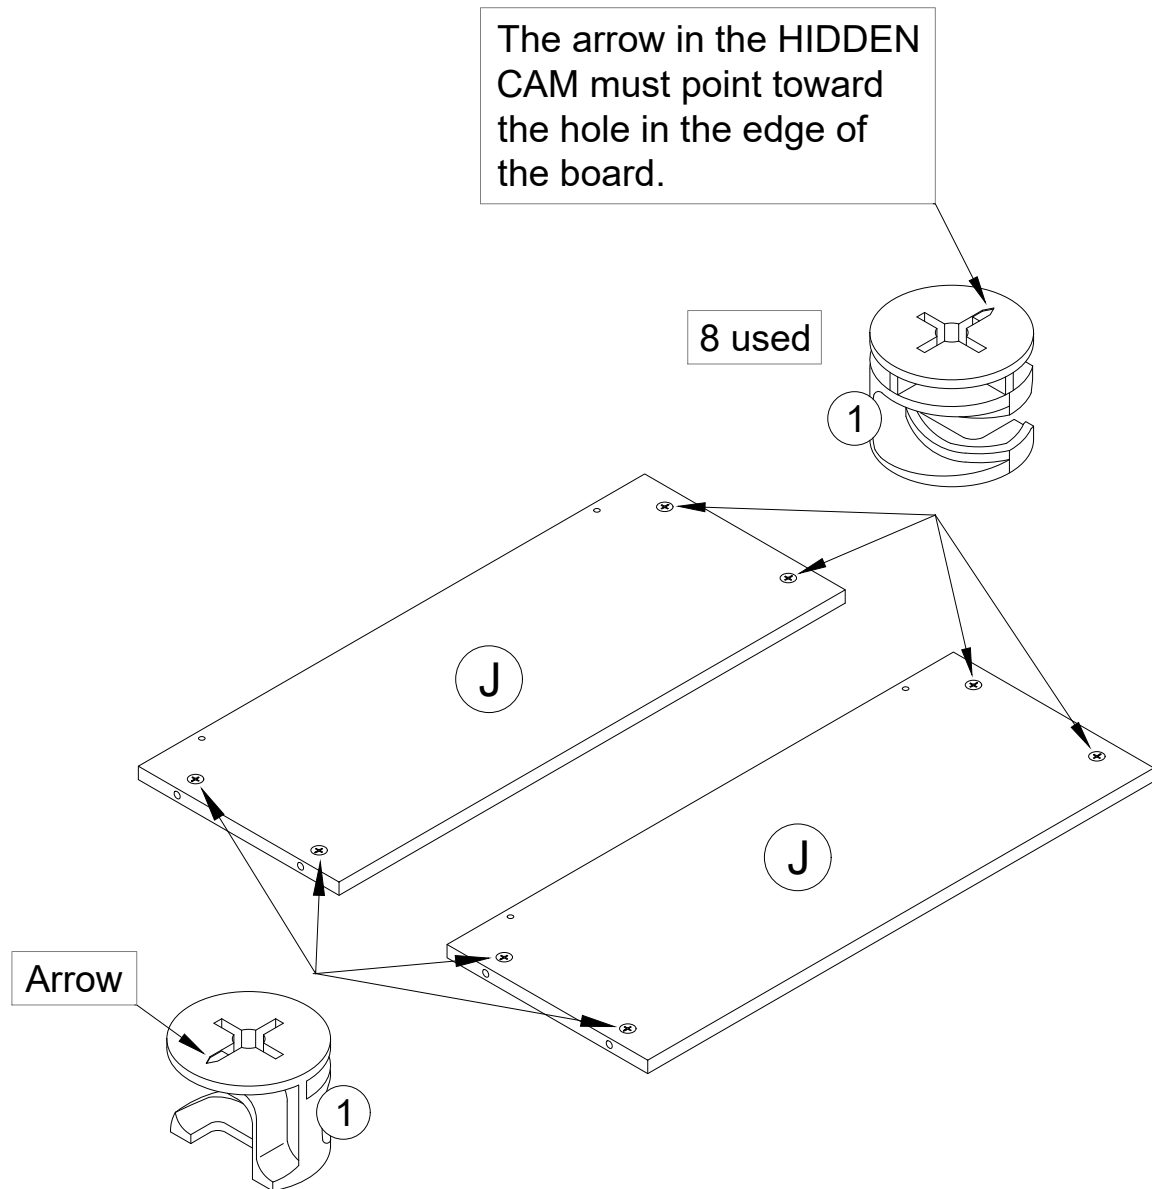


Step 5

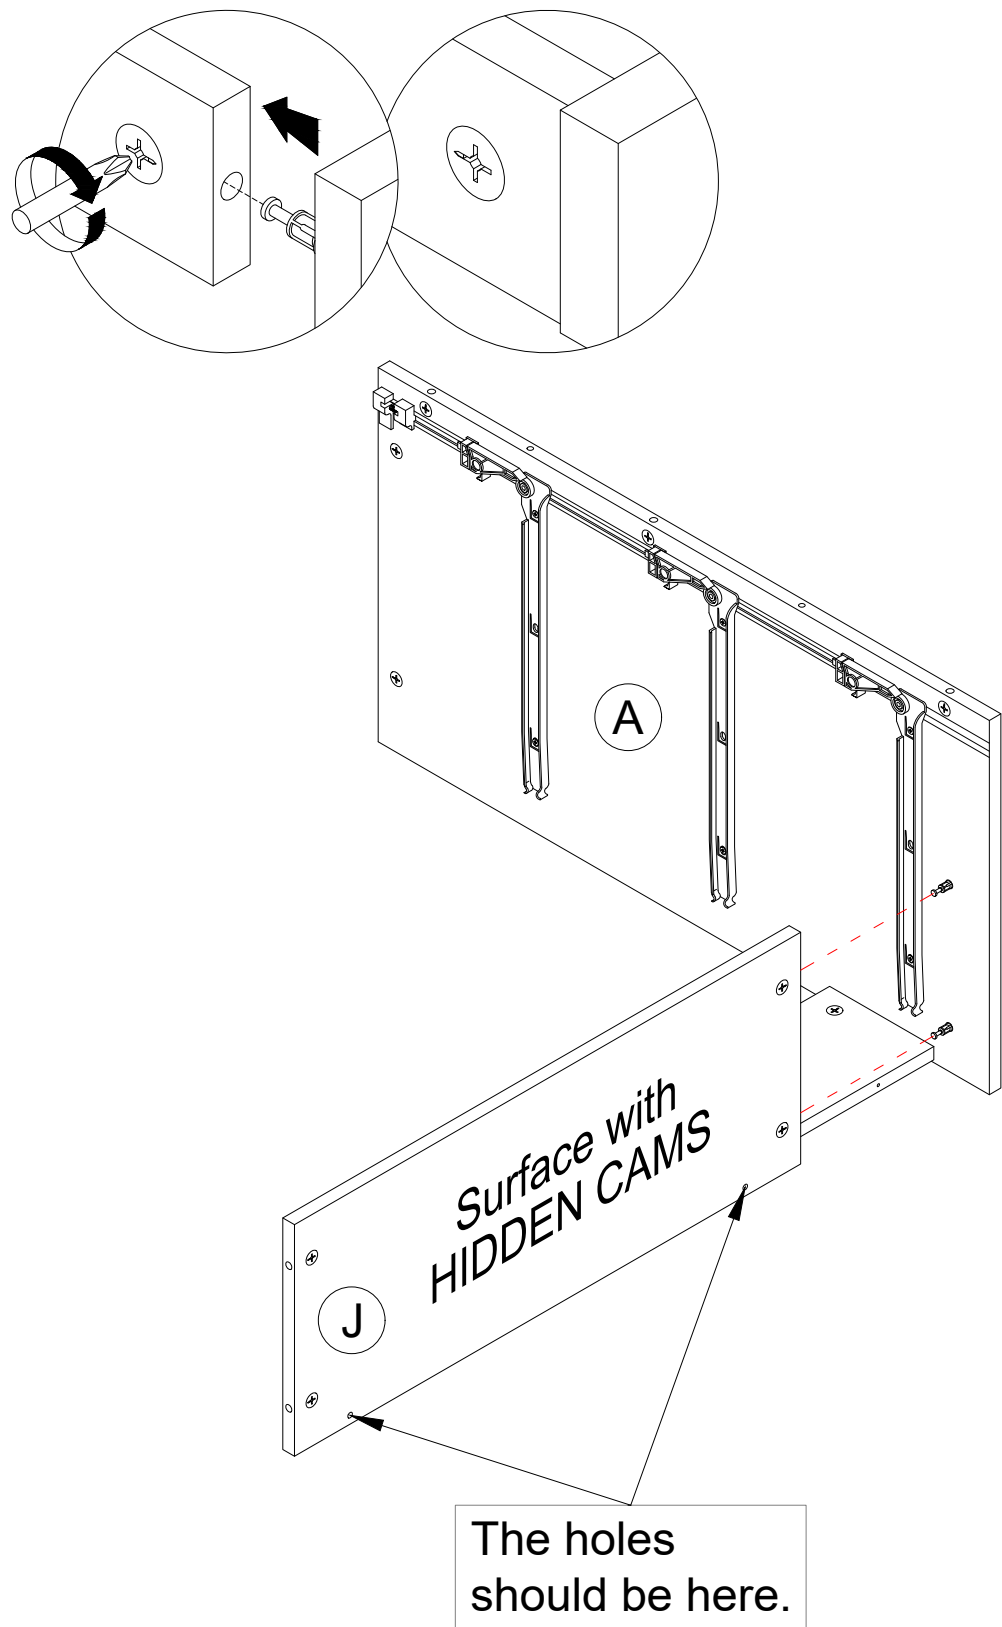


Step 6

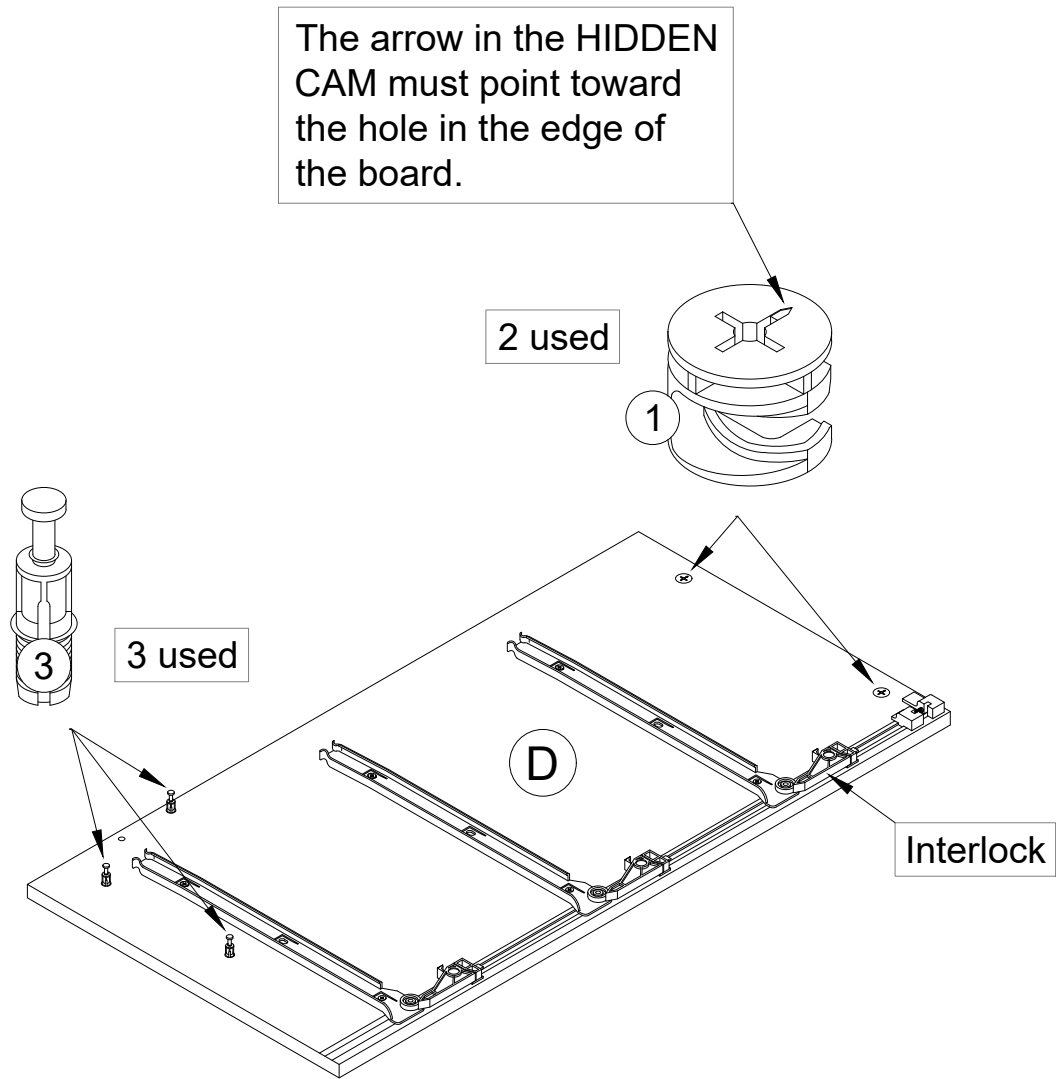


Step 7

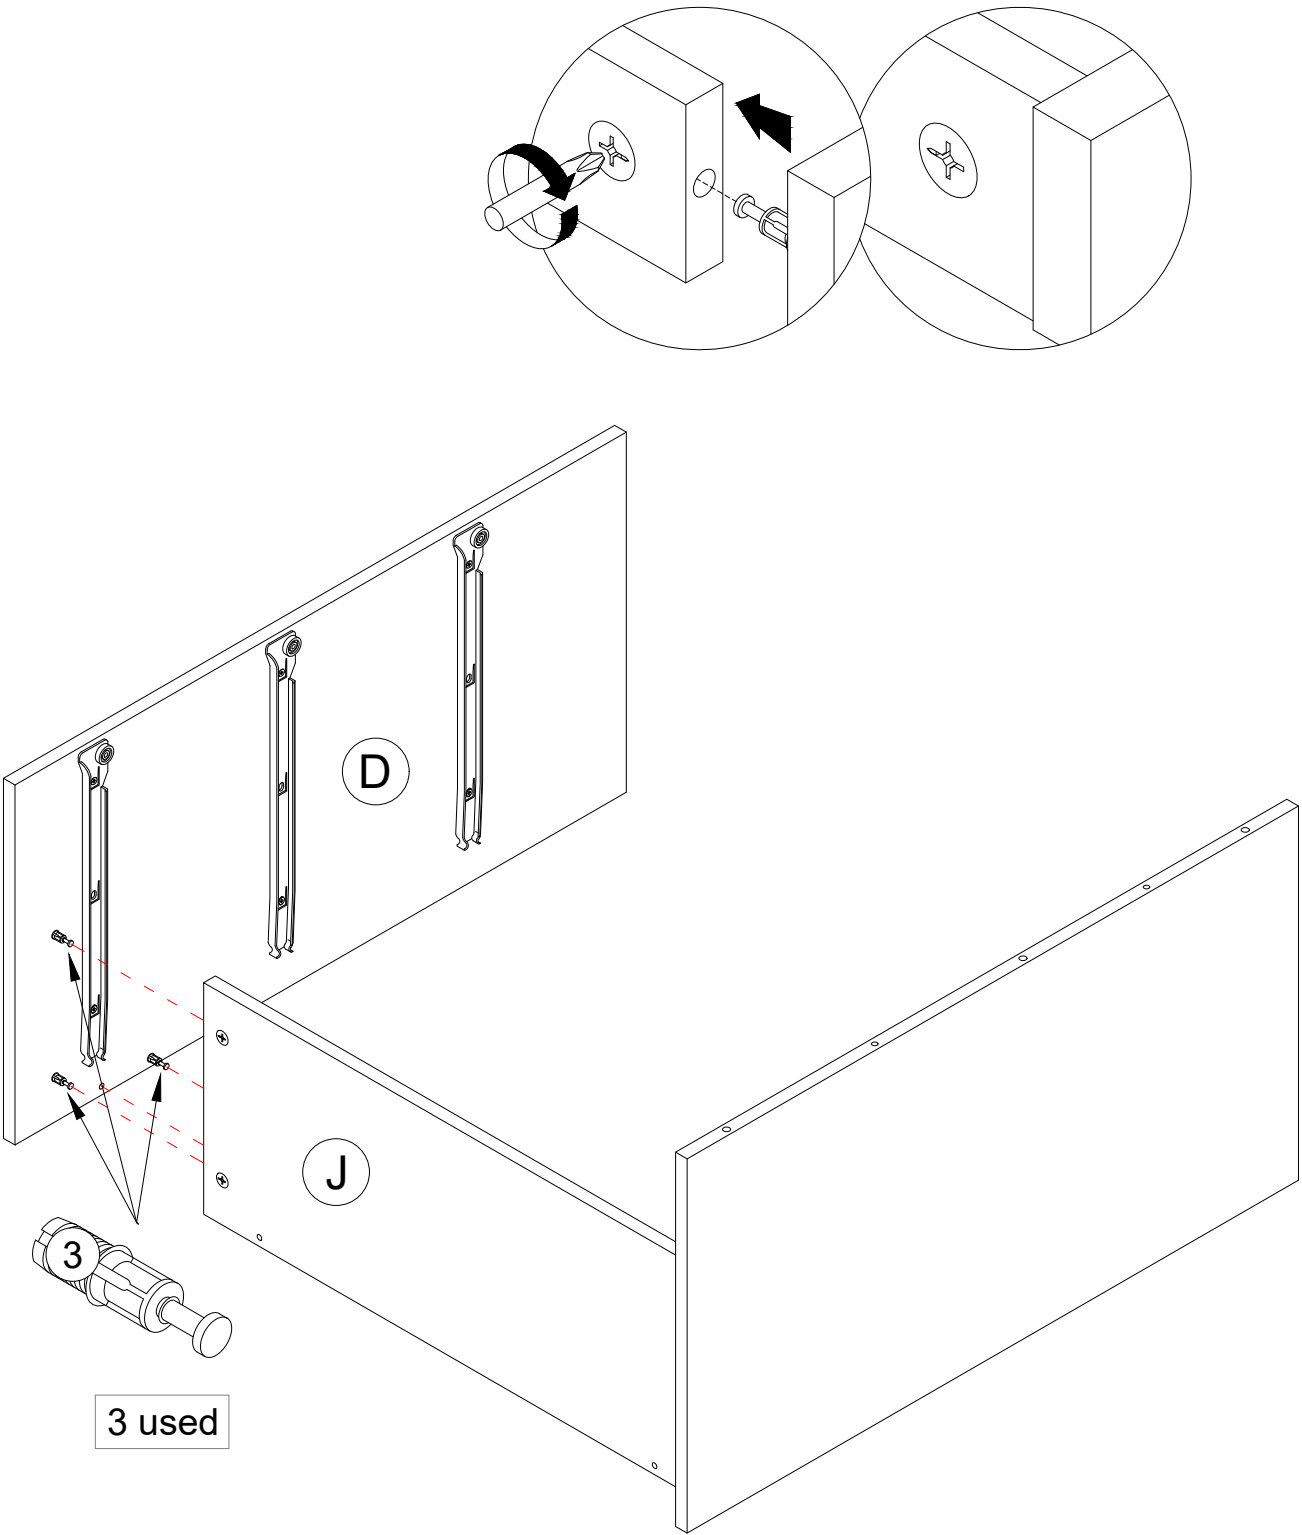


Step 8

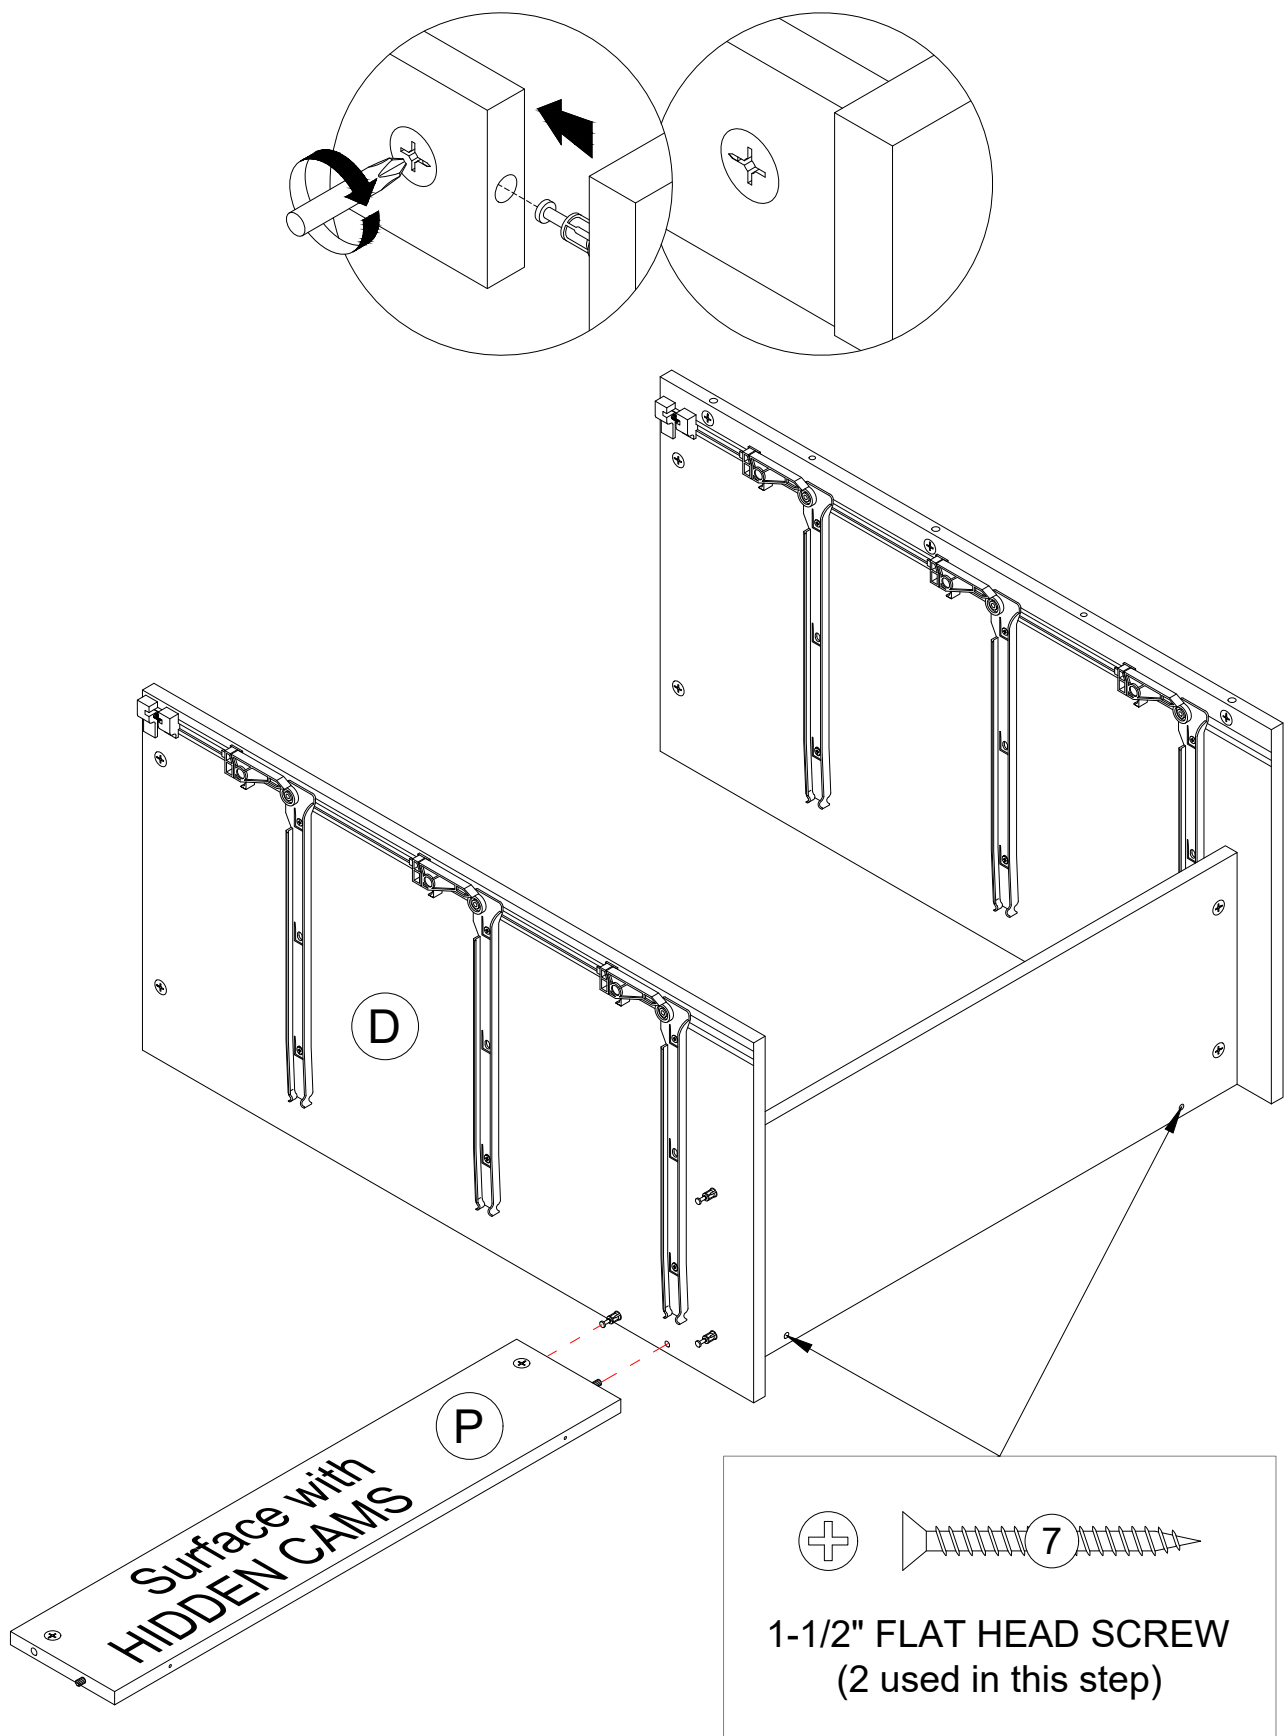


Step 9

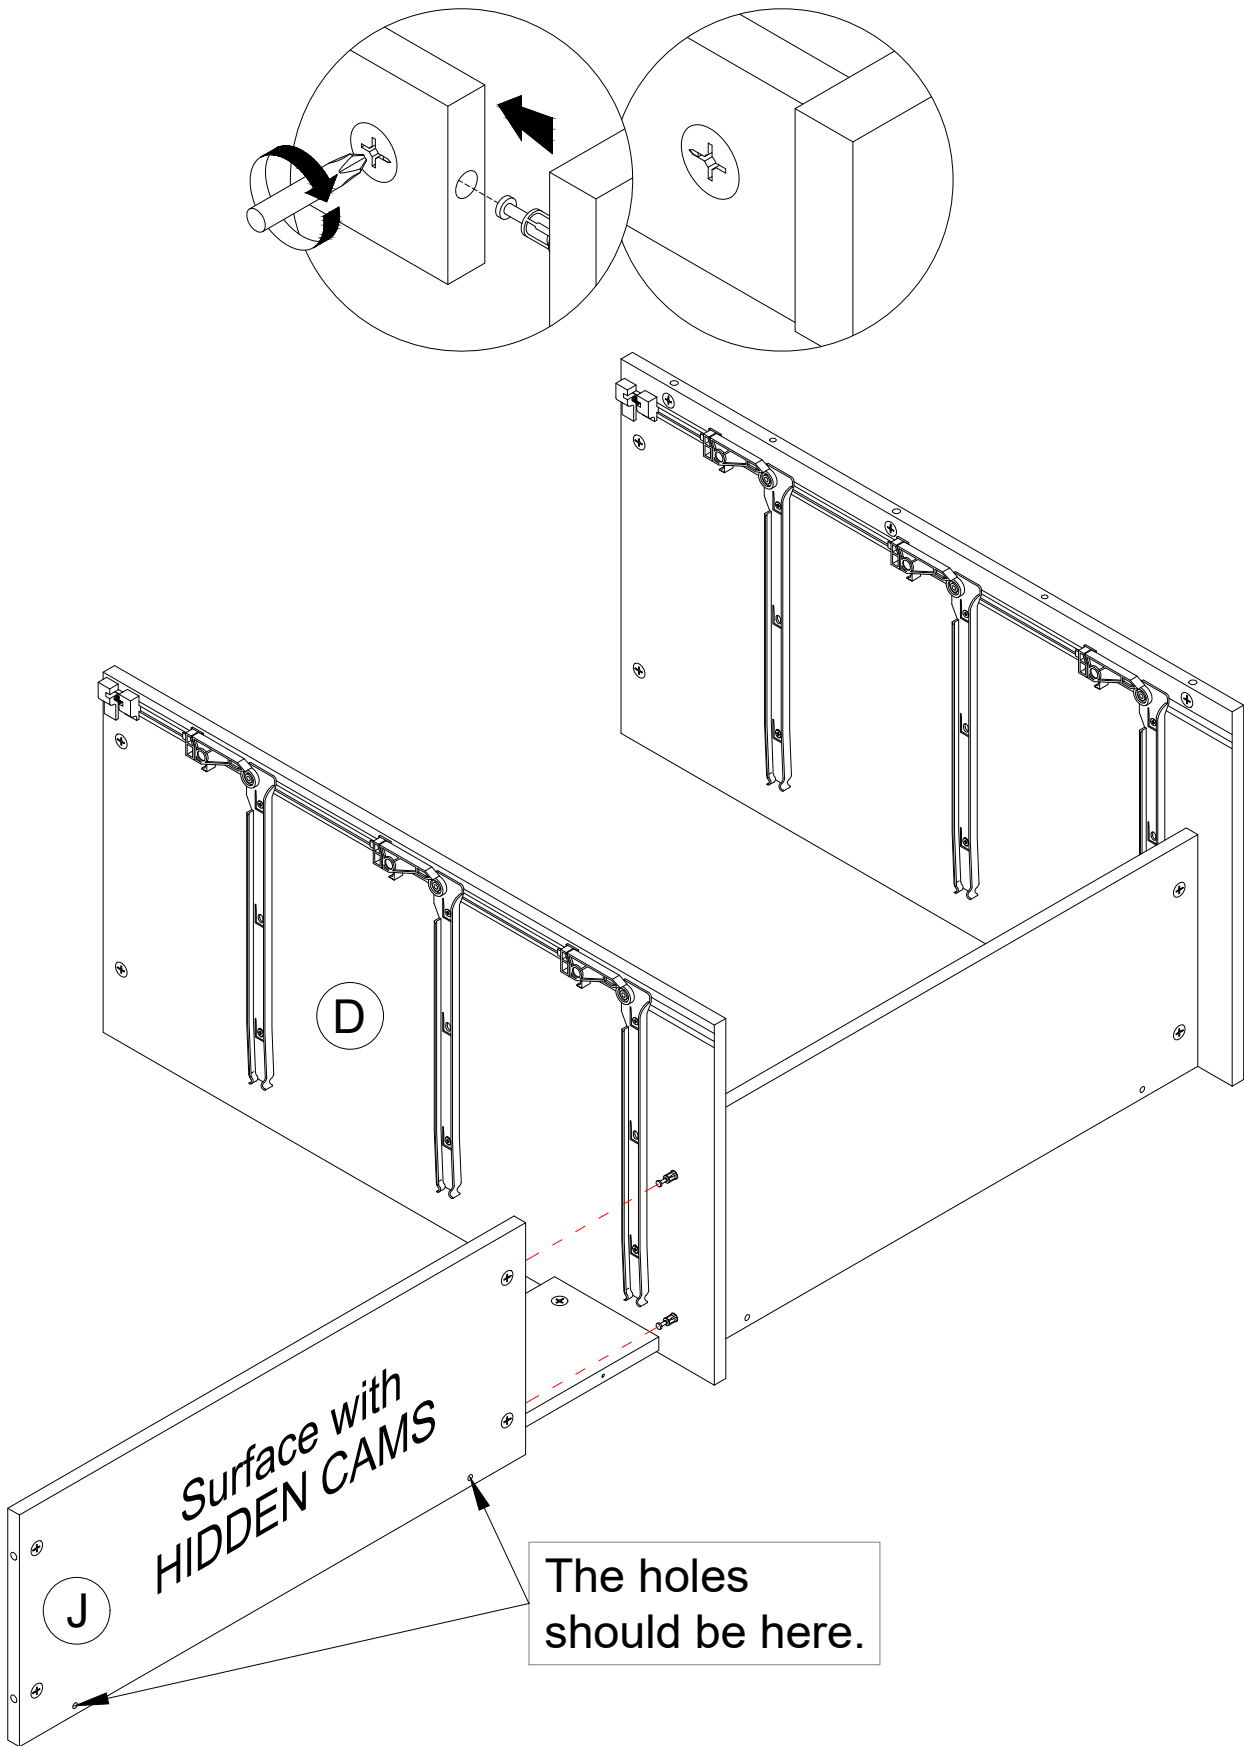


Step 10

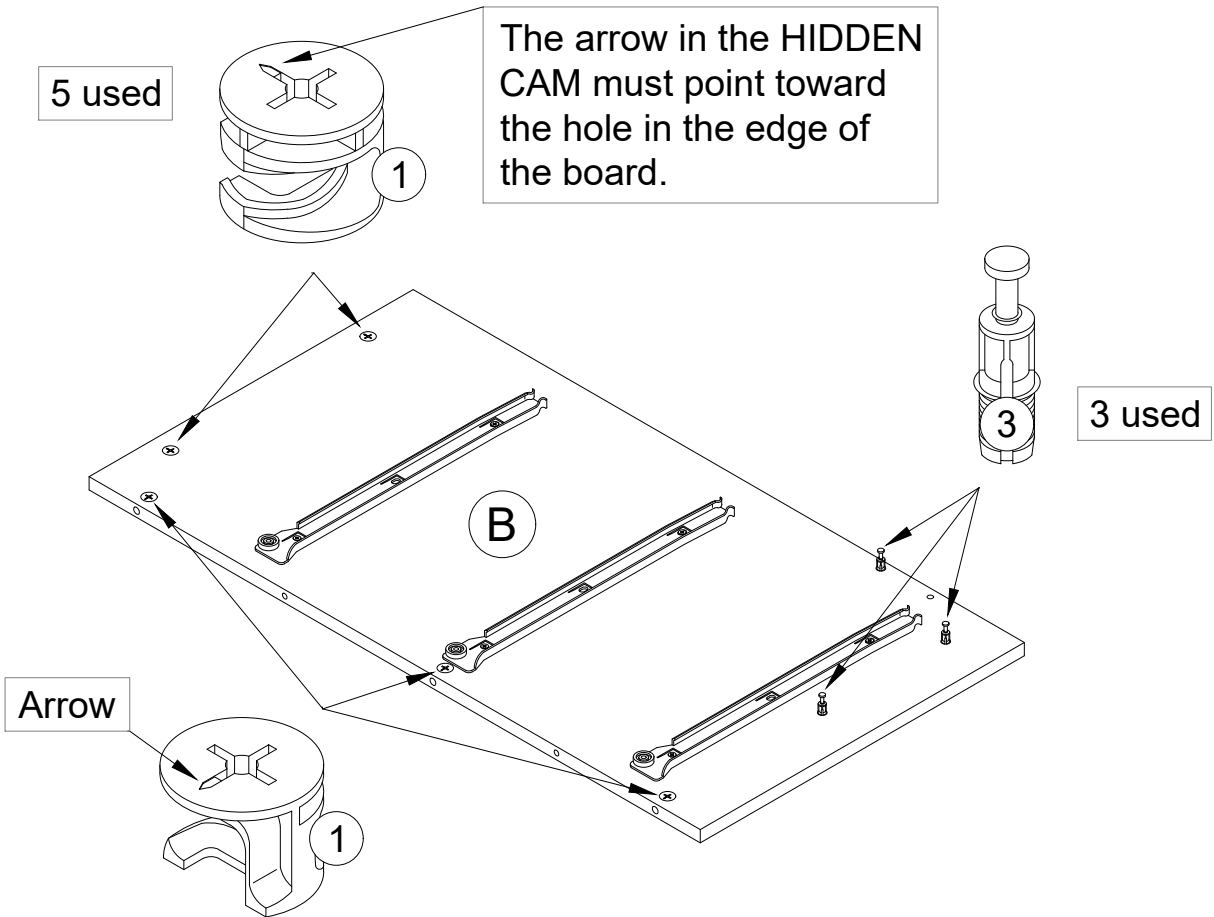


Step 11

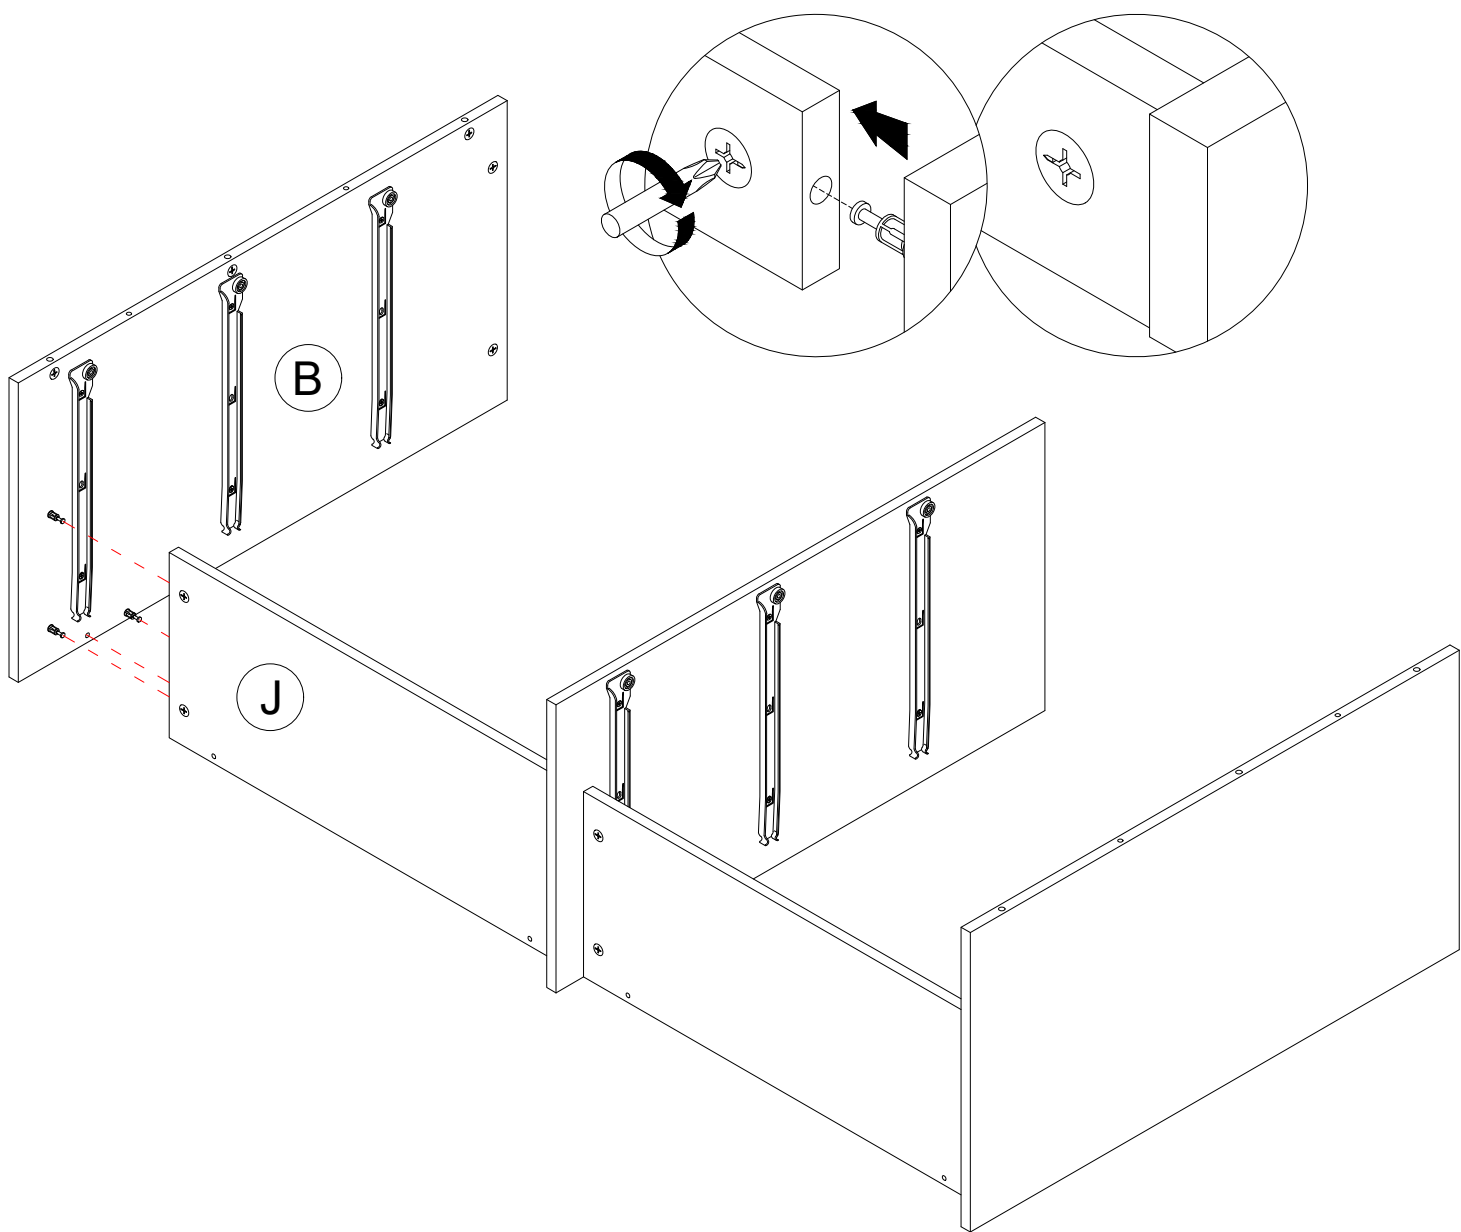

Step 12

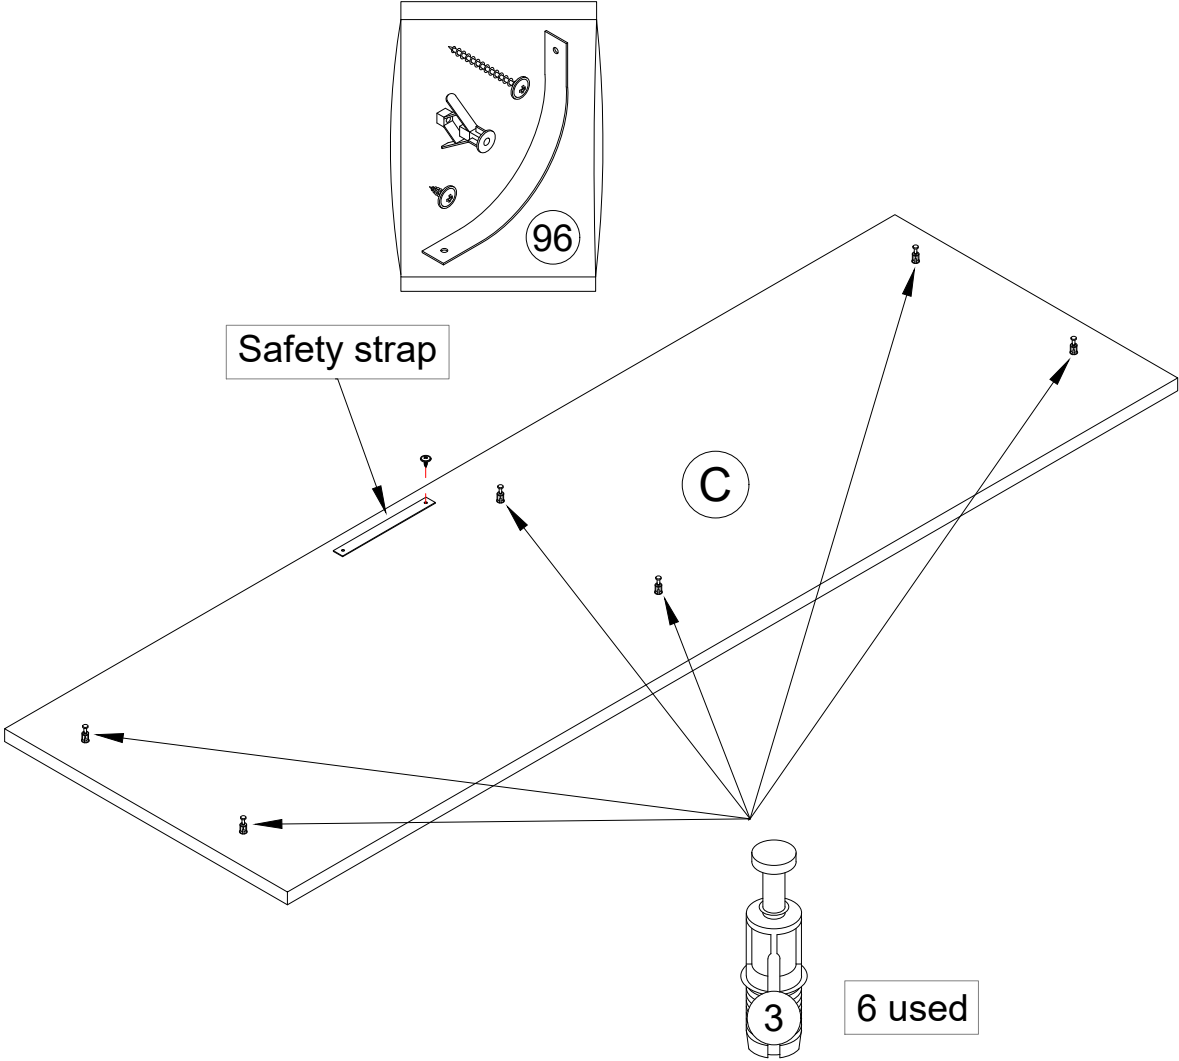


Step 13

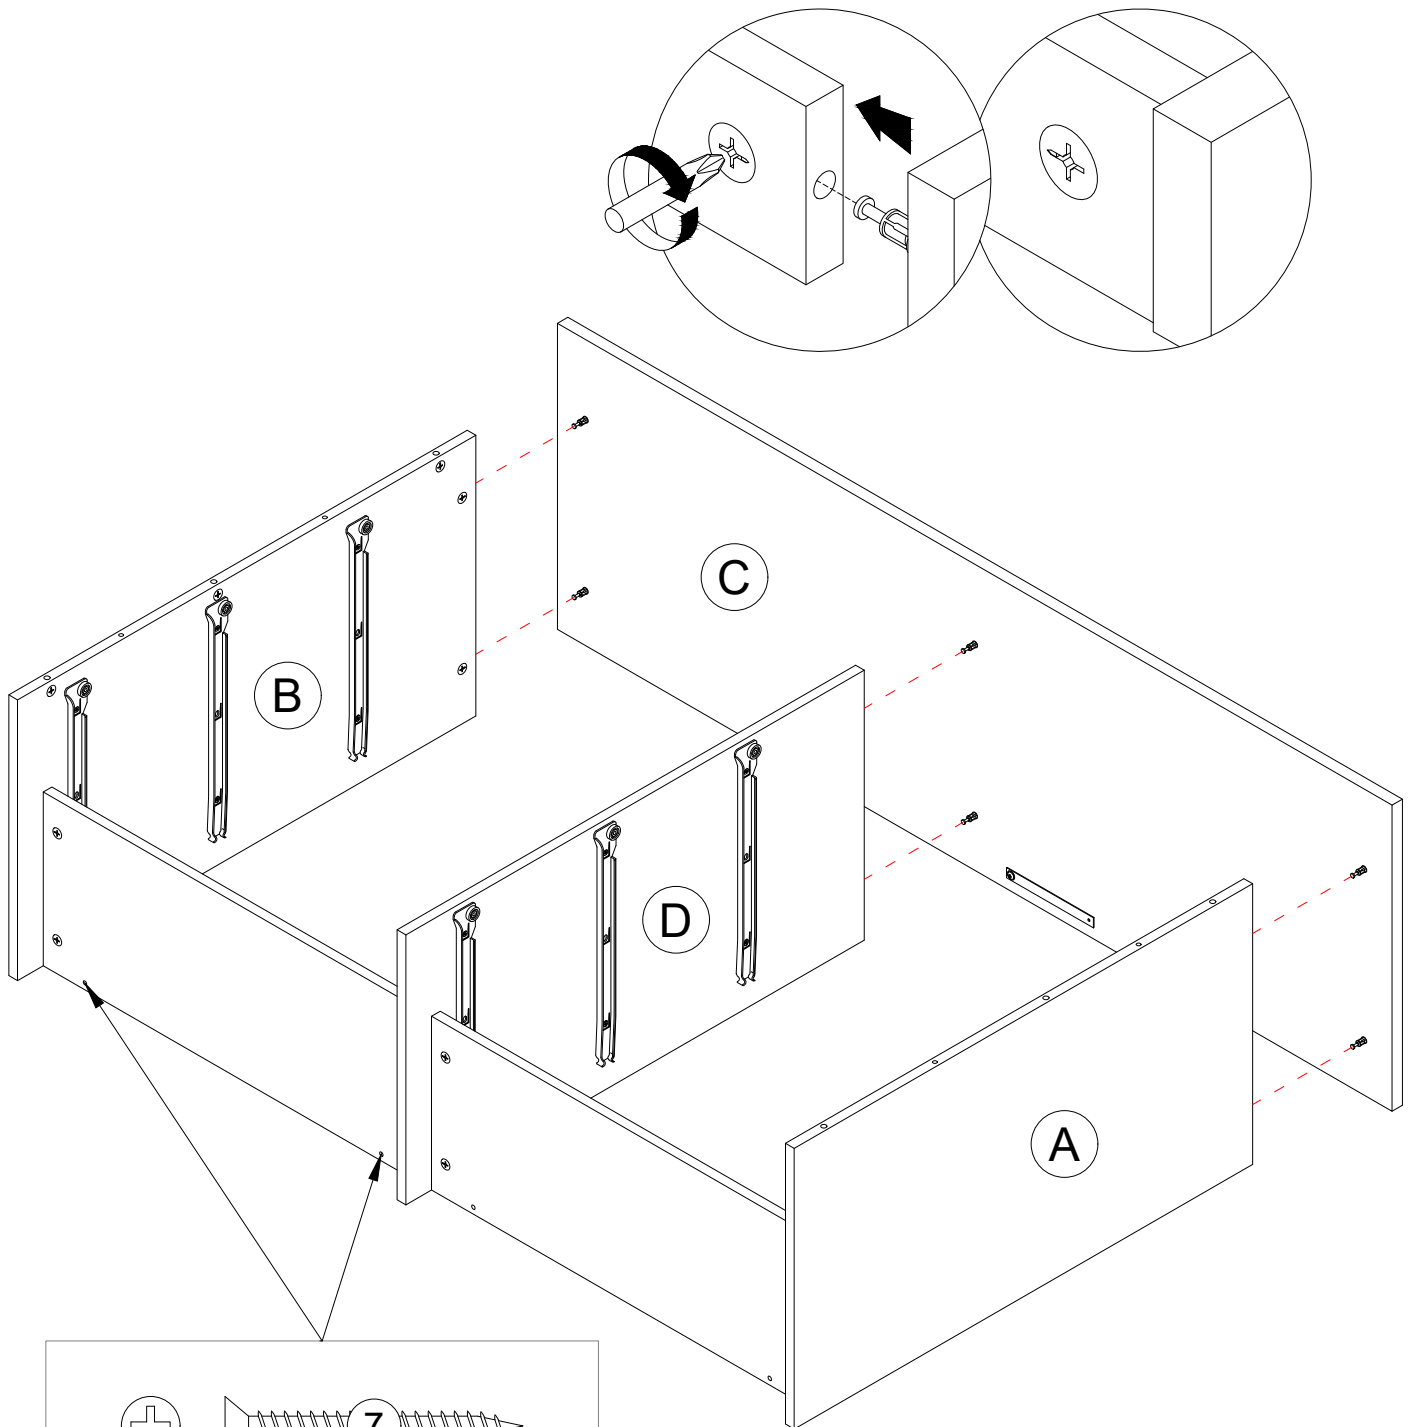


1-1/2" FLAT HEAD SCREW
(2 used in this step)


Step 14

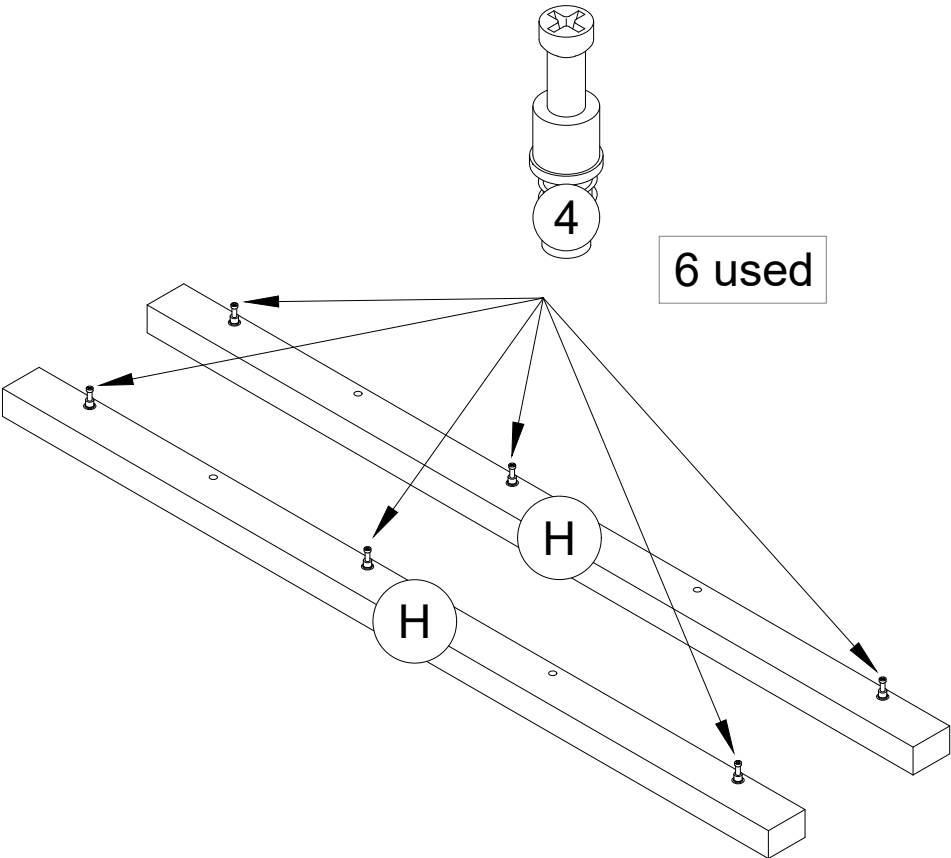


Step 15

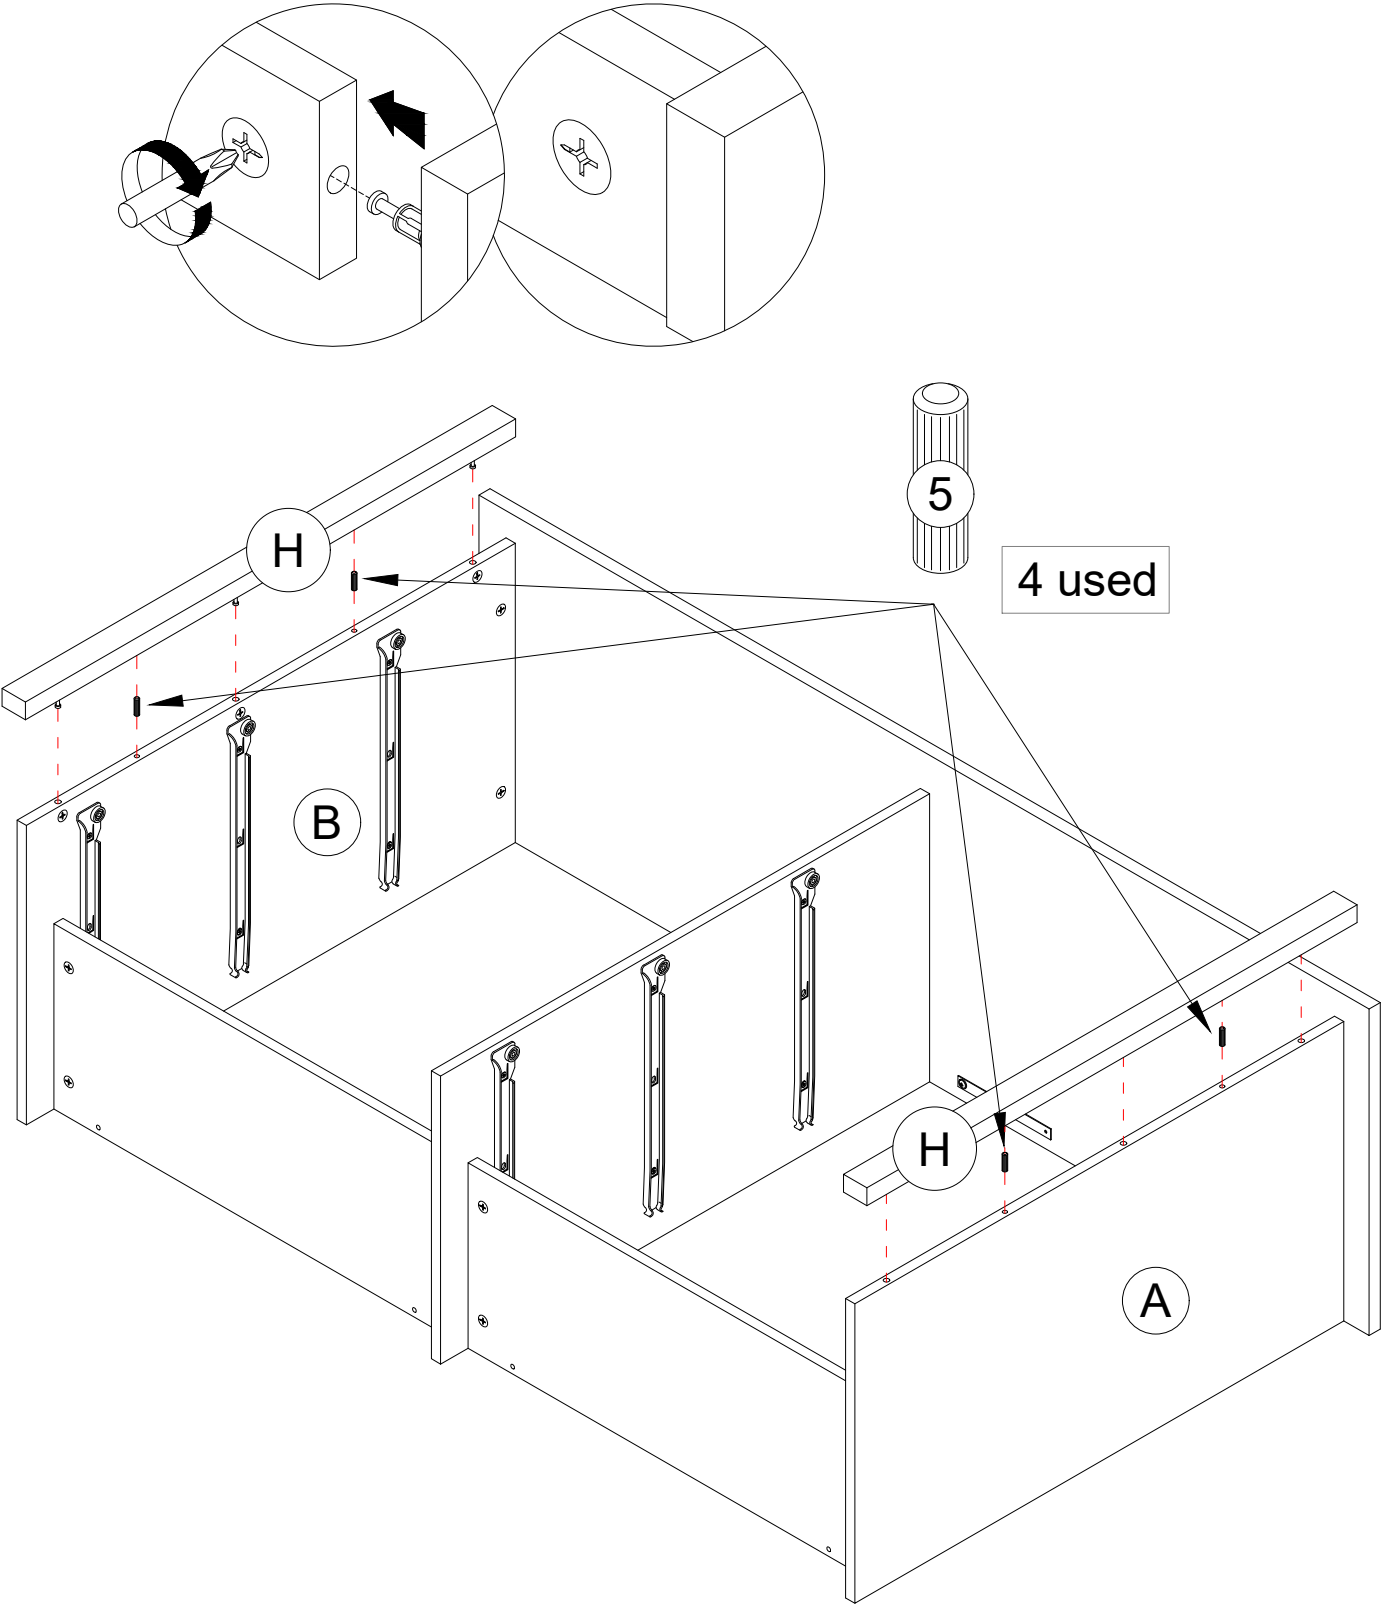

Step 16

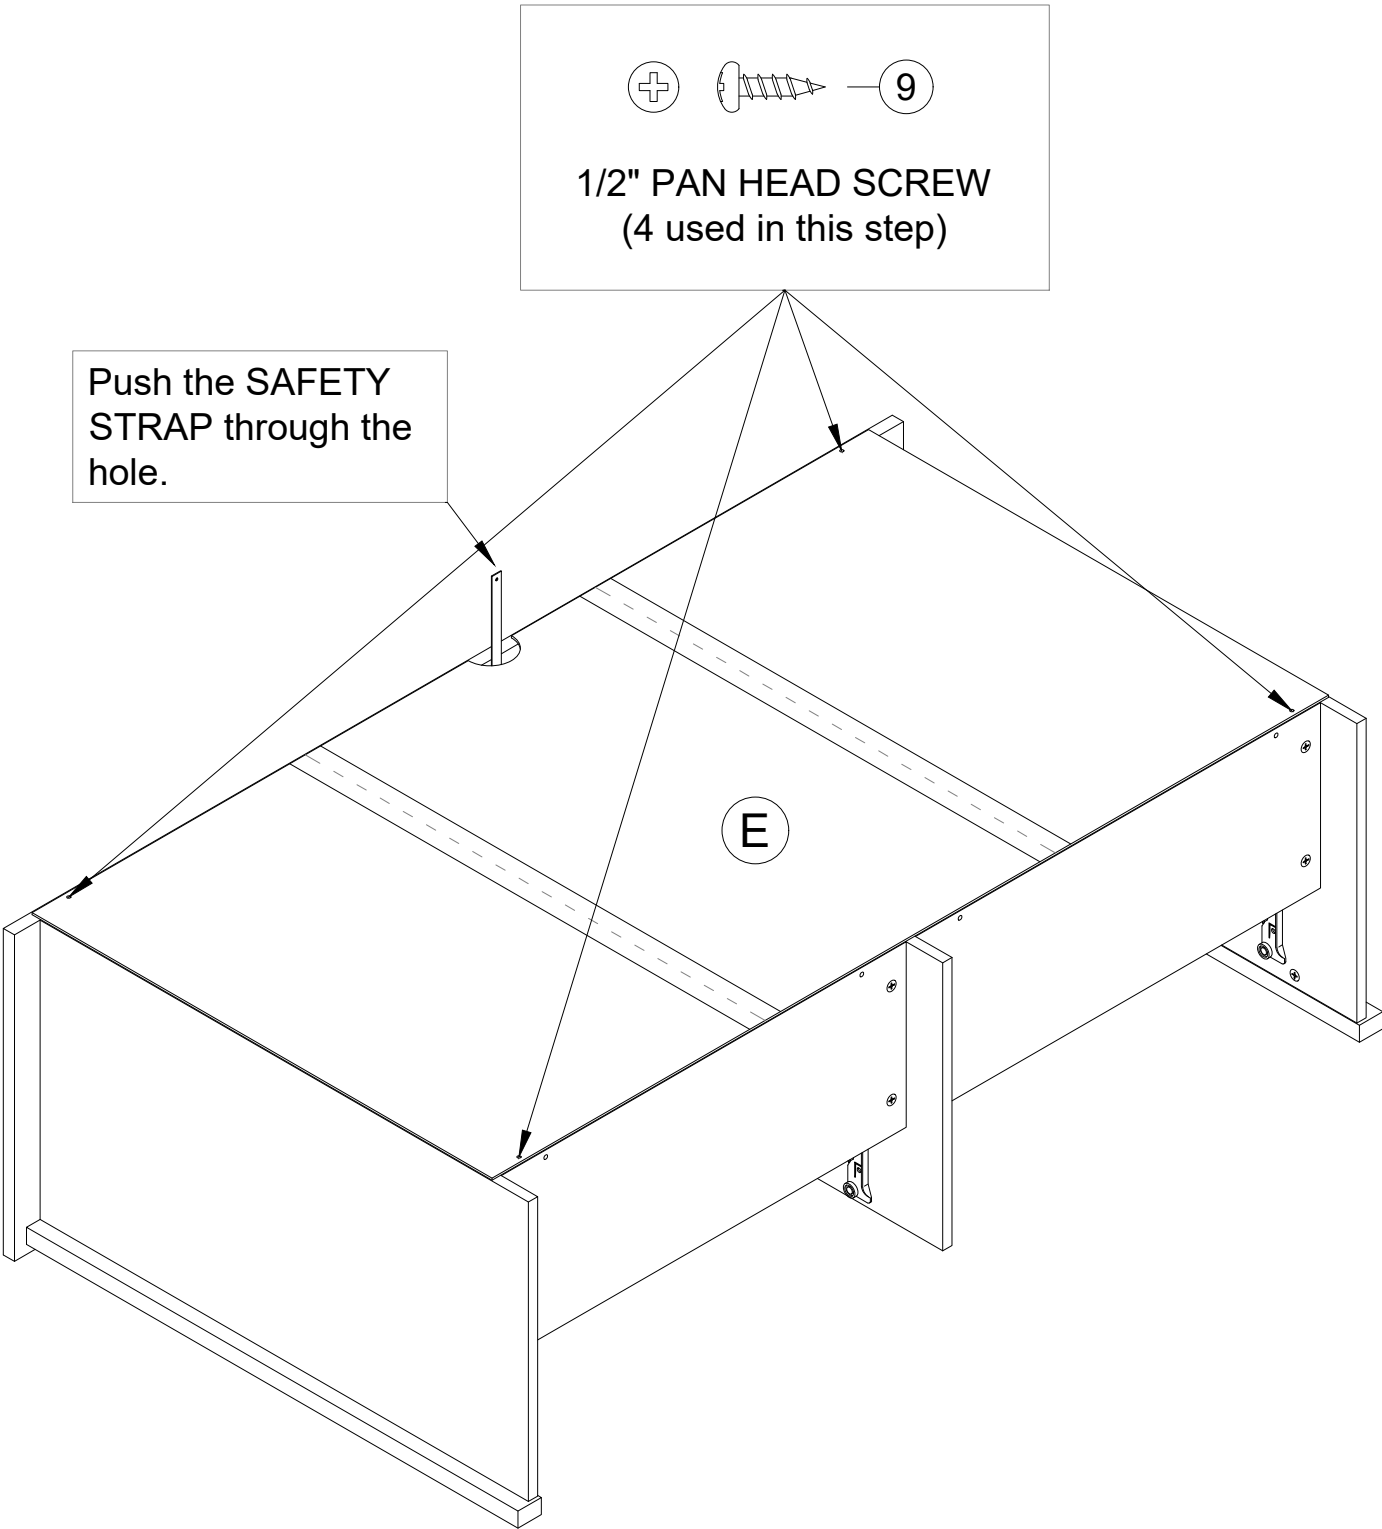


Step 17




NAIL
(38 used in this step)


Push the SAFETY STRAP through the hole.

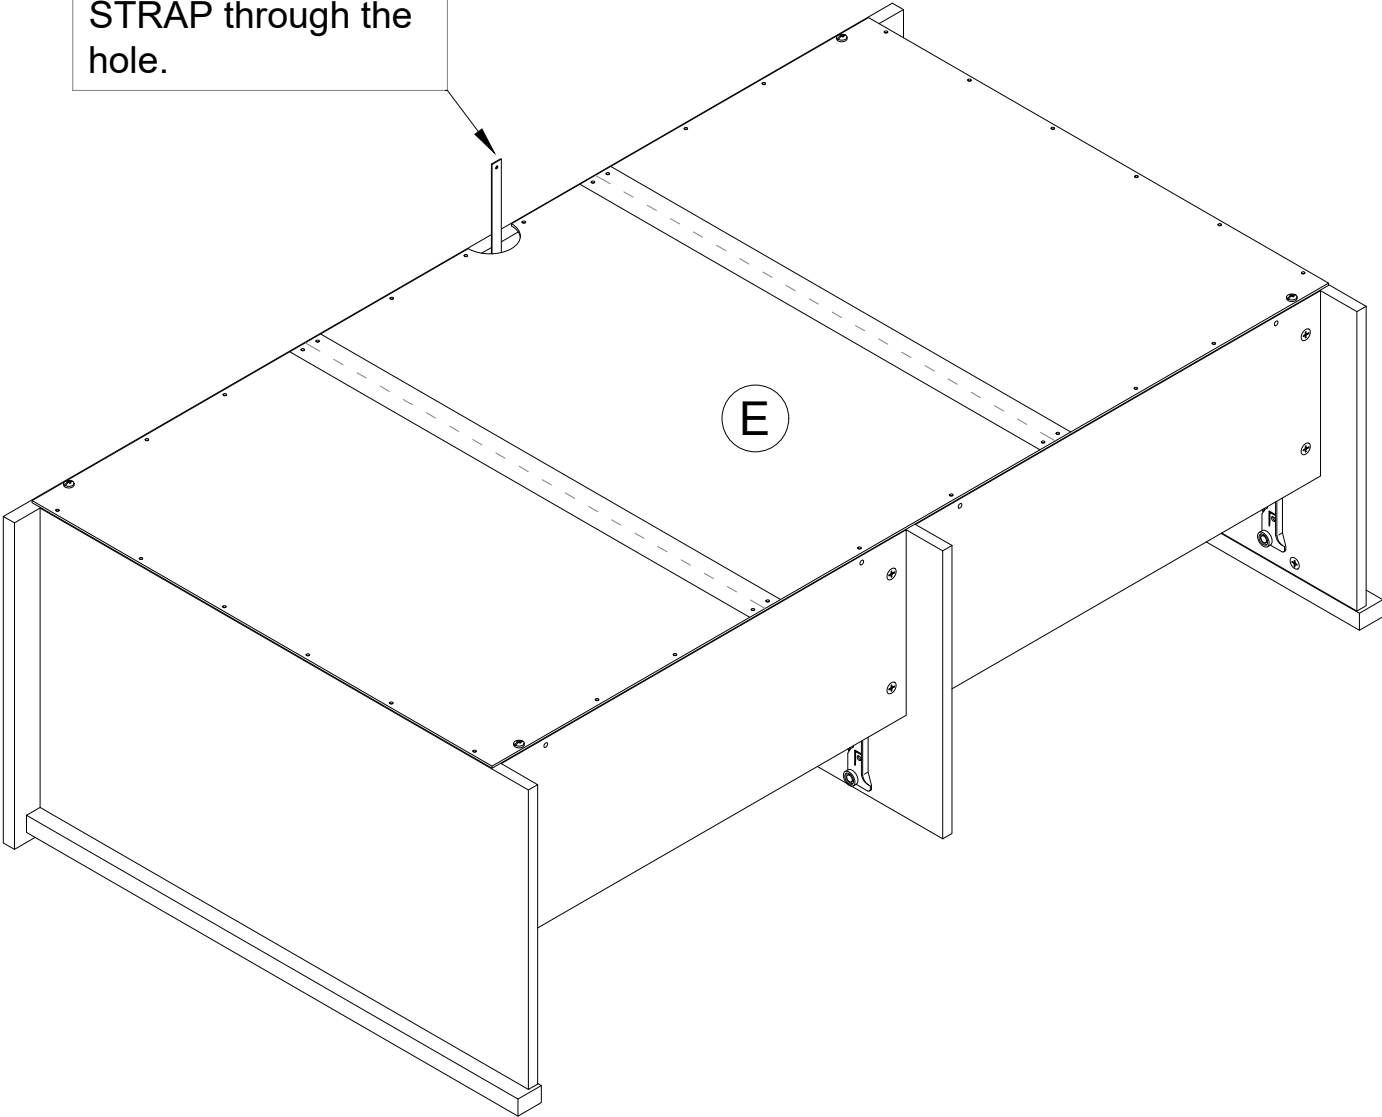


Step 18

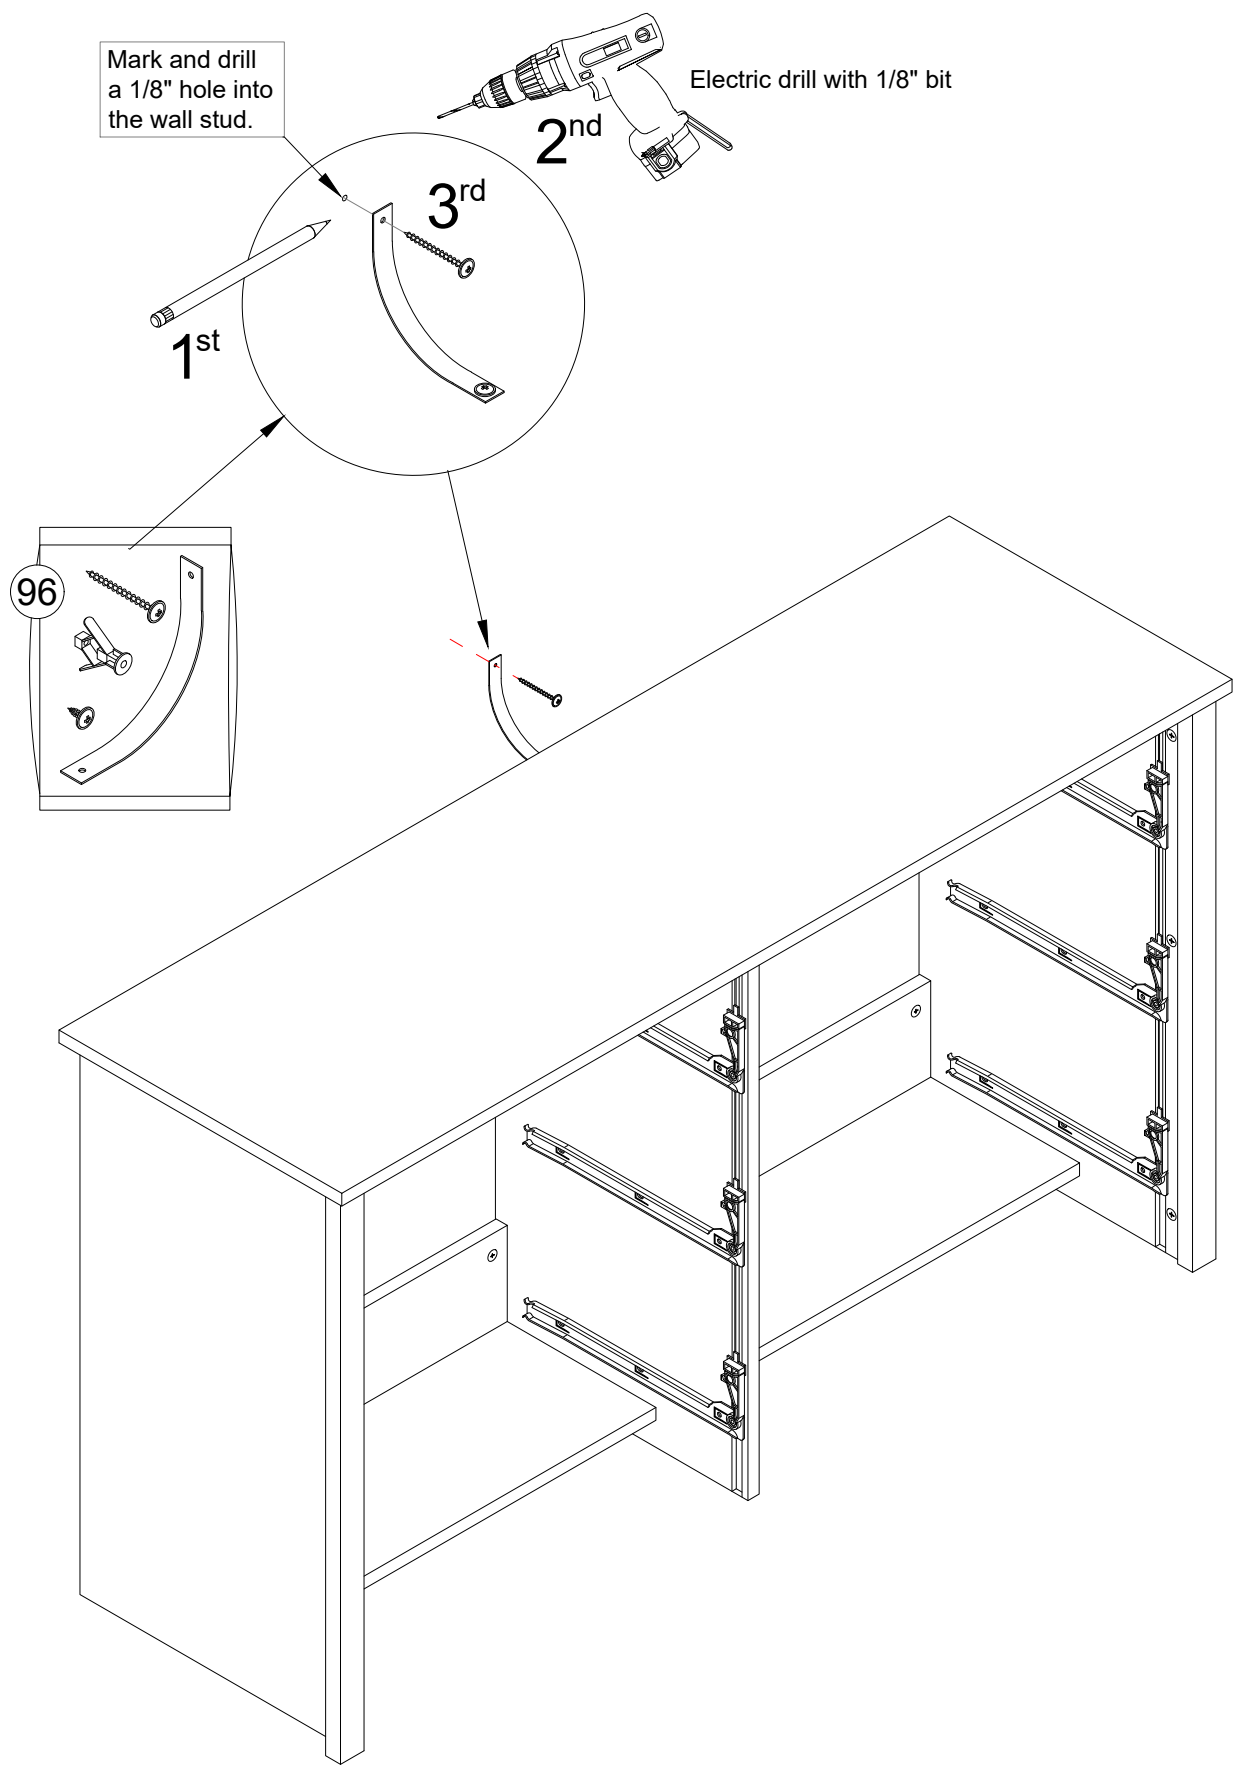


Step 19

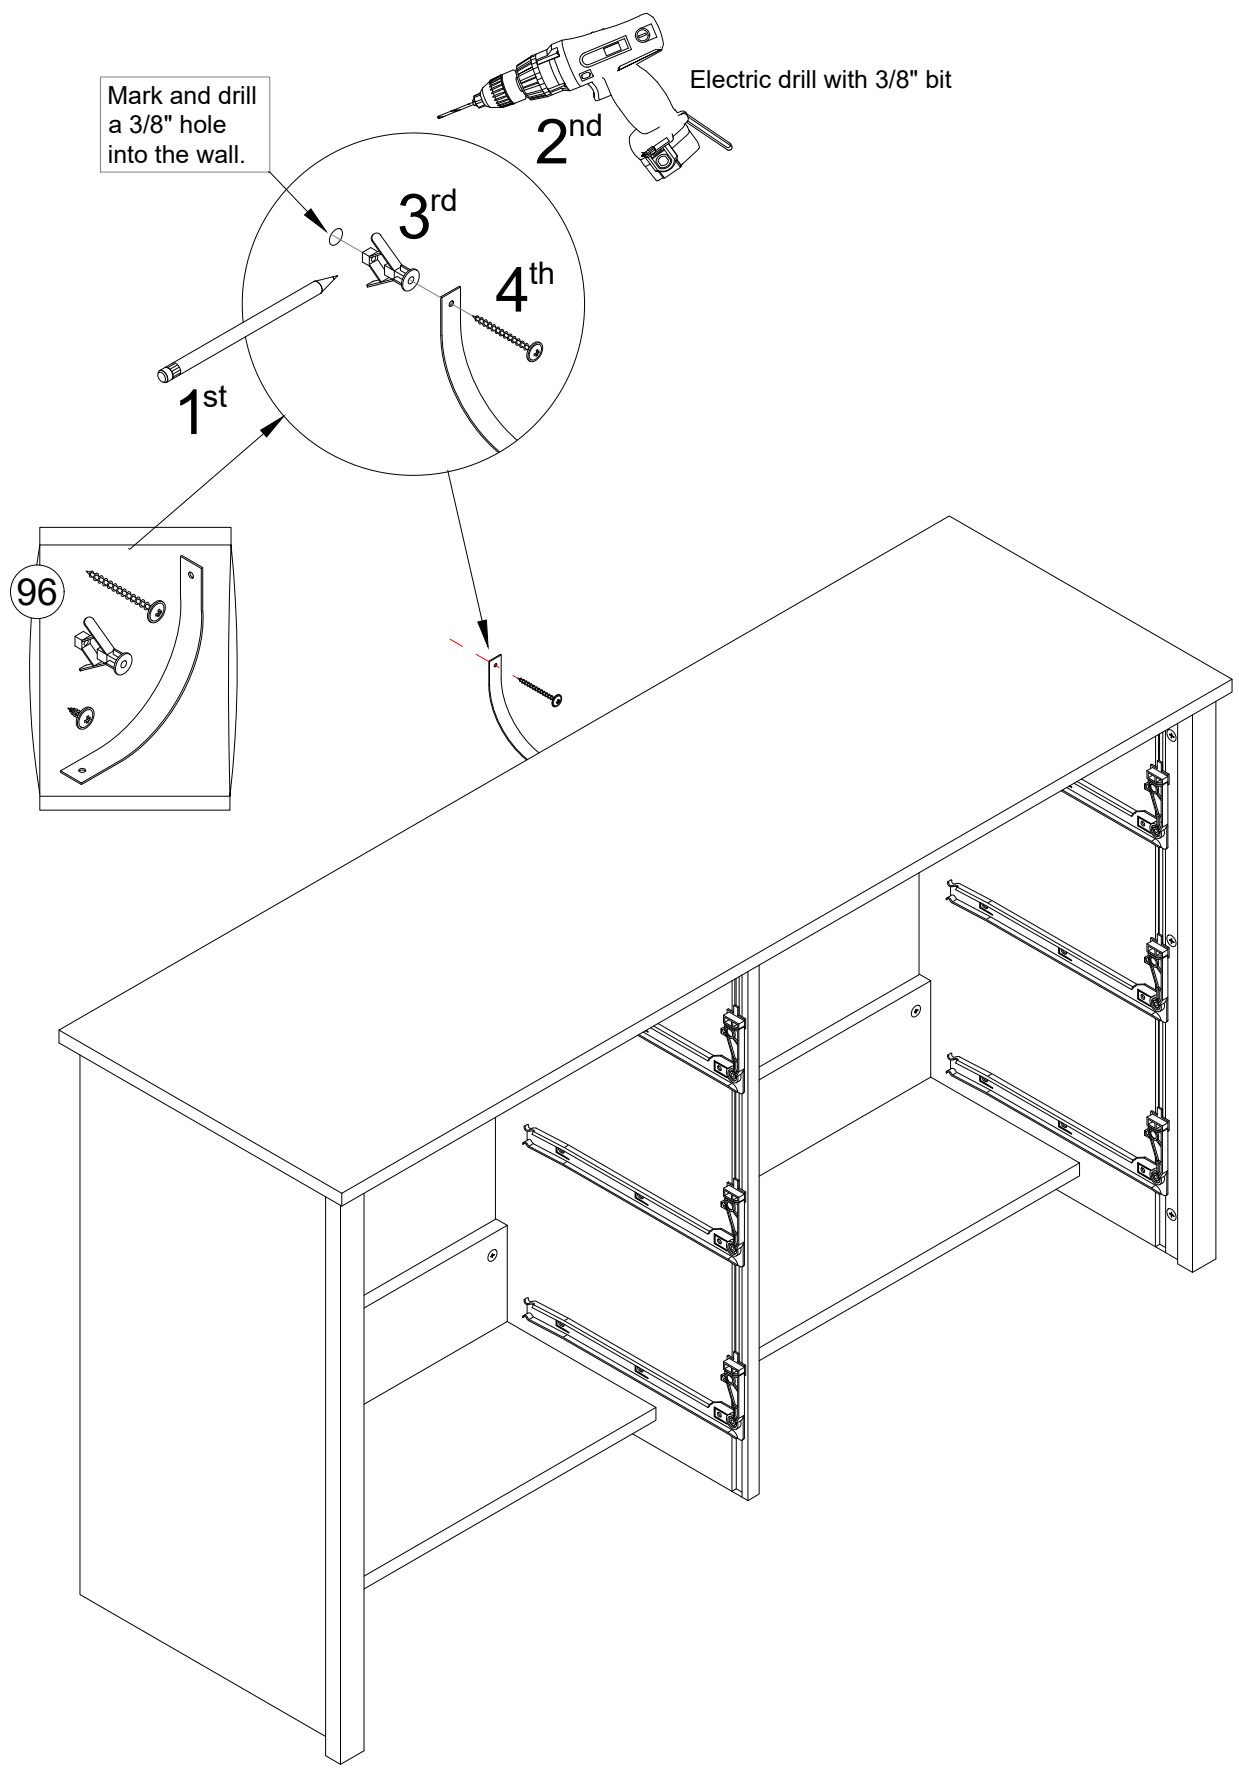

Step 20

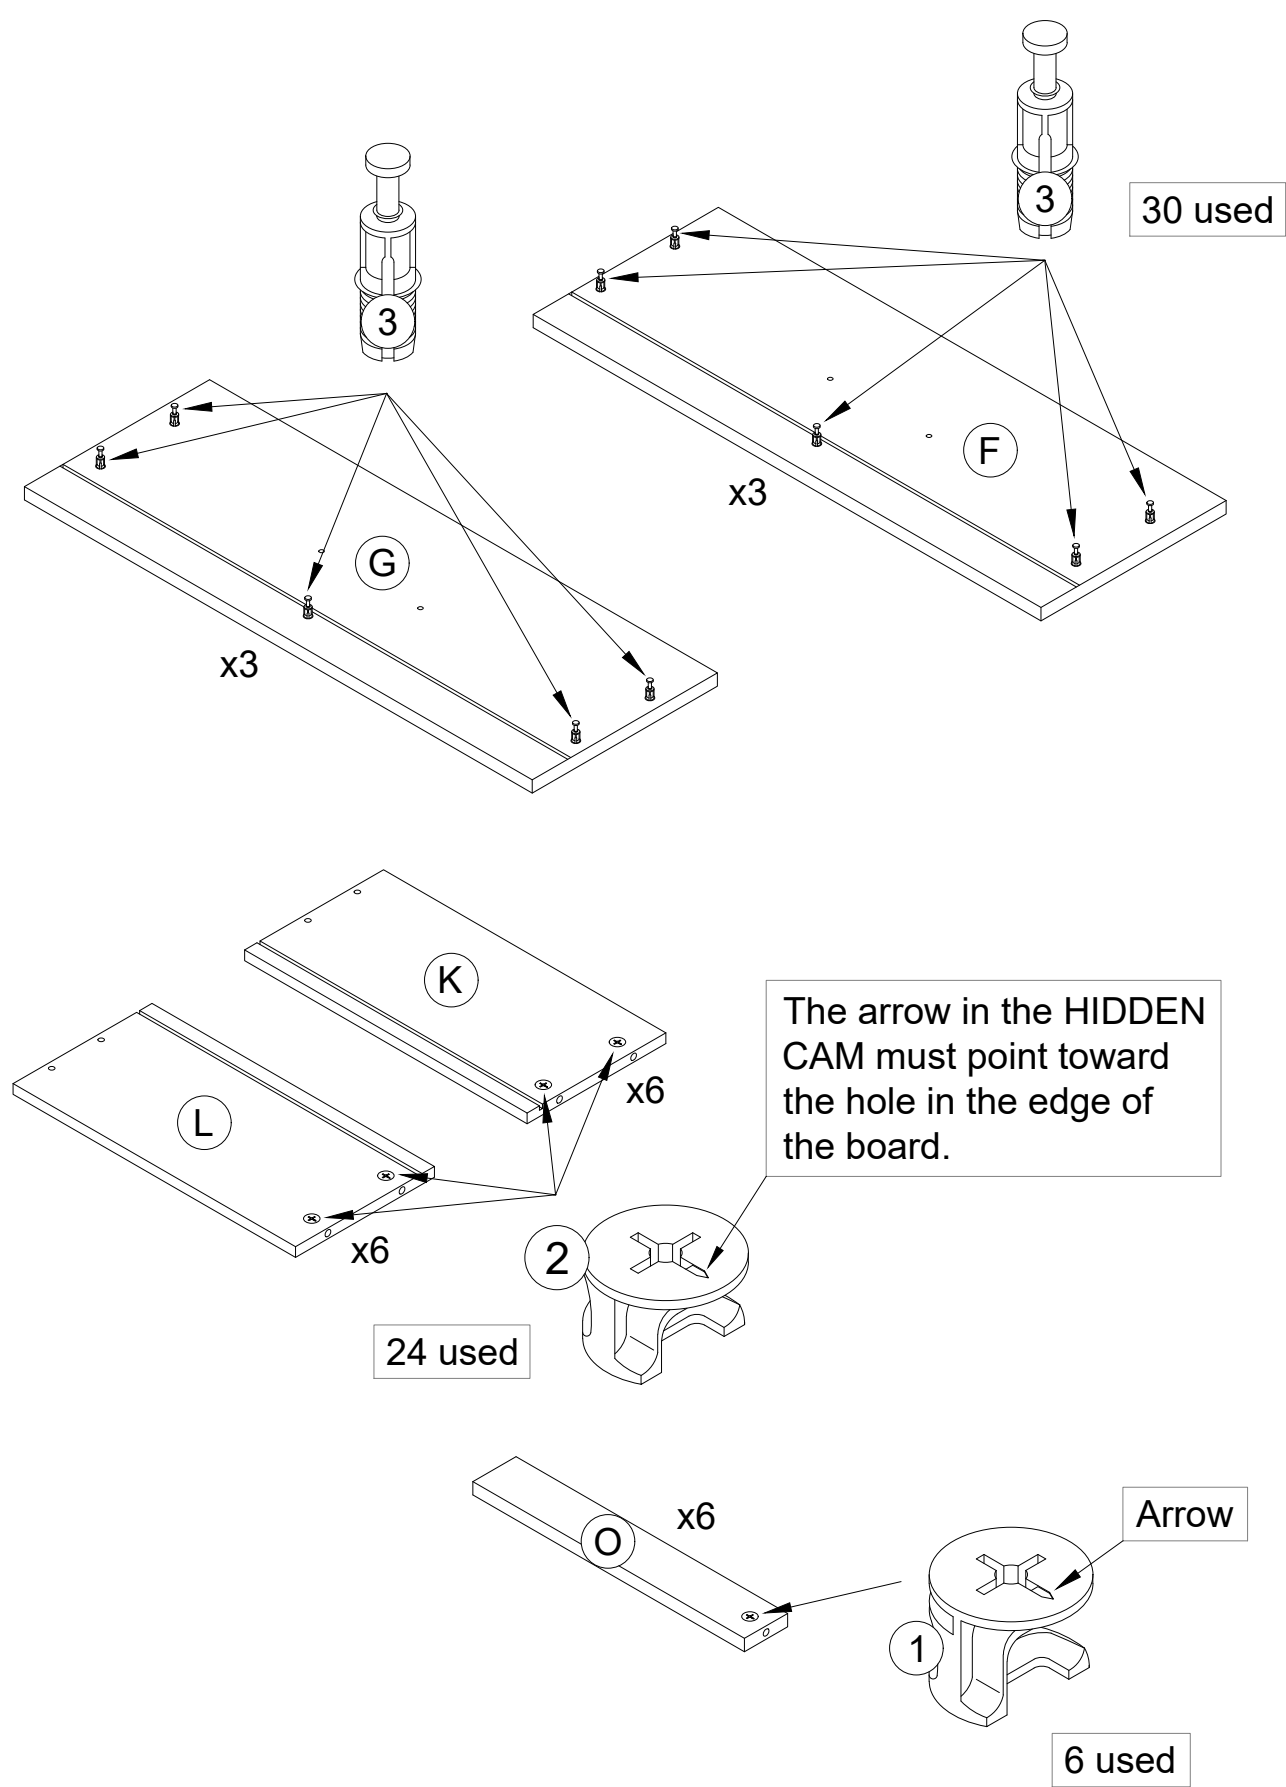


Step 21

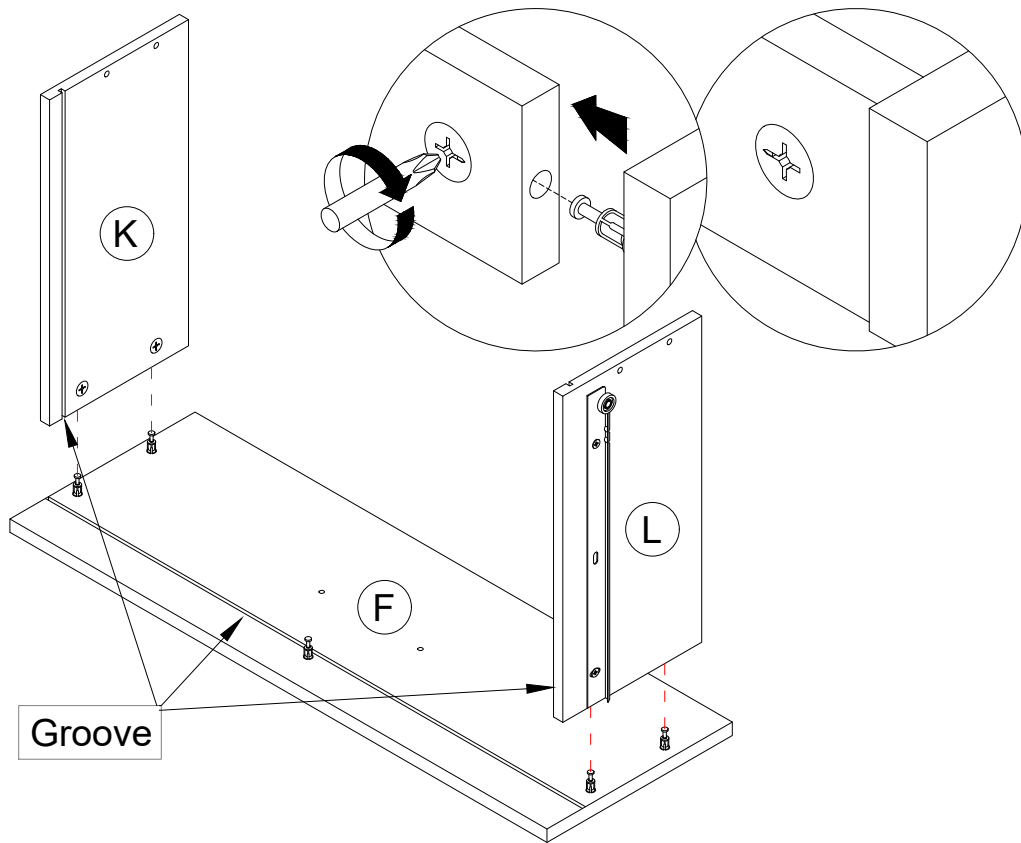


*Repeat this step for the remaining five drawers.

Step 22

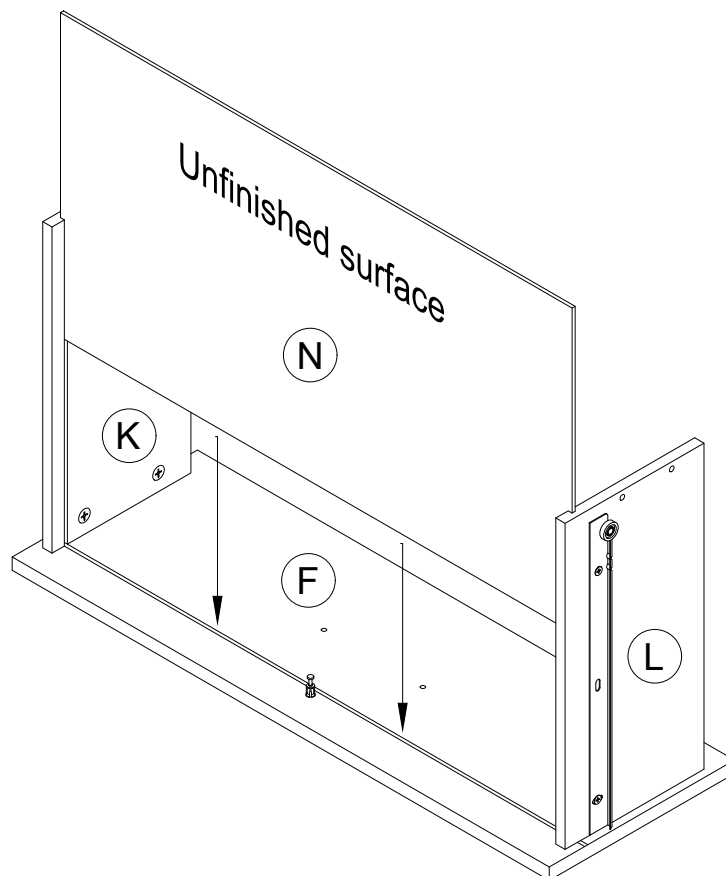


*Repeat this step for the remaining five drawers.

Step 23

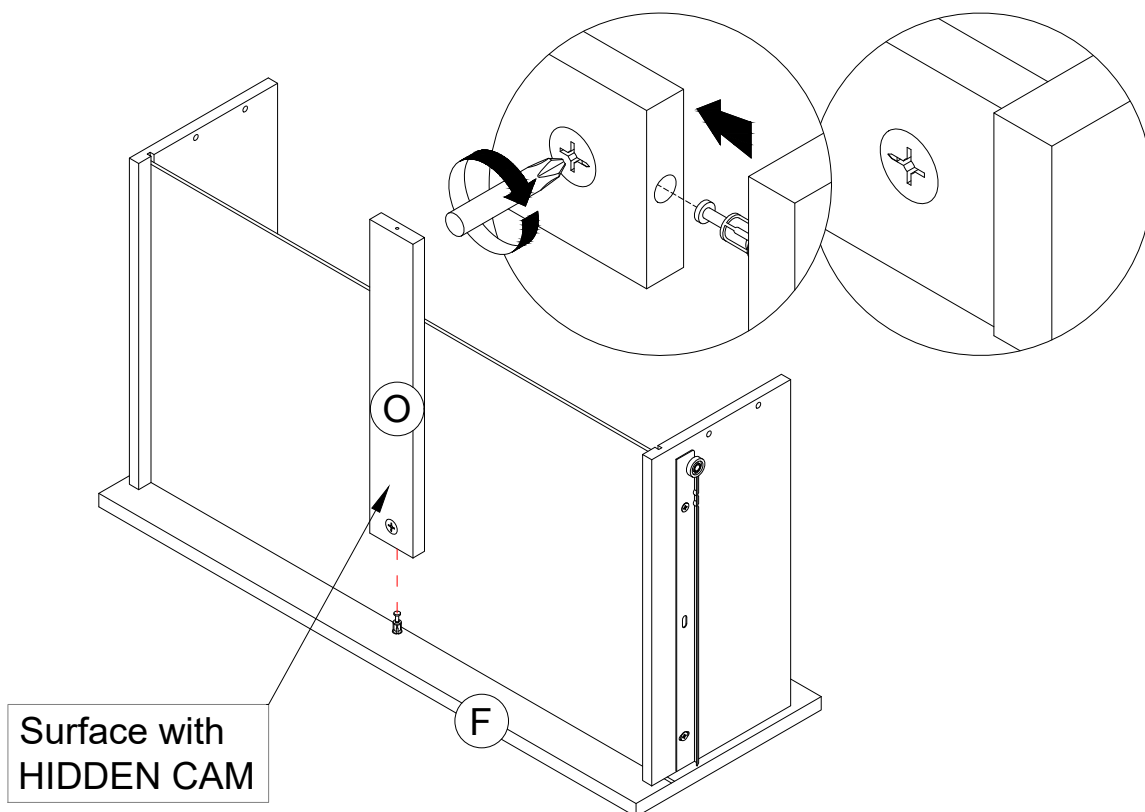


*Repeat this step for the
remaining five drawers.

Step 24

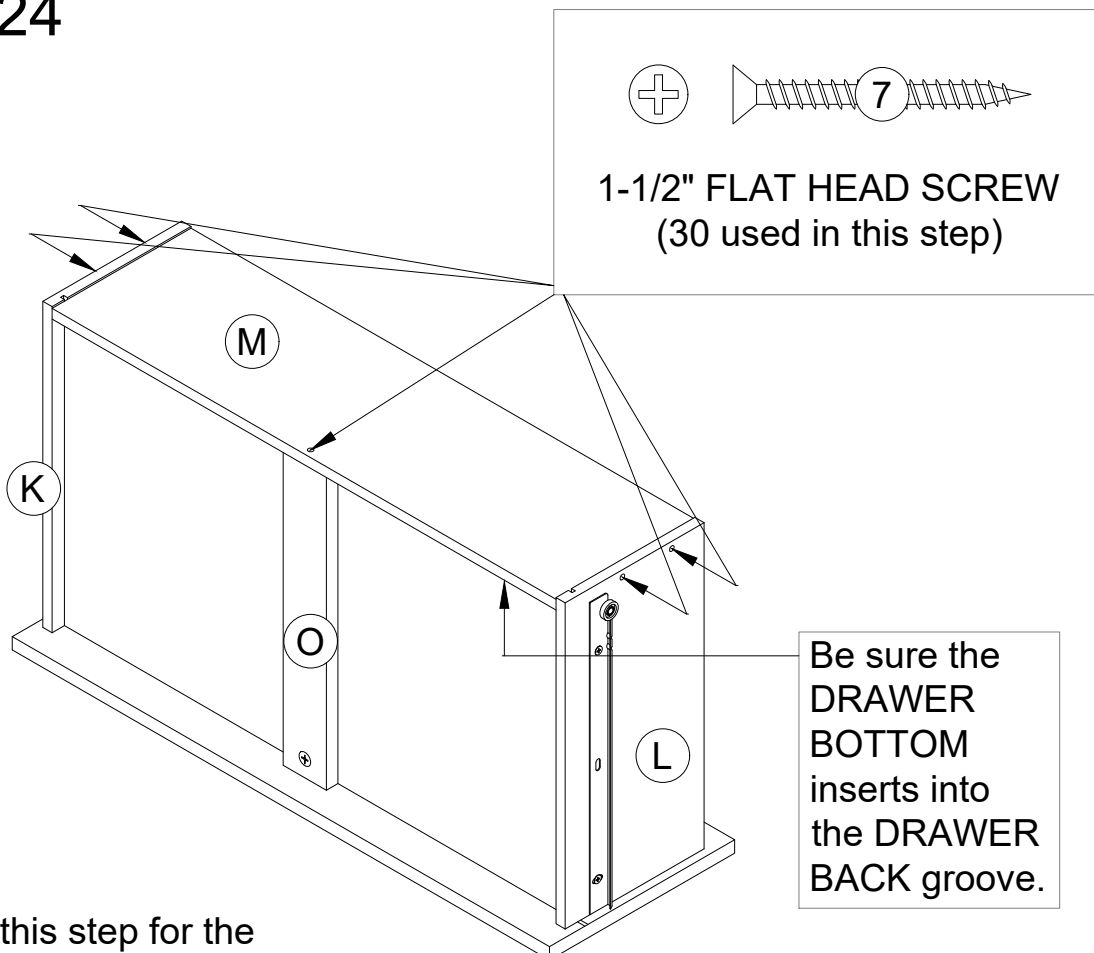


*Repeat this step for the
remaining five drawers.

Step 25

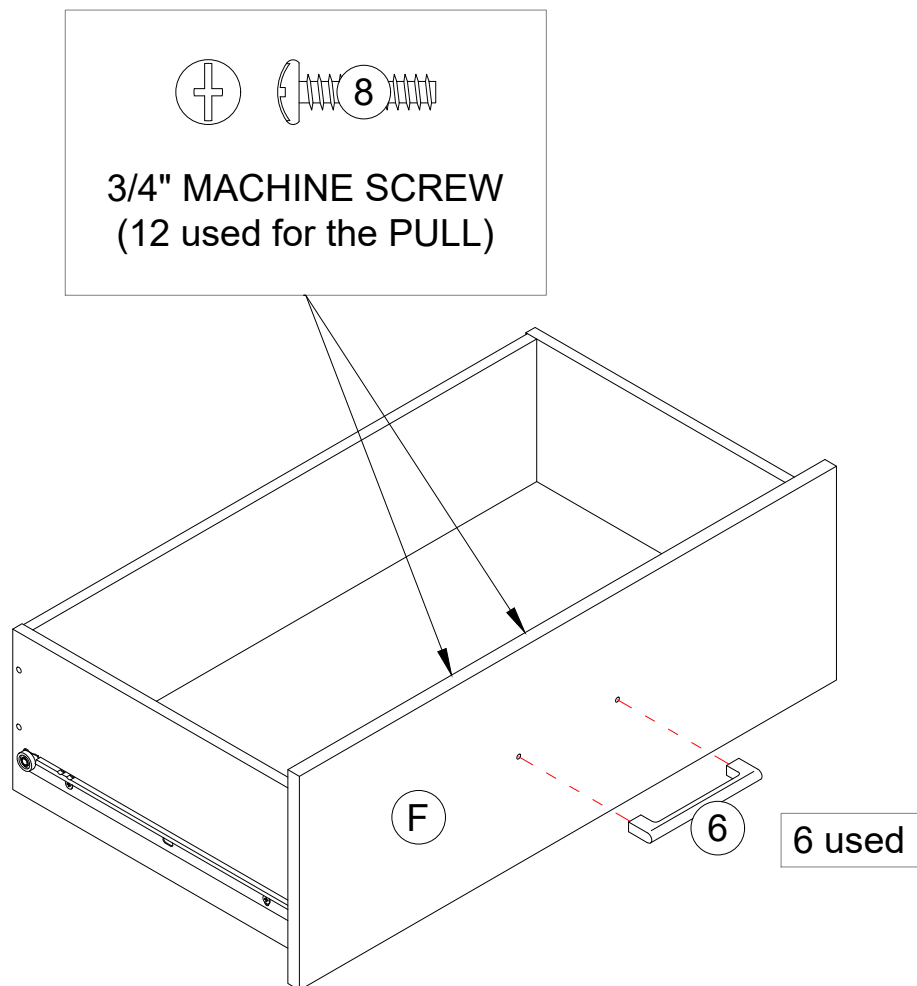


*Repeat this step for the remaining five drawers.

Step 26

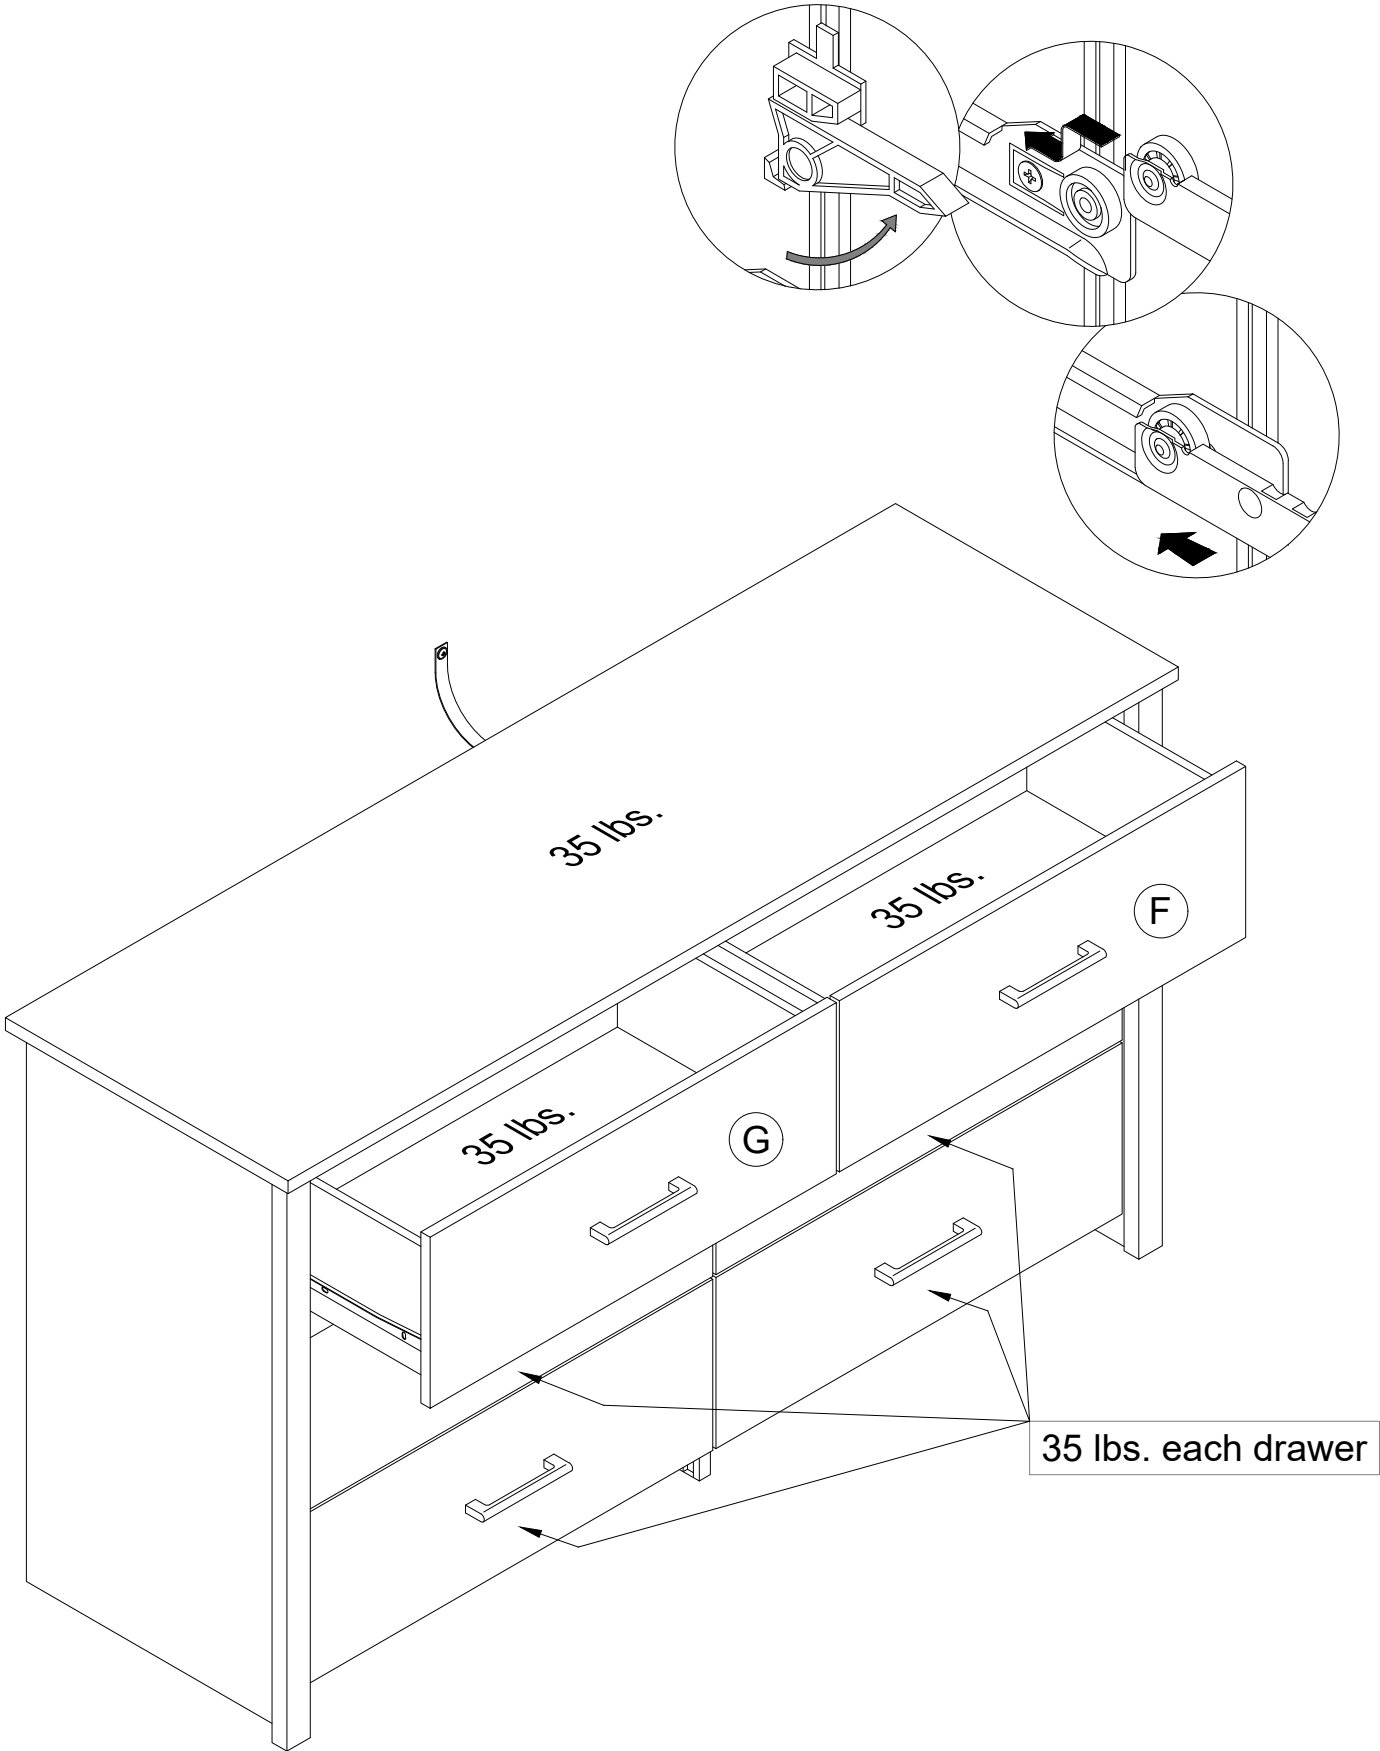

Step 27

Loosen screw #2 a 1/4 turn, the cam a 1/4 turn maximum in both the clockwise and counter-clockwise directions to make adjustments, and then tighten screw #2

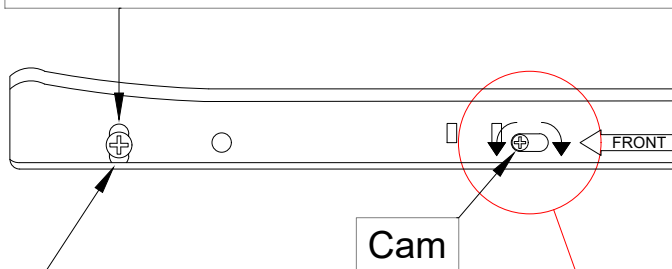

The higher the screw in the oblong hole, the higher your drawer front will be. The lower the screw, the lower the drawer front.

