




Assembly Instruction

Item No : 96005


Description: 2 Doors Wardrobe



TOOL REQUIRED

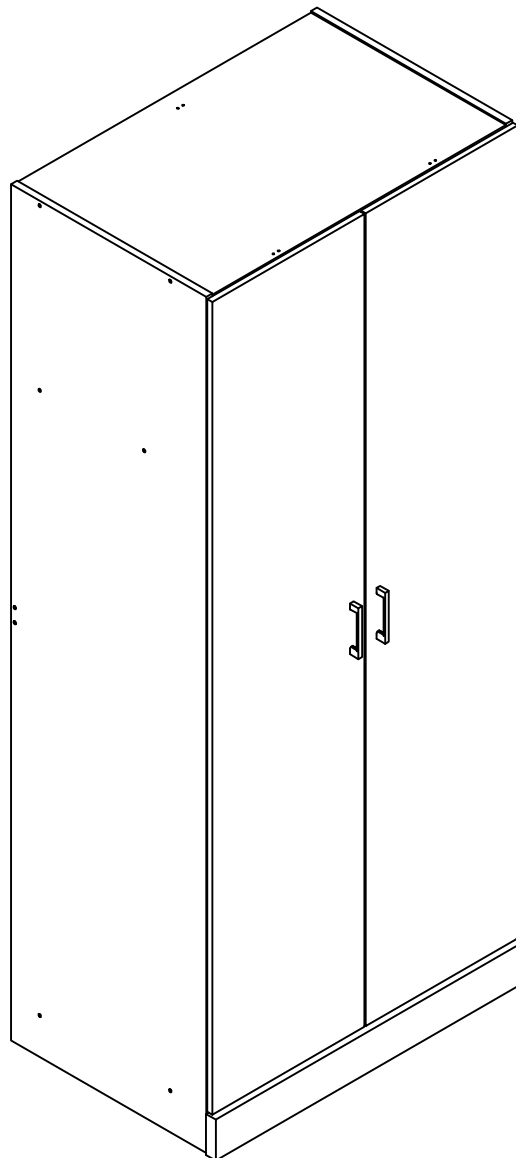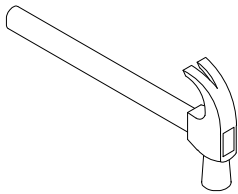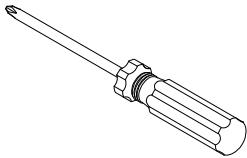

EXPLODED VIEW

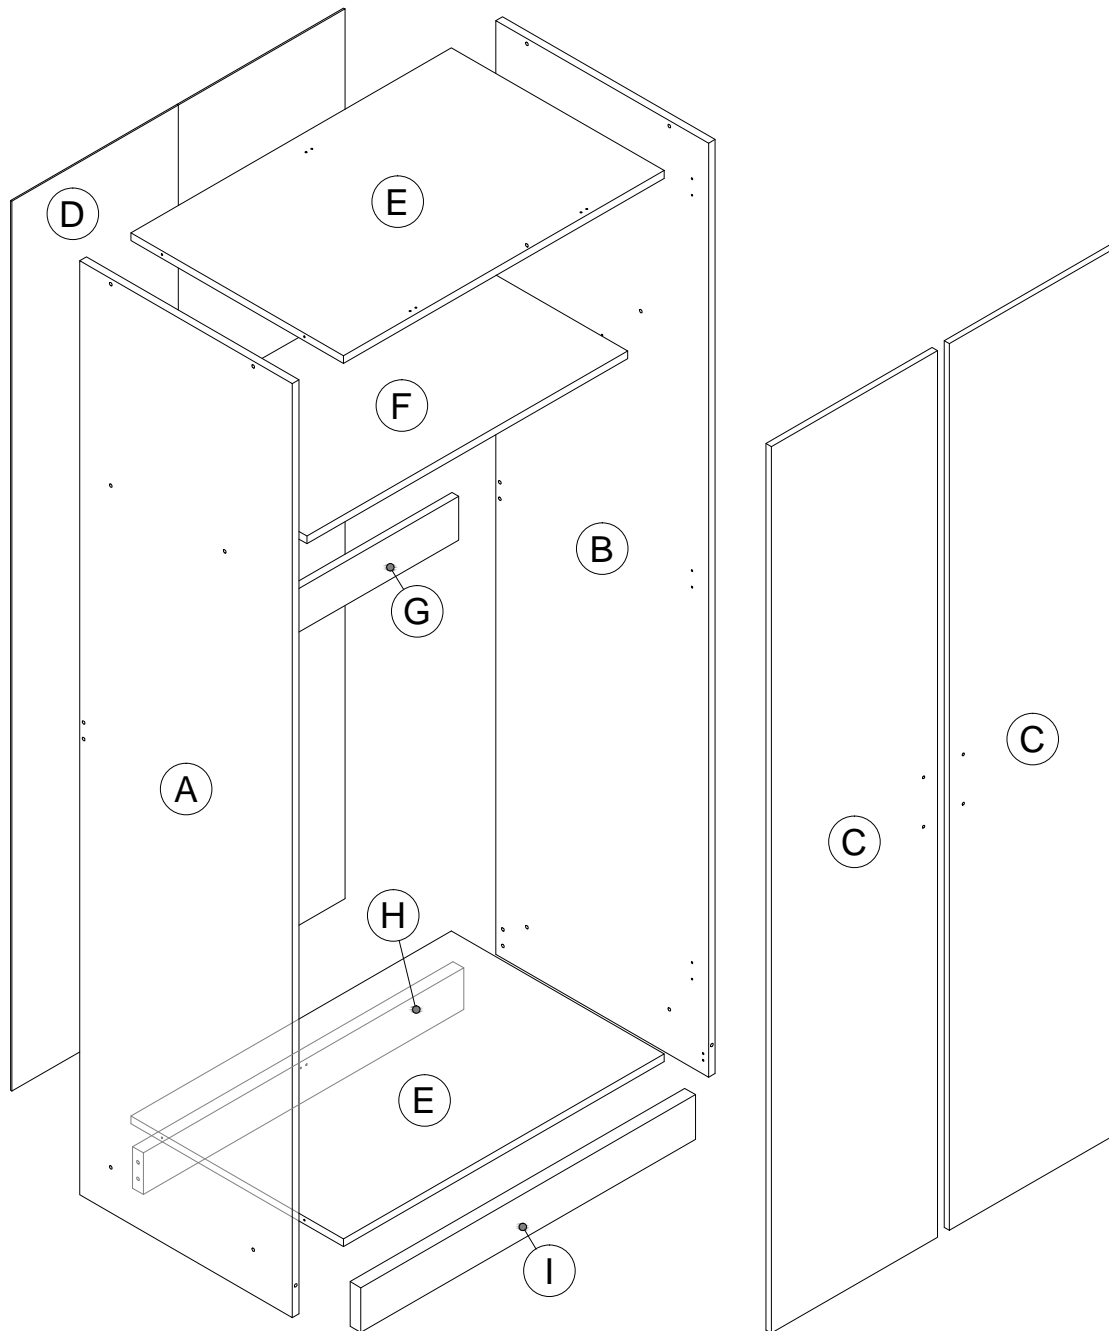


USEFUL HINTS BEFORE YOU START:

1. Read each step carefully before starting.
2. It is important that each step is performed in correct order to avoid difficulties.
3. Identify, soft and count the parts before assembly.
4. Assemble your furniture on packaging cardboard to prevent scratch or damage.
5. Clean the product with mild cleanser using soft damped cloth. Do not use harsh or abrasive cleanser.
6. Using incompatible hardware might cause damage to product.

PARTS LIST


A

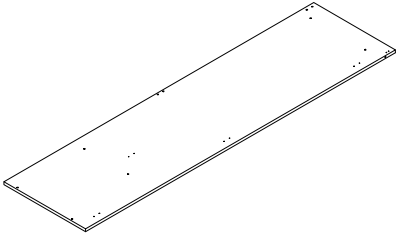

LEFT SIDE PANEL

1 PC


B

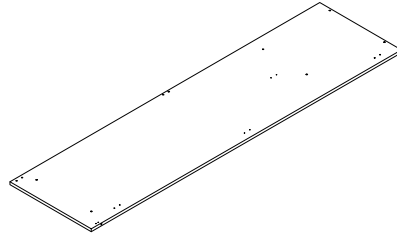

RIGHT SIDE PANEL

1 PC


C

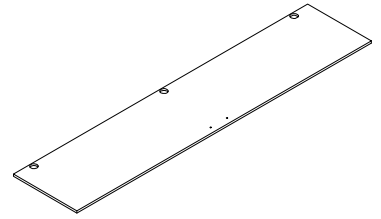

DOOR PANEL

2 PCS


D

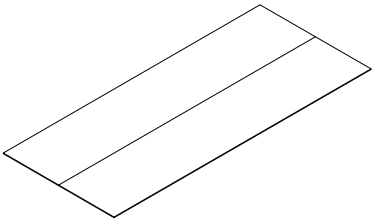

BACK PANEL

1 PC


E

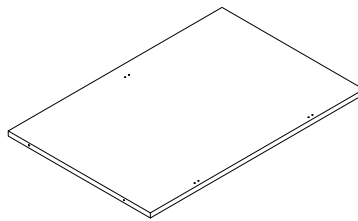

TOP PANEL &
BOTTOM PANEL

2 PCS


F

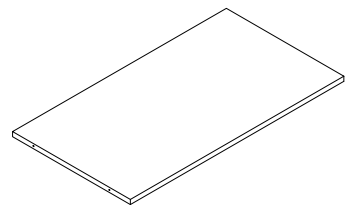

SHELF PANEL

1 PC


G

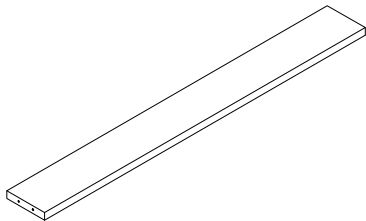

SUPPORT PANEL

1 PC


H

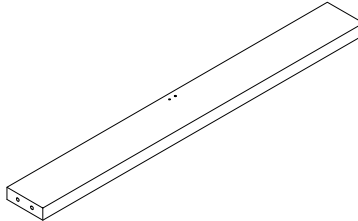

BACK LEG
SUPPORT PANEL

1 PC

I

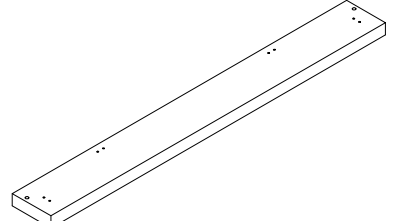


FRONT LEG
SUPPORT PANEL

1 PC

HARDWARE LIST


1

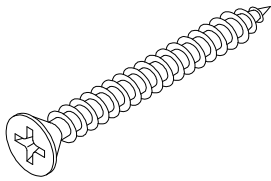

40MM SCREW

16 PCS


2

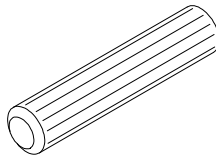

30MM WOOD DOWEL

6 PCS


3

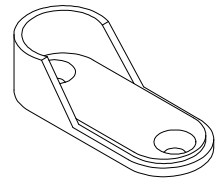

HANGING BRACKET

2 PCS


4

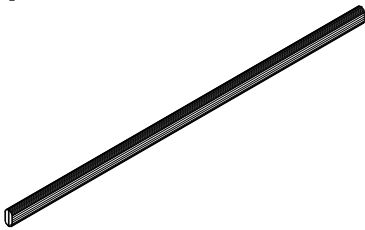

HANGING ROD

1 PC


5

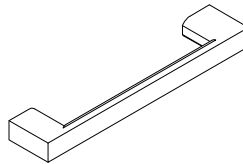

HANDLE

2 PCS


6

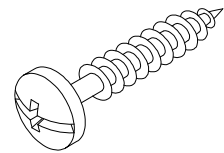

23MM SCREW

4 PCS


7

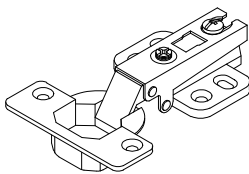

DOOR HINGES

6 PCS


8



12MM SCREW

48 PCS


9

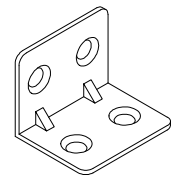

L-BRACKET

5 PCS


10

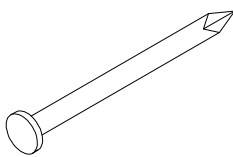

NAIL

52 PCS


11

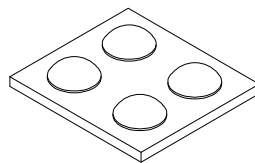

BUMPER PARECHOC

4 PCS

12



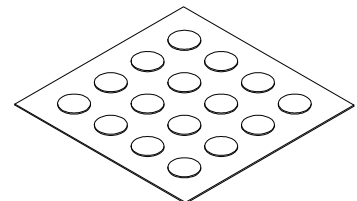


STICKER

16 PCS

HARDWARE LIST


96

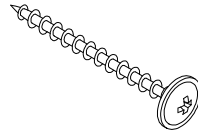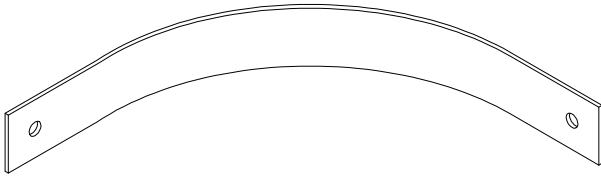

WALL MOUNT SET

1 PC

A

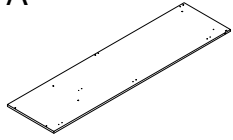

LEFT SIDE PANEL 1 PC

3




HANGING BRACKET 1 PC

8




12MM SCREW 2 PCS


STEP 1

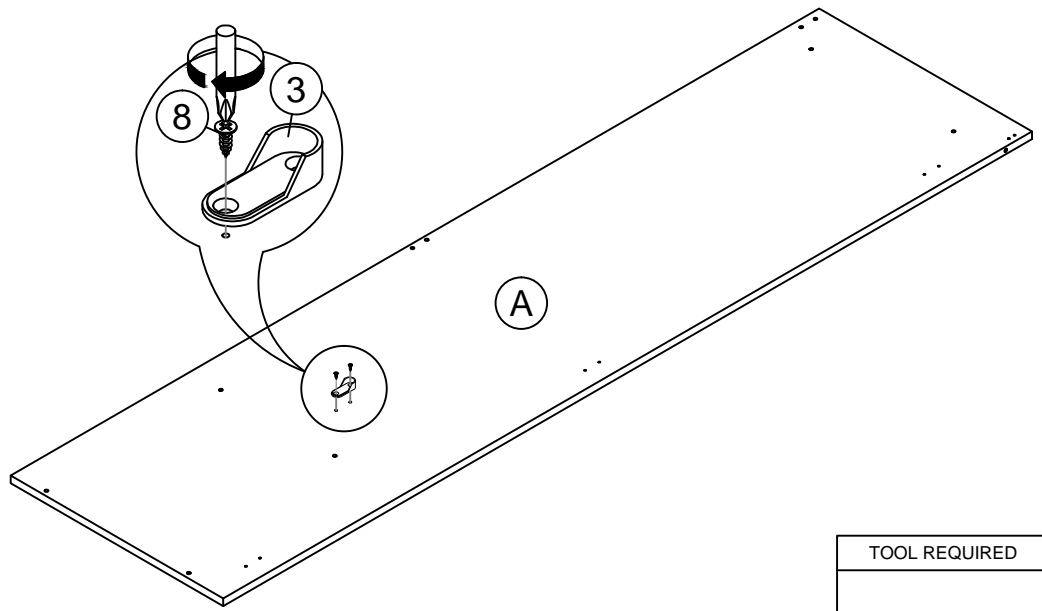

TOOL REQUIRED



B

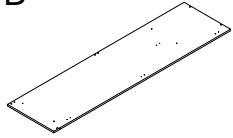

RIGHT SIDE PANEL 1 PC

3




HANGING BRACKET 1 PC

8





12MM SCREW 2 PCS

STEP 2

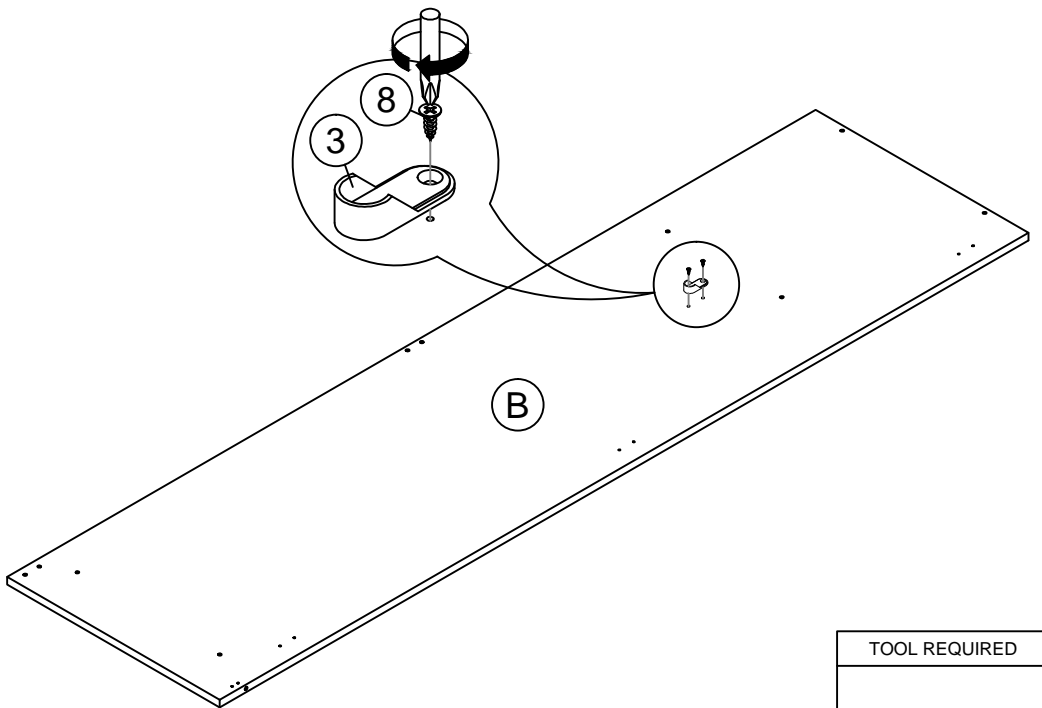


TOOL REQUIRED




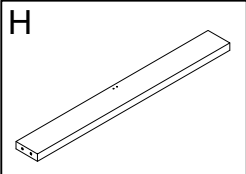


BACK LEG SUPPORT PANEL 1 PC

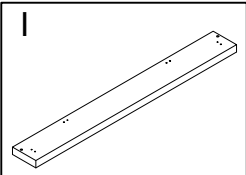


FRONT LEG SUPPORT PANEL 1 PC

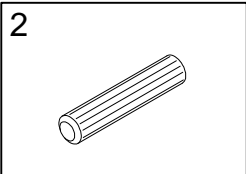

30MM WOOD DOWEL 4 PCS



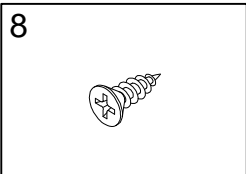


12MM SCREW 10 PCS

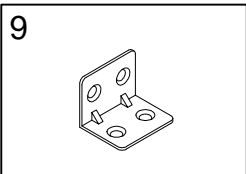


L-BRACKET 5 PCS


STEP 3

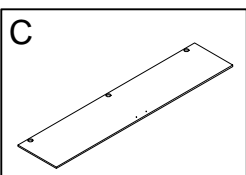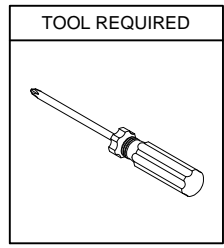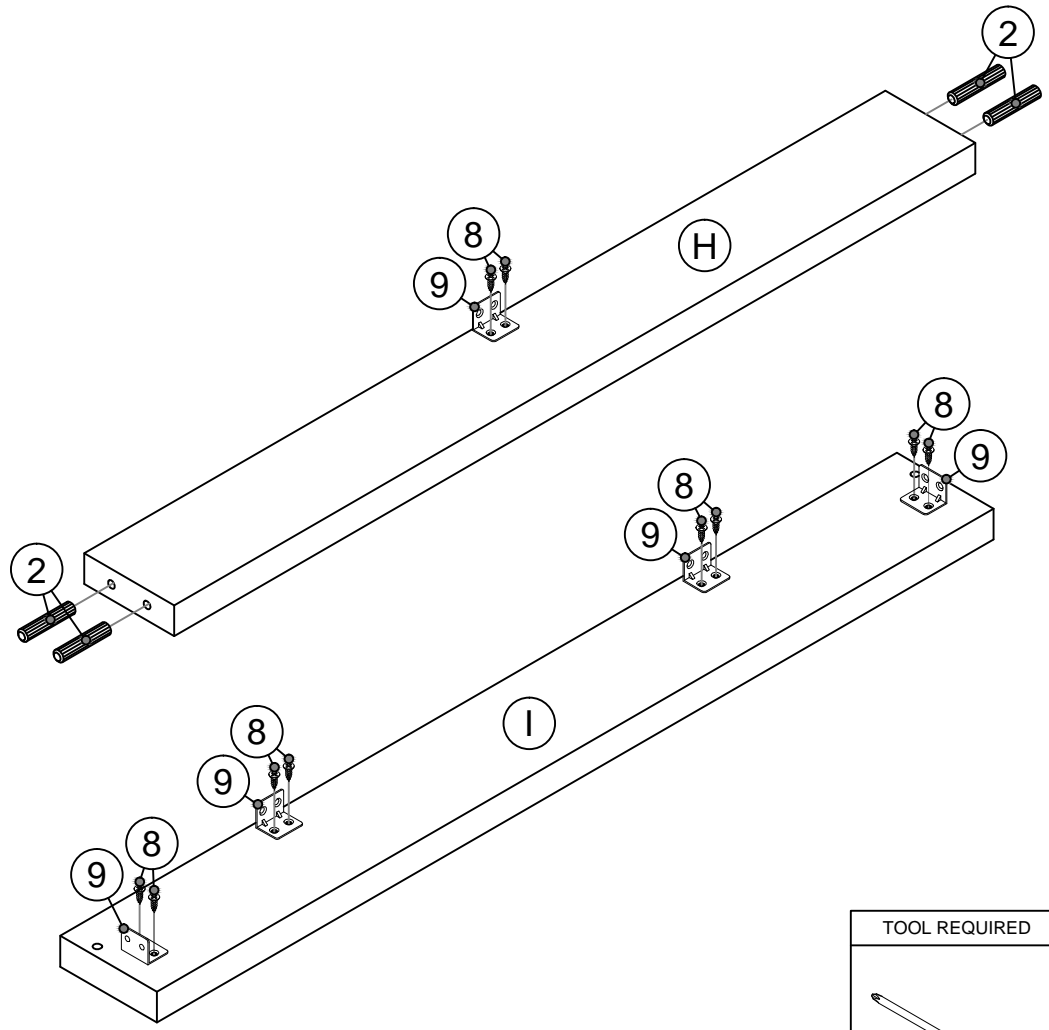

DOOR PANEL 2 PCS


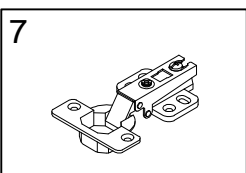



DOOR HINGES 6 PCS

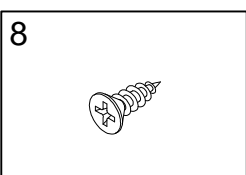


12MM SCREW 12 PCS

STEP 4

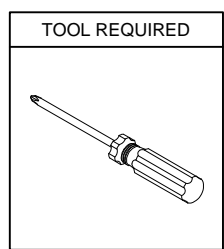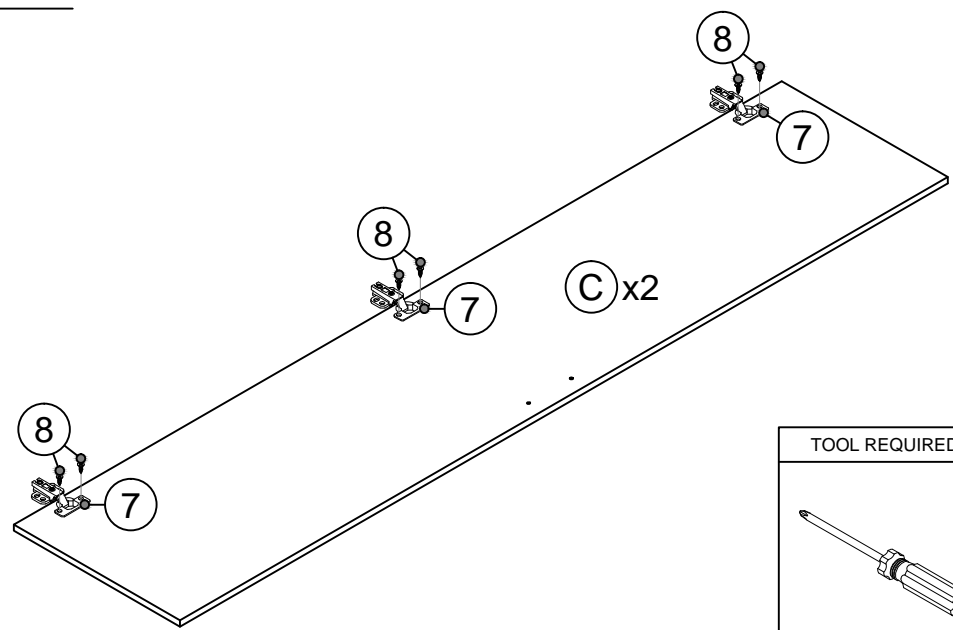


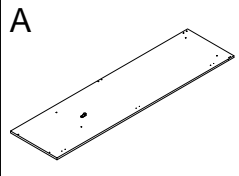


LEFT SIDE PANEL | 1 PC

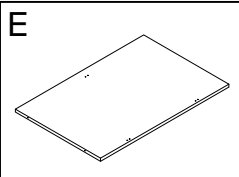

TOP PANEL & BOTTOM PANEL | 2 PCS



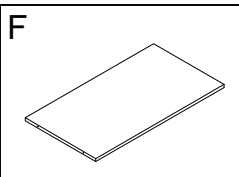


SHELF PANEL | 1 PC

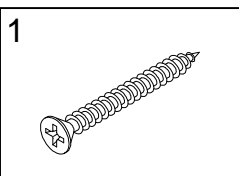


40MM SCREW | 6 PCS


STEP 5

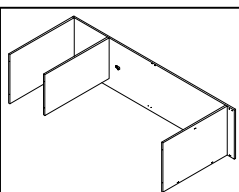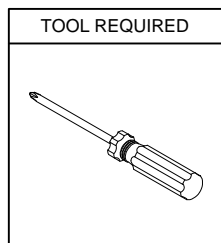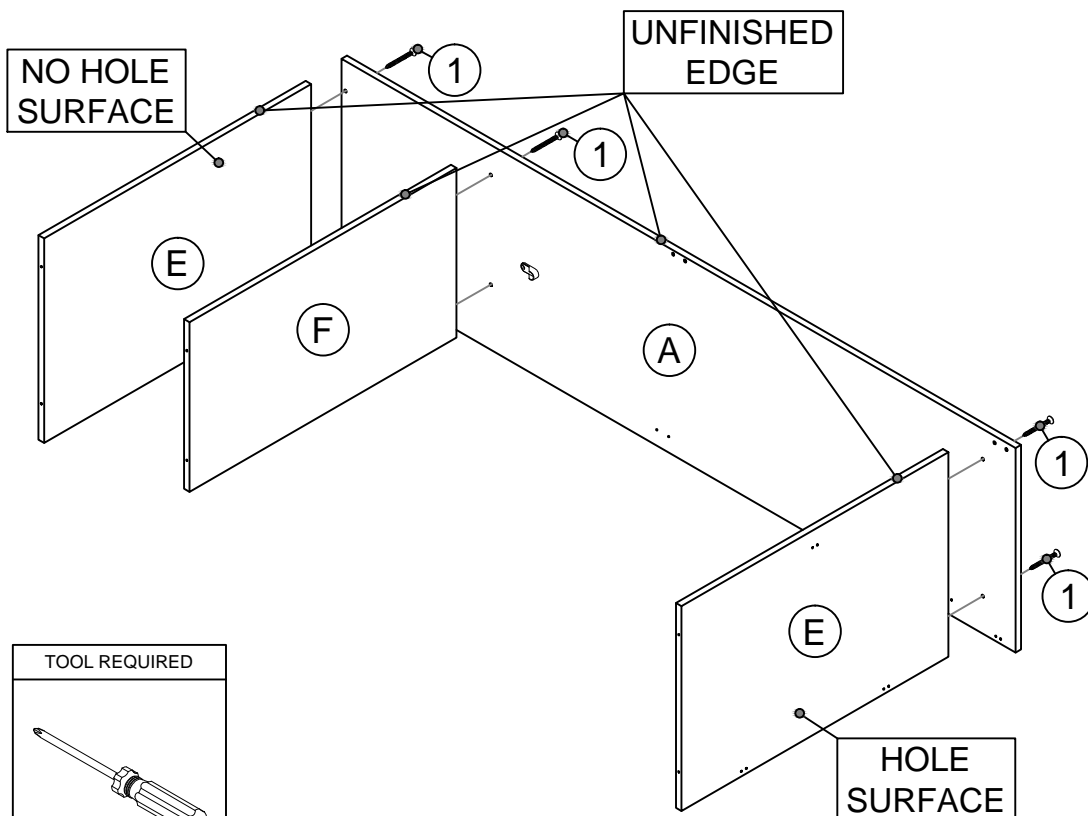

ASSEMBLED UNIT


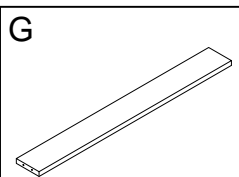


SUPPORT PANEL | 1 PC

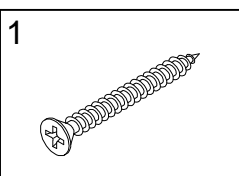


40MM SCREW | 2 PCS


STEP 6

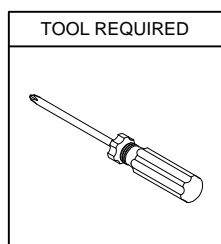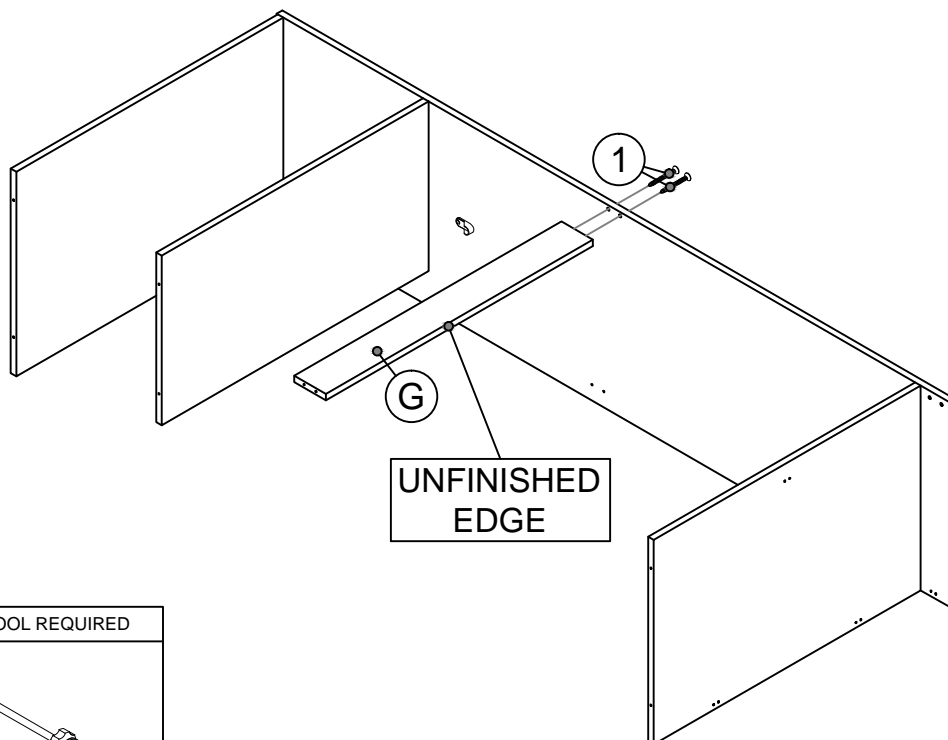


STEP 7

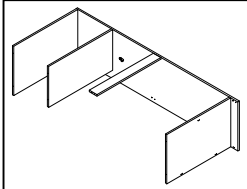


ASSEMBLED UNIT

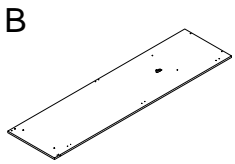



RIGHT SIDE PANEL 1 PC

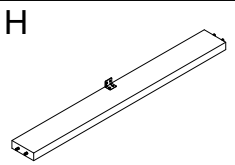

BACK LEG SUPPORT PANEL 1 PC

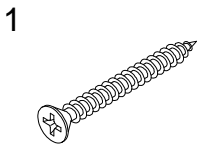


40MM SCREW 8 PCS

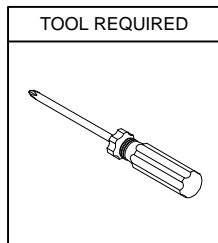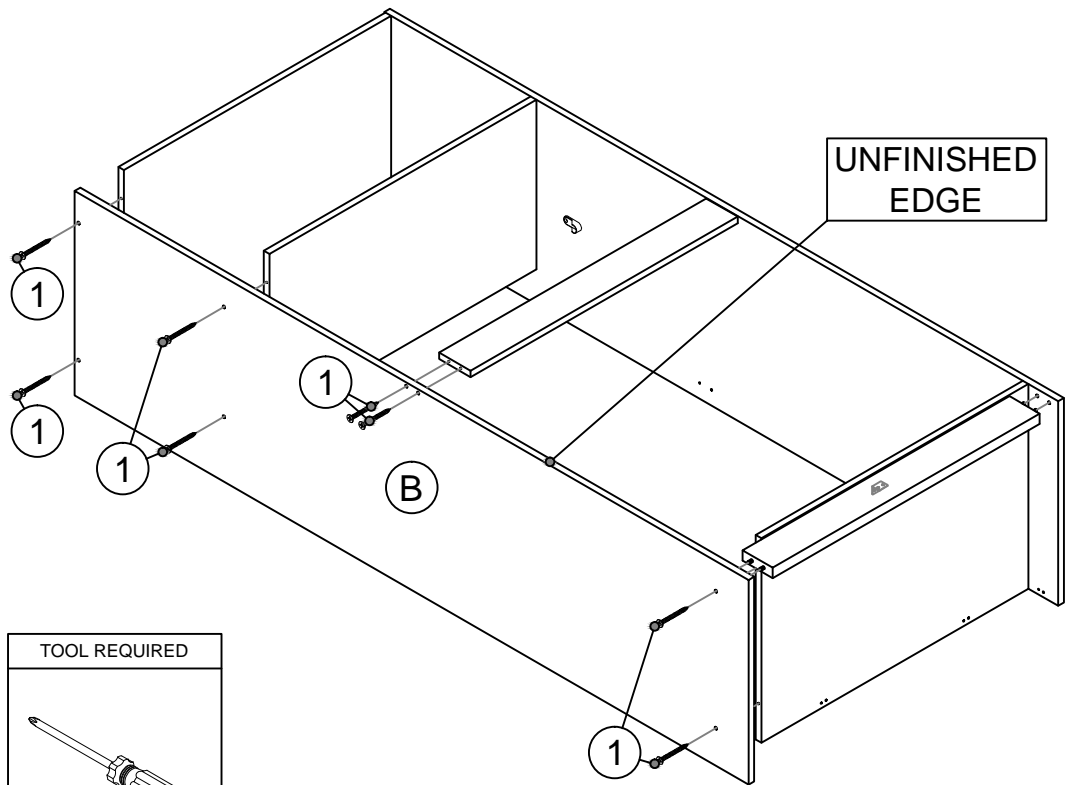


TOOL REQUIRED


STEP 8

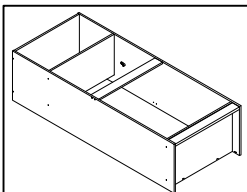



ASSEMBLED UNIT

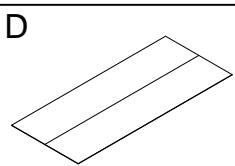


BACK PANEL 1 PC

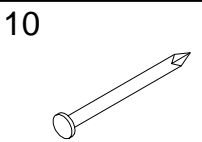


NAIL 52 PCS

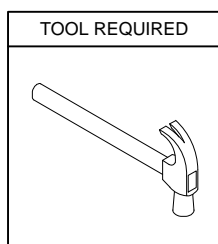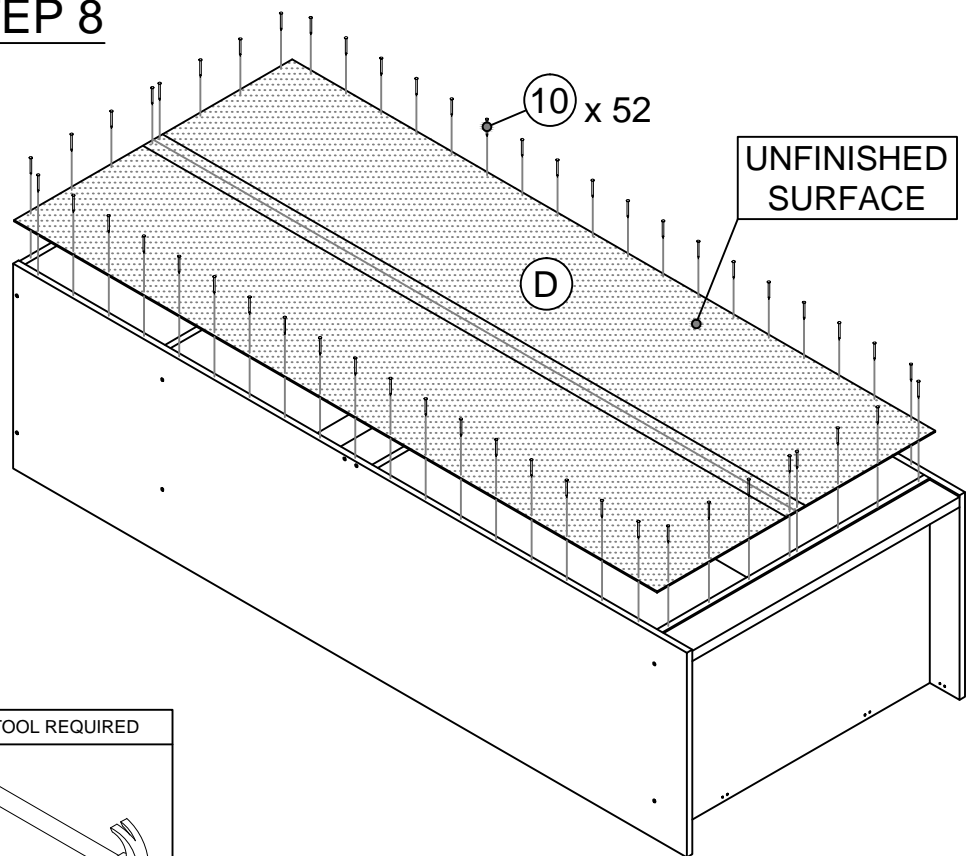

TOOL REQUIRED

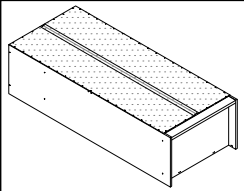


ASSEMBLED UNIT

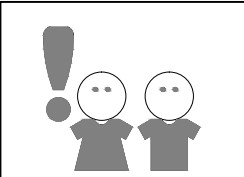


HELPER


STEP 9

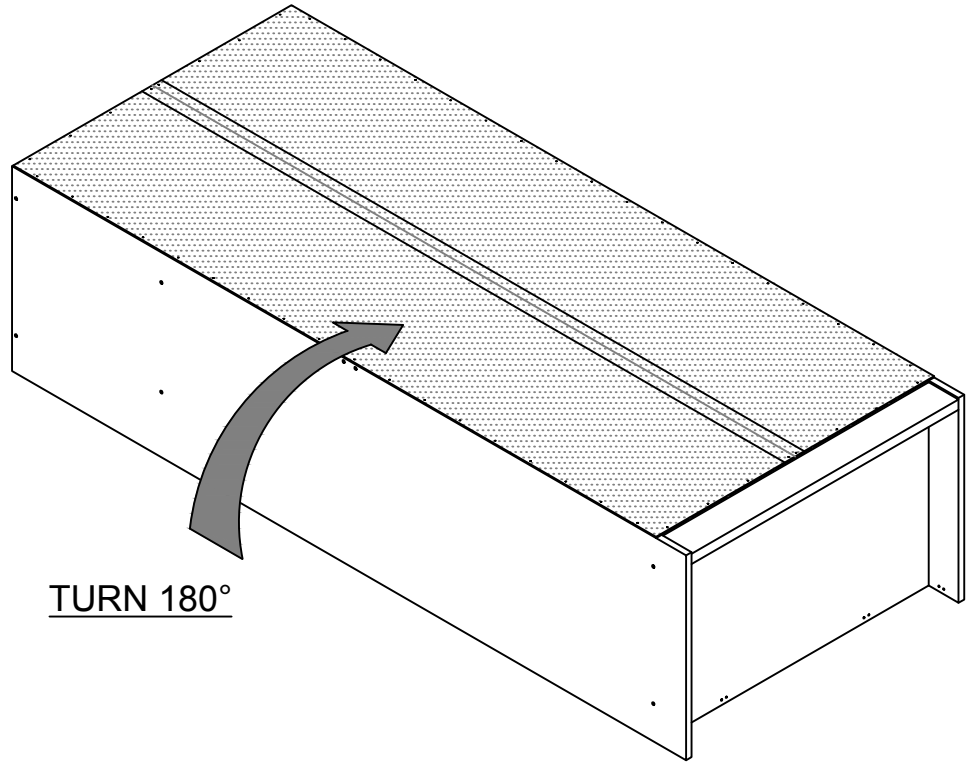


TURN 180°

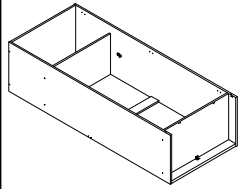

ASSEMBLED UNIT

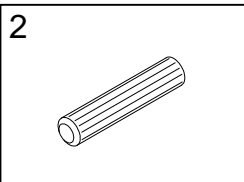


30MM WOOD DOWEL | 2 PCS

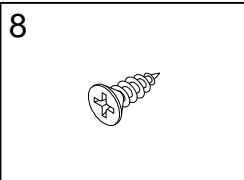


12MM SCREW | 2 PCS


STEP 10

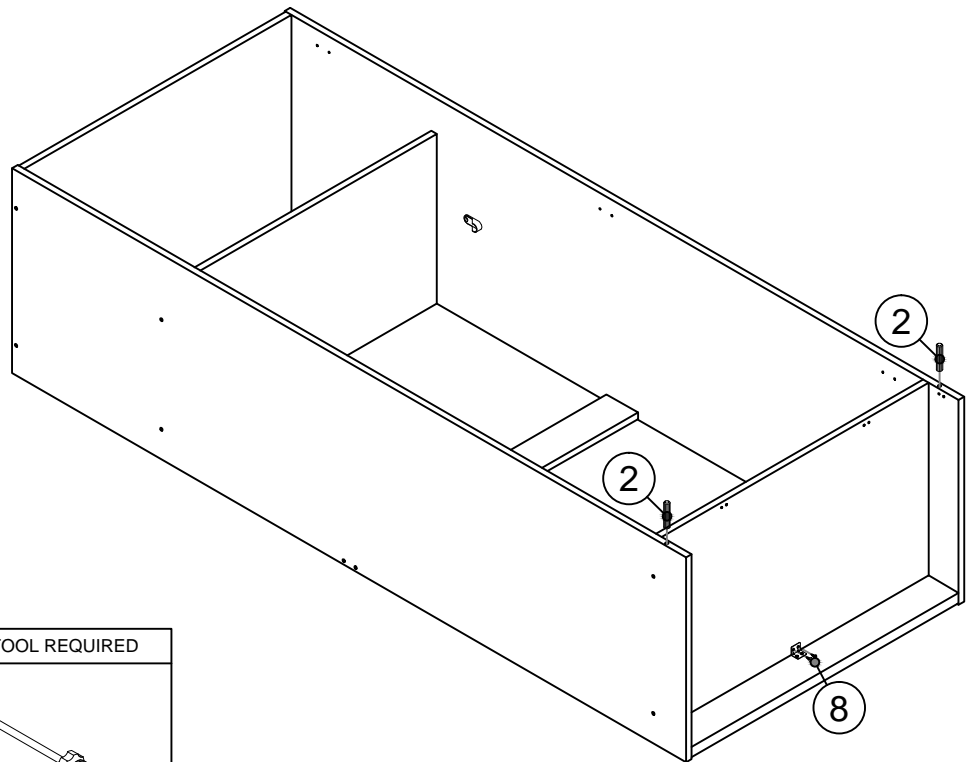


TOOL REQUIRED

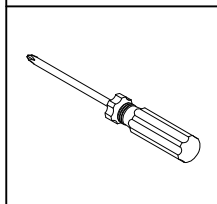


STEP 11

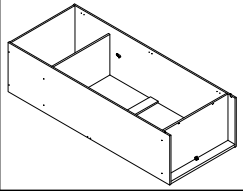


ASSEMBLED UNIT

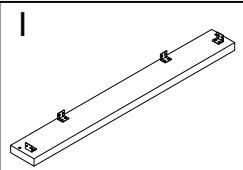


FRONT LEG
SUPPORT PANEL 1 PC

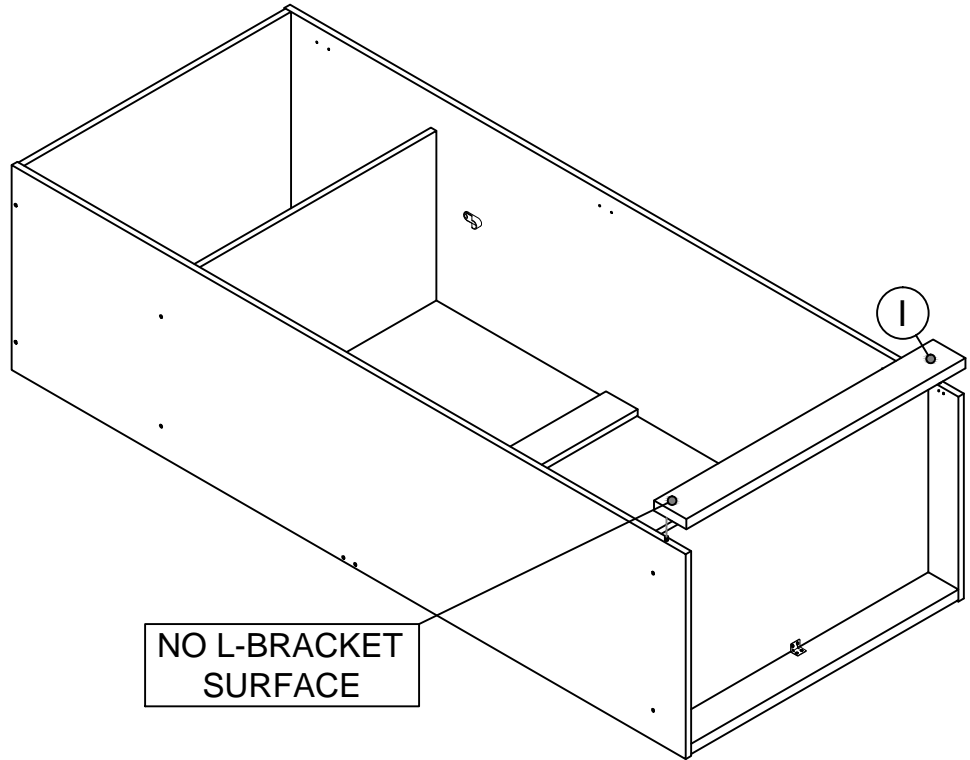


STEP 12

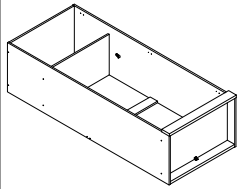


ASSEMBLED UNIT

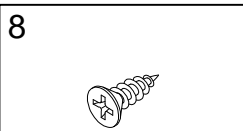


12MM SCREW 8 PCS

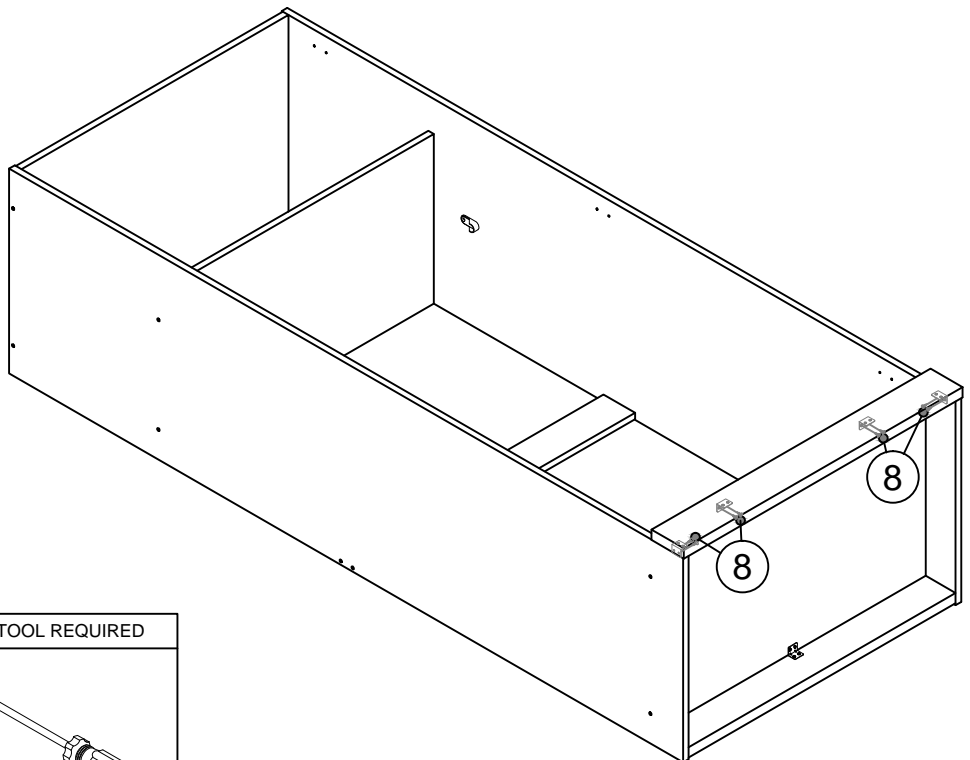


TOOL REQUIRED

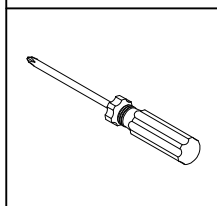


STEP 13

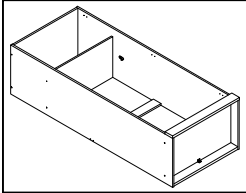


ASSEMBLED UNIT

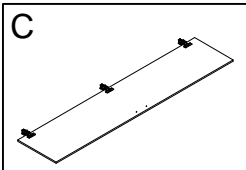



DOOR PANEL 2 PCS

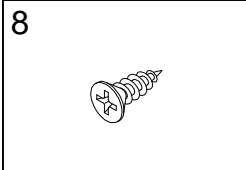


12MM SCREW 12 PCS

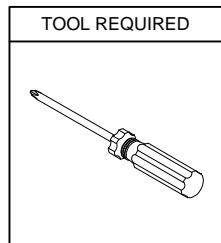


TOOL REQUIRED

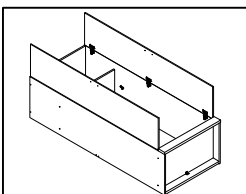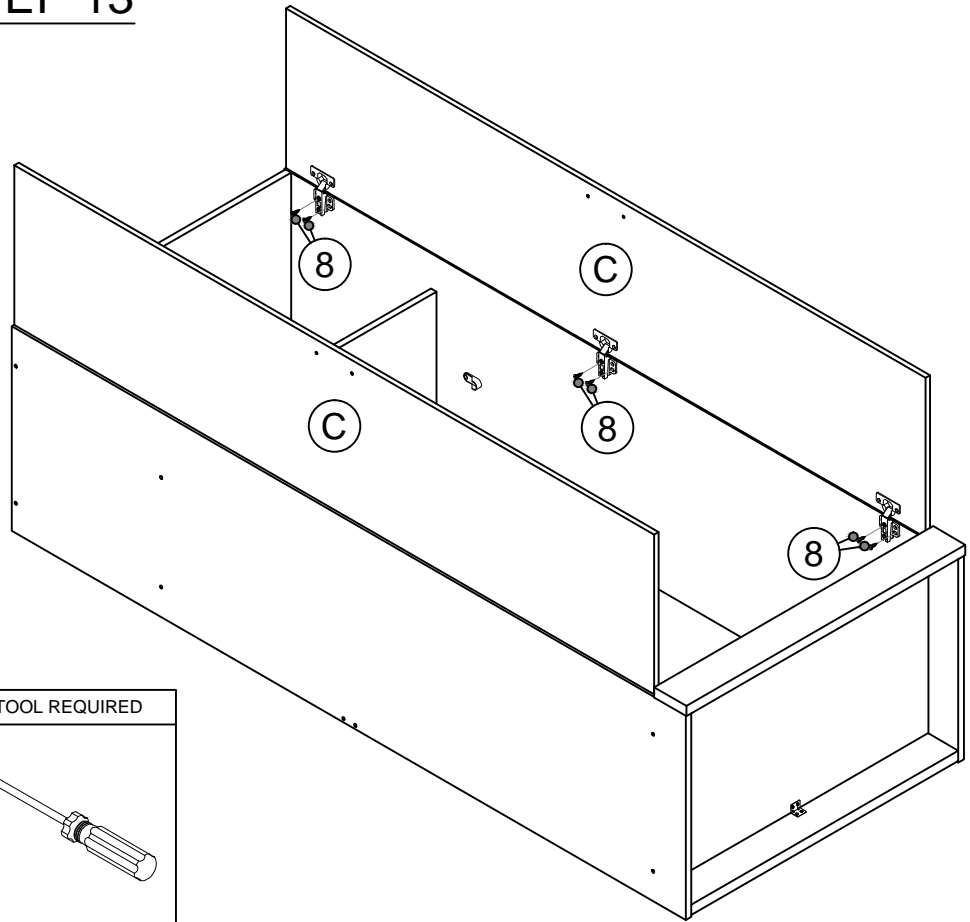


ASSEMBLED UNIT

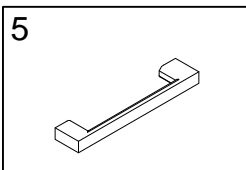

HANDLE 2 PCS

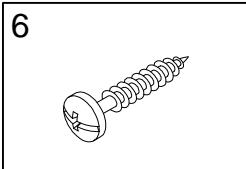


23MM SCREW 4 PCS





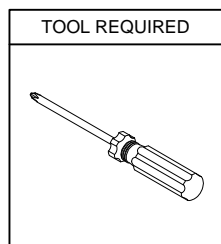


TOOL REQUIRED

STEP 14

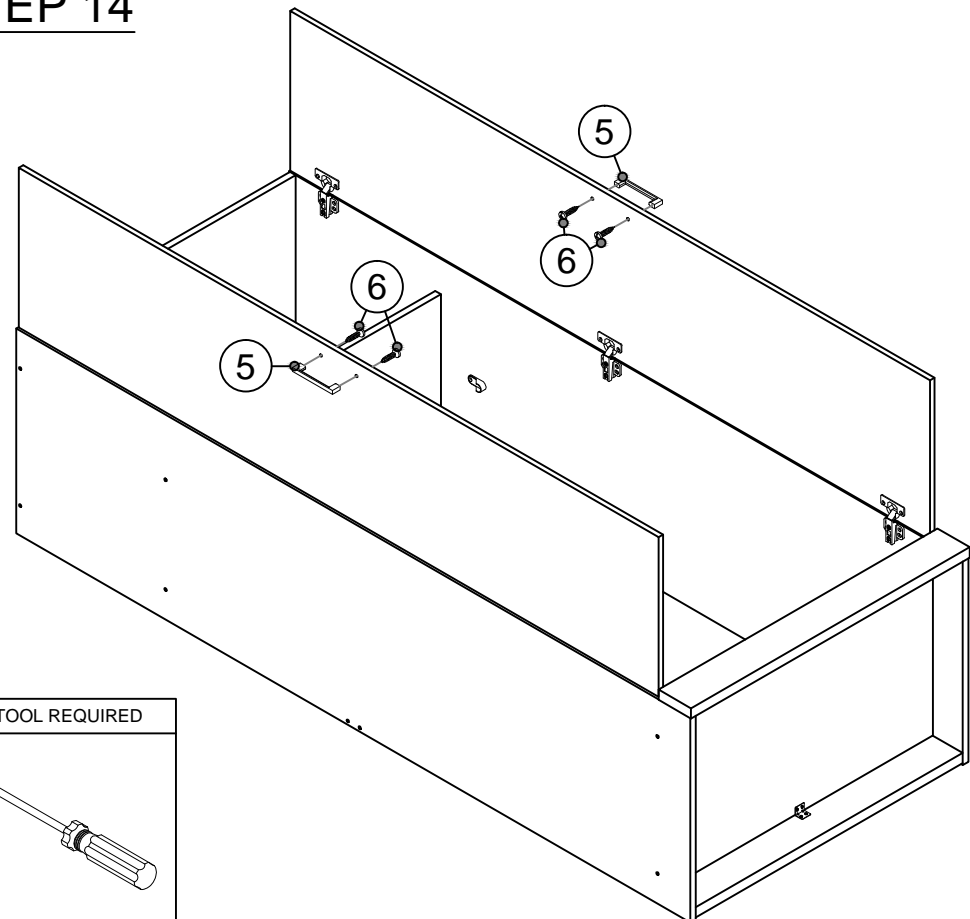






STEP 15

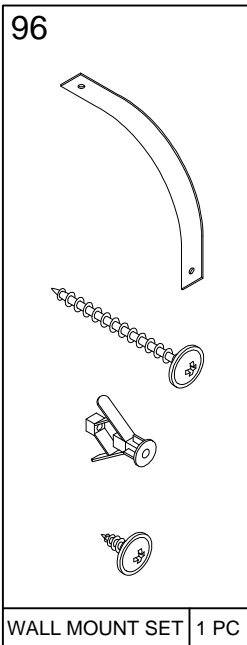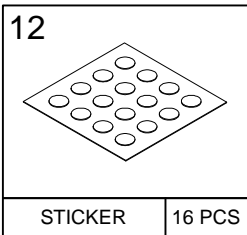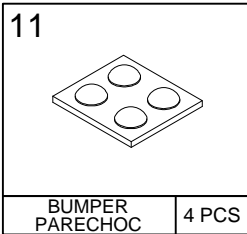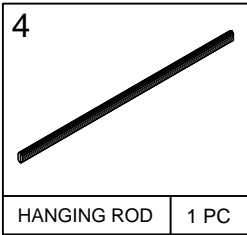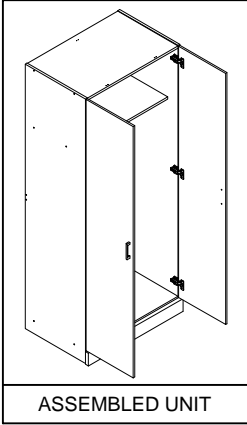


(vertical adjustment)

Adjusting Screw
(Horizontal)

Mounting Screw
(Depth)

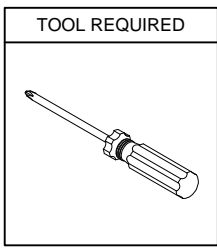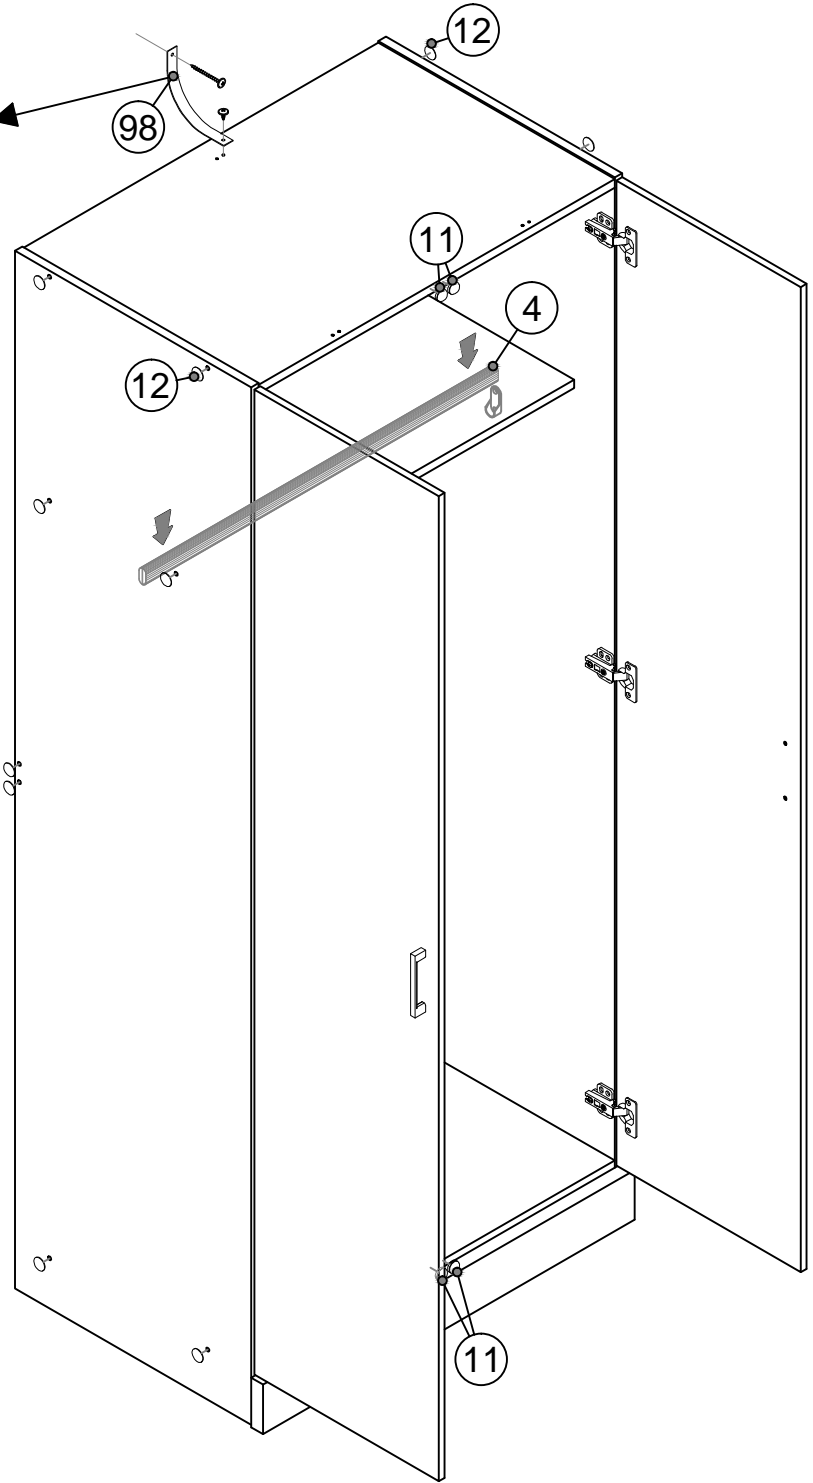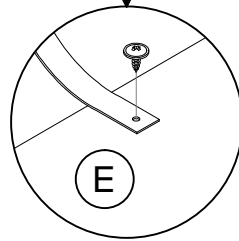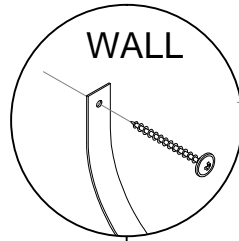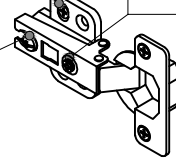











STEP 16

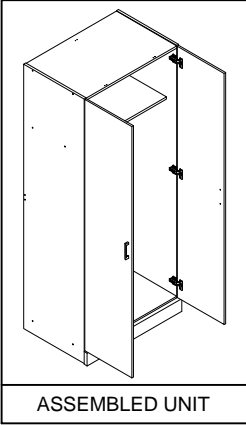


(vertical adjustment)

Adjusting Screw
(Horizontal)

Mounting Screw
(Depth)

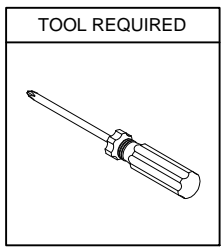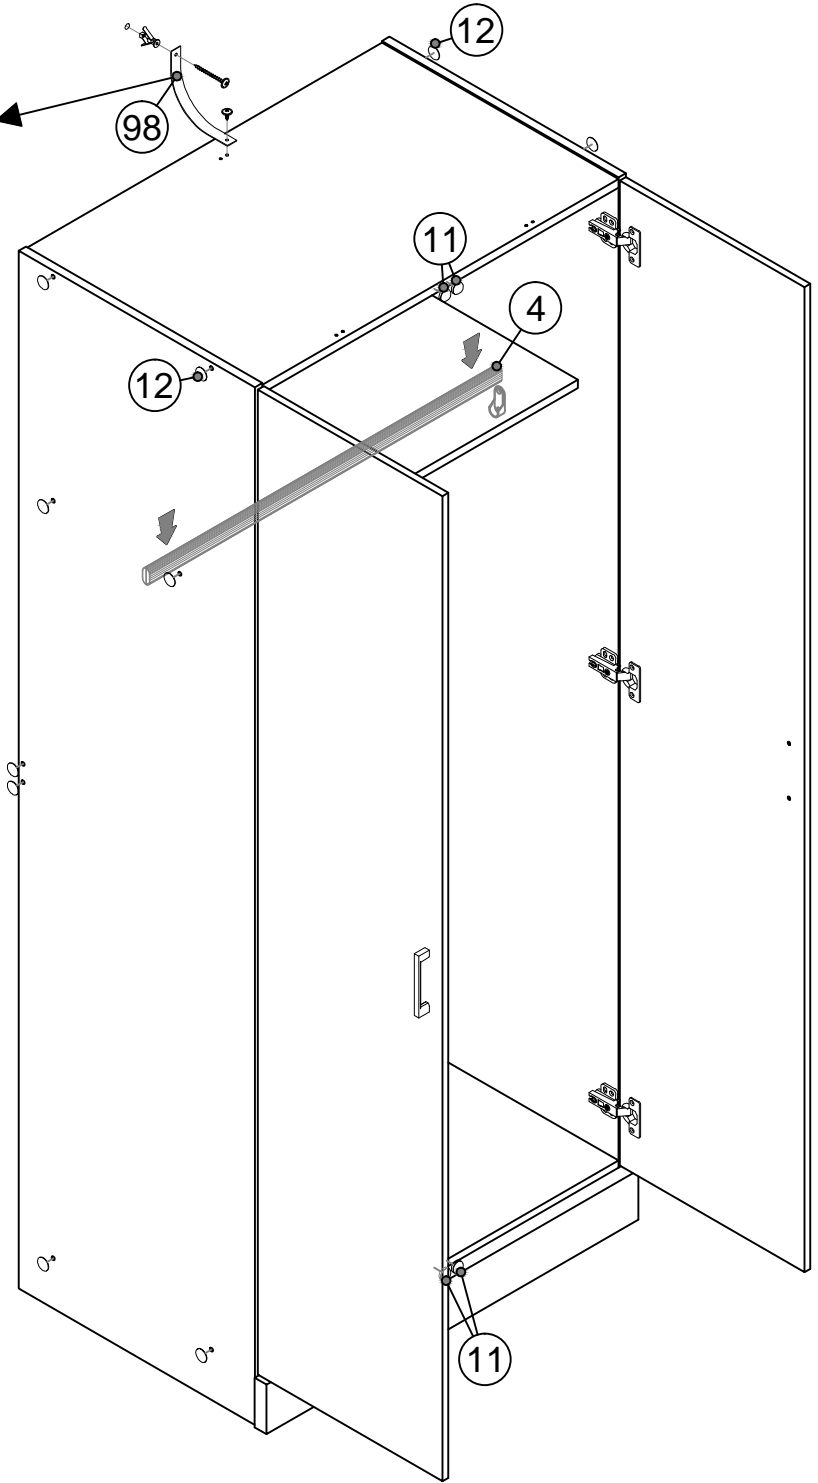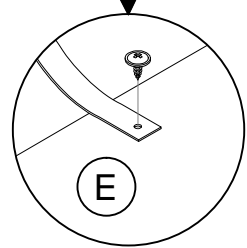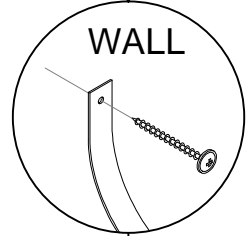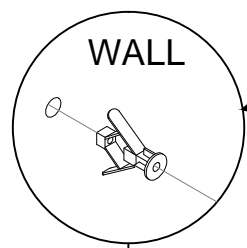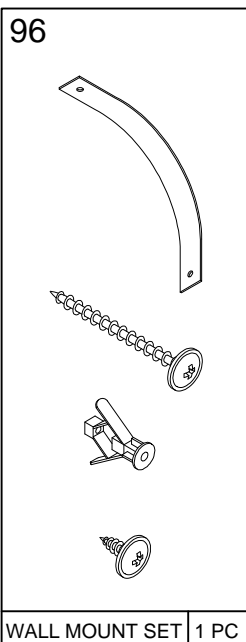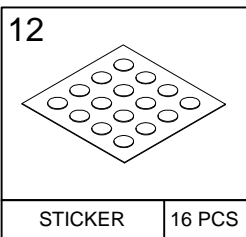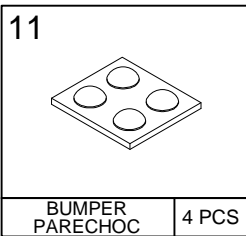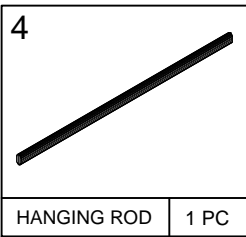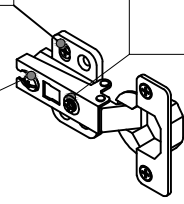

Recommended Maximum Weight

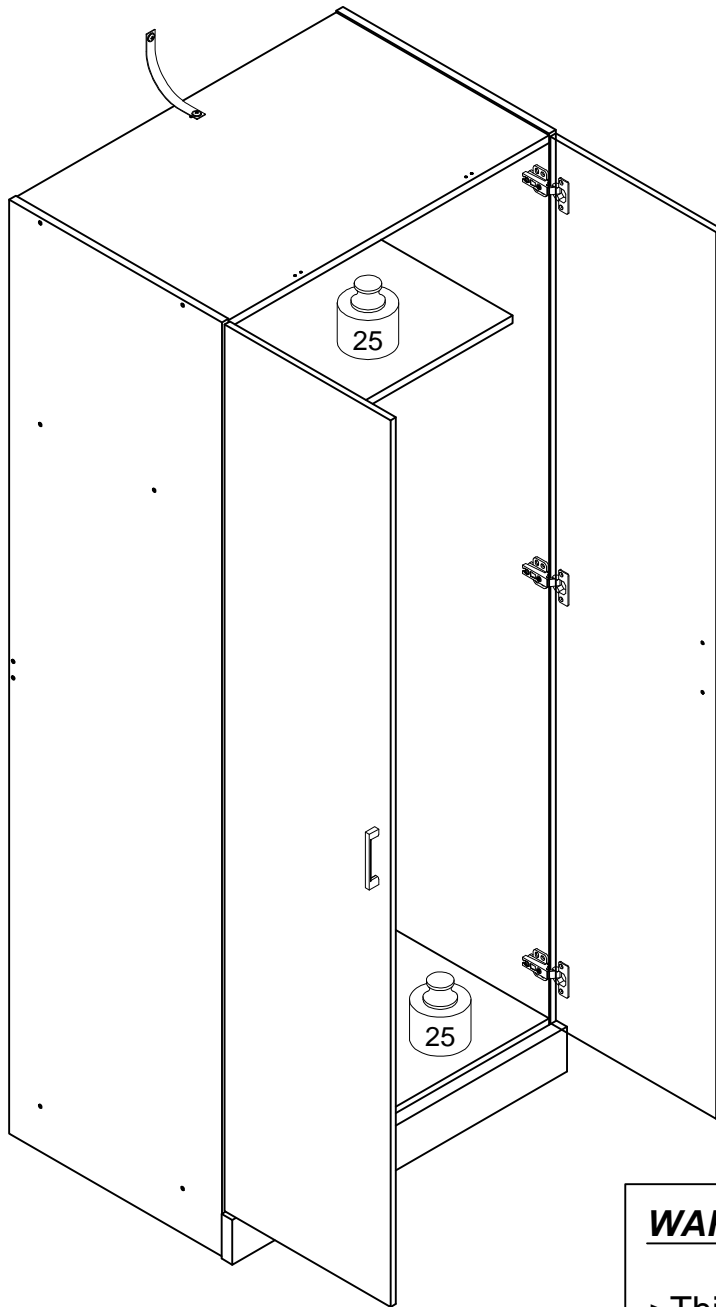

*Unit in Pound(lbs.)

WARNING:

- >This unit has been designed to support the maximum loads shown. Exceeding these load limits could cause sagging, instability, product collapse, and/or serious injury.
- >DO NOT allow children to climb on unit.
- > Put heavier items on lower shelves.