



Assembly Instruction

Item No : 96006

Description: 3 Doors Wardrobe




TOOL REQUIRED

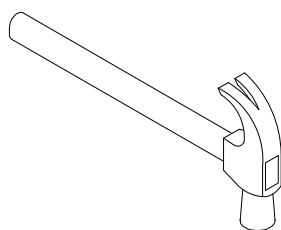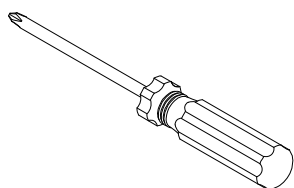

PARTS LIST


A

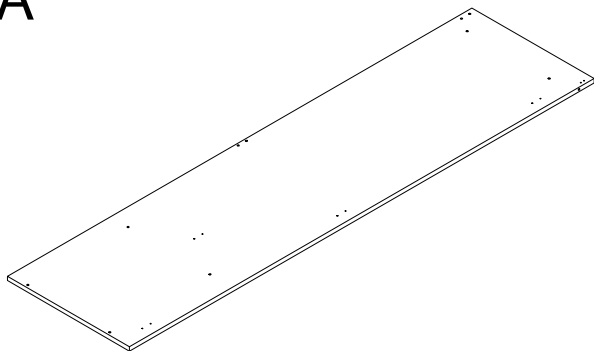

LEFT SIDE PANEL

1 PC


B

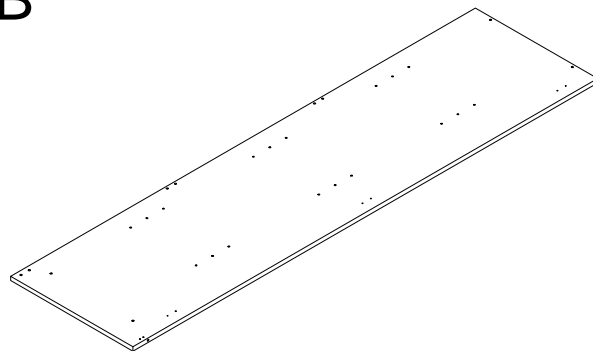

RIGHT SIDE PANEL

1 PC


C

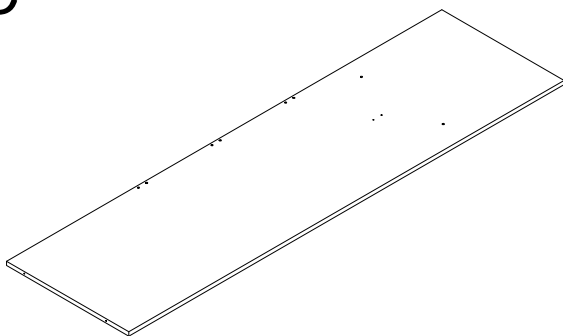

CENTER SIDE PANEL

1 PC


D

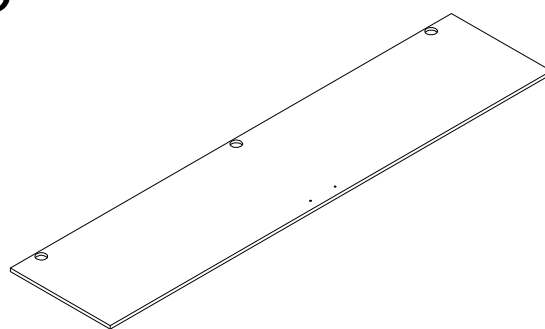

DOOR PANEL

3 PCS


E

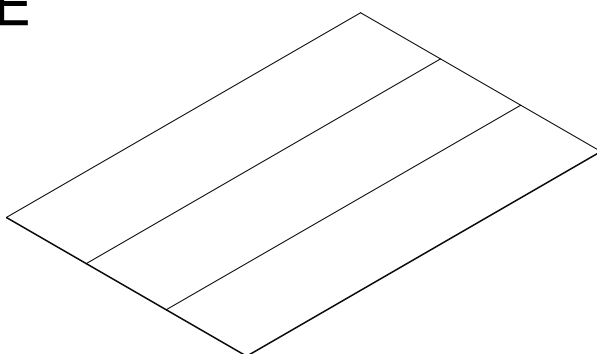

BACK PANEL

1 PC

F

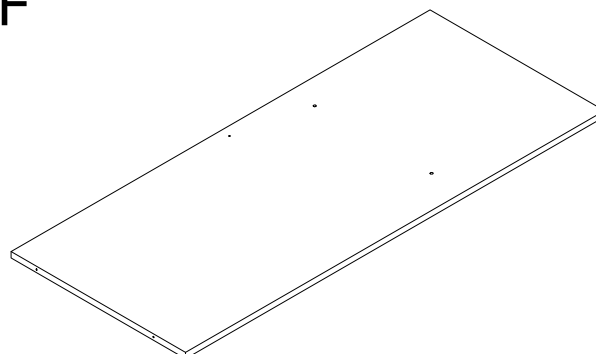


TOP PANEL

1 PC

PARTS LIST


G

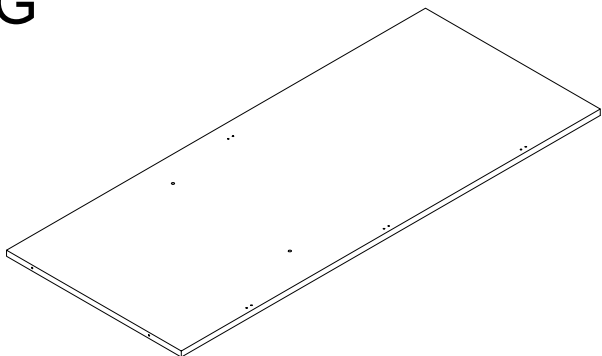

BOTTOM PANEL

1 PC


H

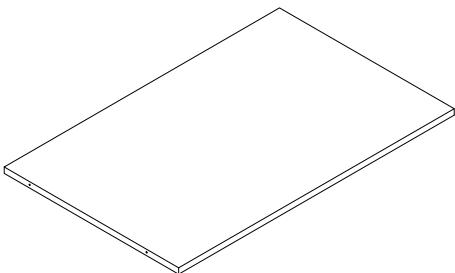

LEFT SHELF PANEL

1 PC


I

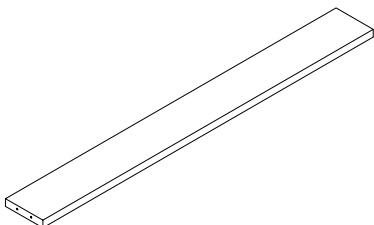

LONG
SUPPORT PANEL

1 PC


J

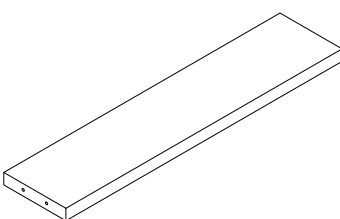

SHORT
SUPPORT PANEL

2 PCS


K

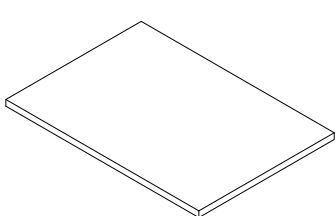

RIGHT SHELF PANEL

3 PCS


L

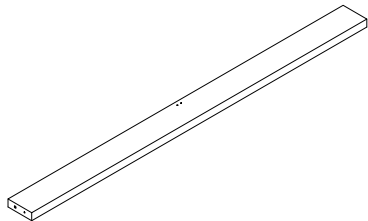

BACK LEG PANEL

1 PC

M

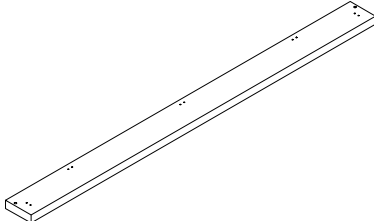


FRONT LEG PANEL

1 PC

HARDWARE LIST


1

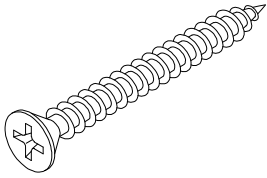

40MM SCREW

30 PCS


2

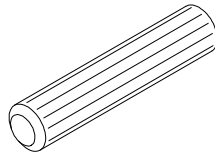

30MM WOOD DOWEL

4 PCS

3

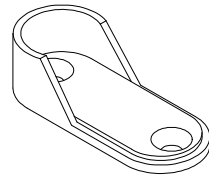

HANGING BRACKET

2 PCS


4



HANGING ROD

1 PC


5

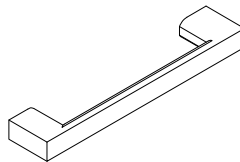

HANDLE

3 PCS


6

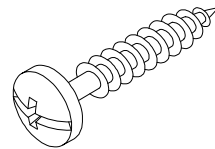

23MM SCREW

6 PCS


7

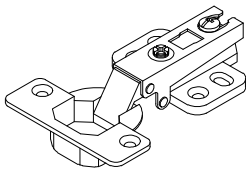

DOOR HINGES

9 PCS


8



12MM SCREW

64 PCS


9

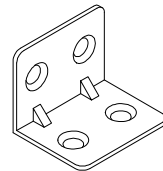

L-BRACKET

6 PCS


10

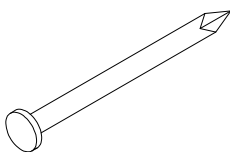

NAIL

62 PCS


11

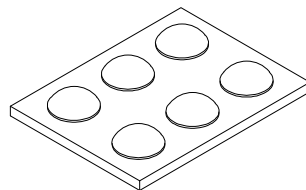

BUMPER PARECHOC

6 PCS

12

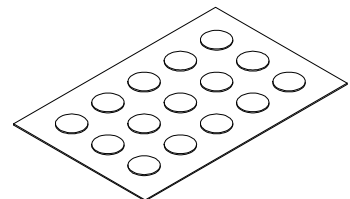


STICKER

30 PCS

HARDWARE LIST


13

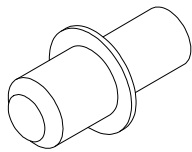

SHELF SUPPORT


12 PCS

96

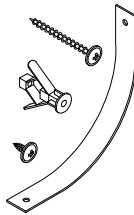


WALL MOUNT SET


1 PC

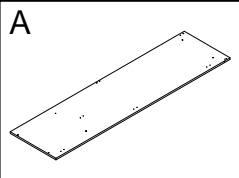

LEFT SIDE PANEL 1 PC

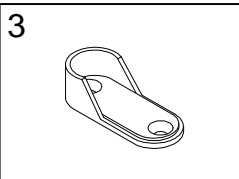


HANGING BRACKET 1 PC


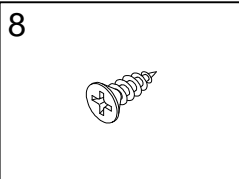


12MM SCREW 2 PCS


STEP 1

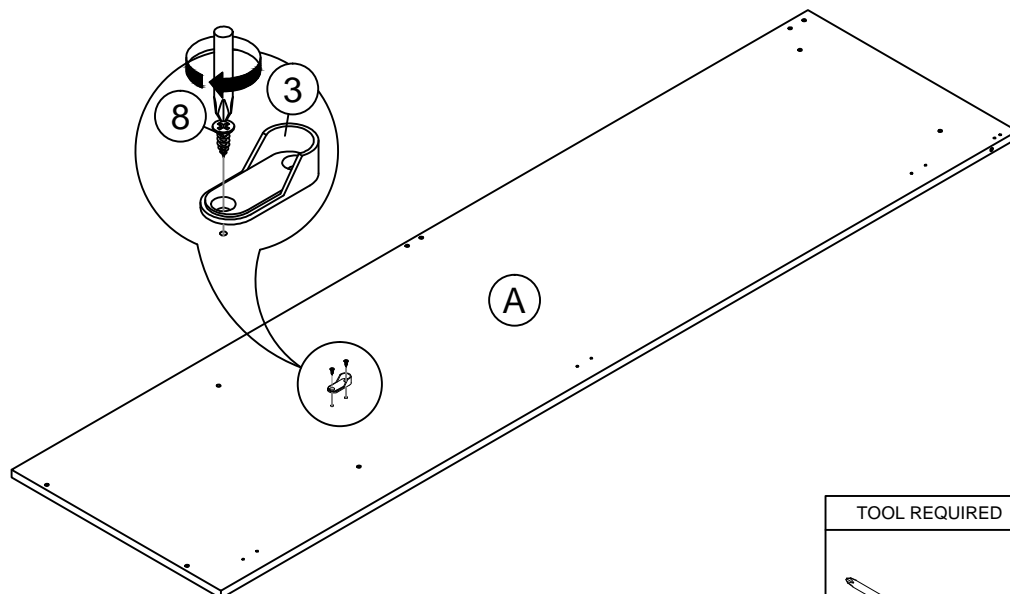


TOOL REQUIRED

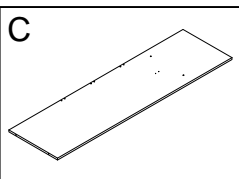

CENTER SIDE PANEL 1 PC

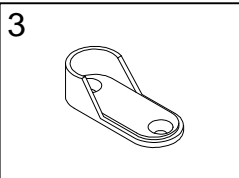


HANGING BRACKET 1 PC

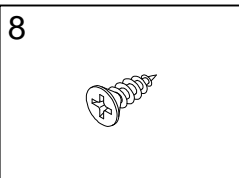



12MM SCREW 2 PCS

STEP 2

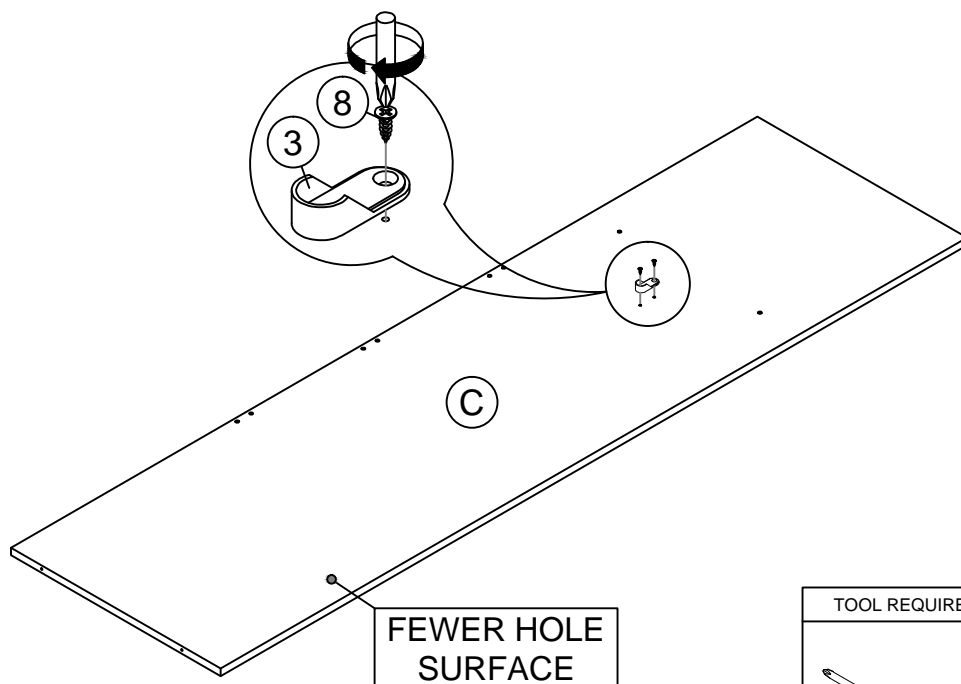


TOOL REQUIRED




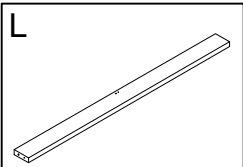


BACK LEG
SUPPORT PANEL 1 PC

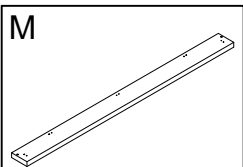


FRONT LEG
SUPPORT PANEL 1 PC

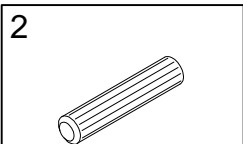

30MM
WOOD DOWEL 2 PCS

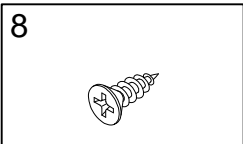


12MM SCREW 12 PCS


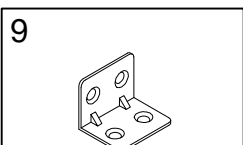


L-BRACKET 6 PCS


STEP 3

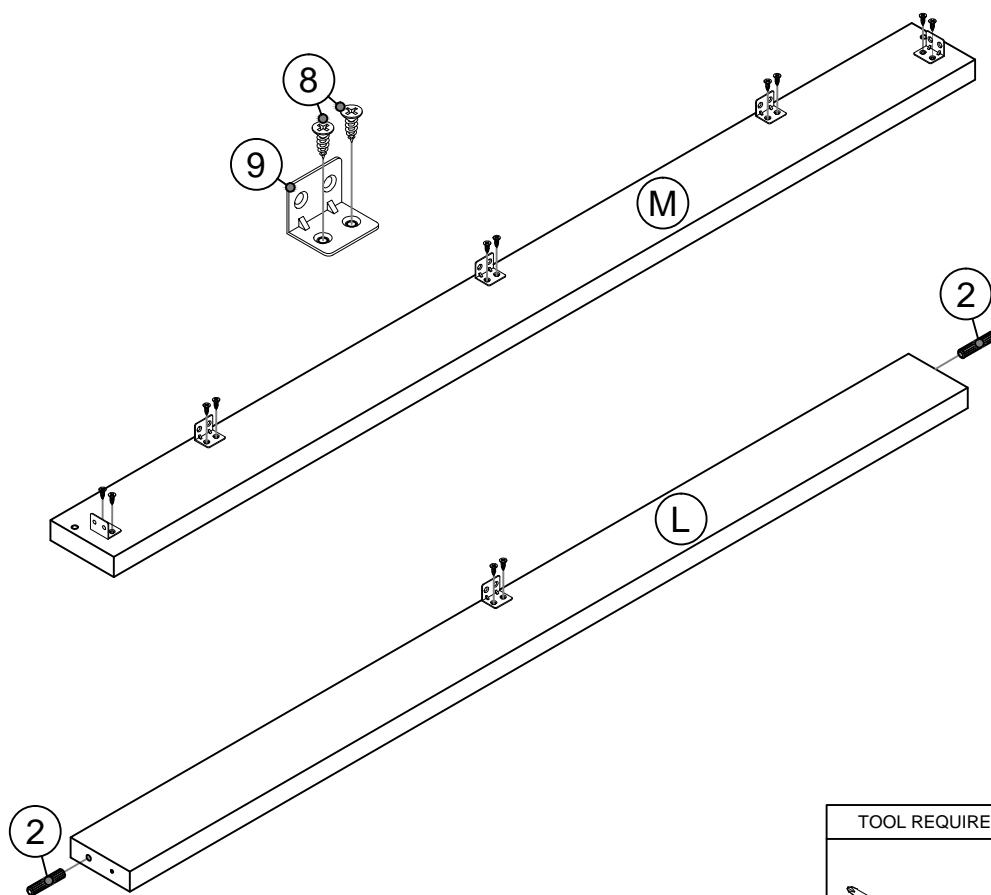


TOOL REQUIRED

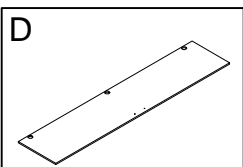

DOOR PANEL 3 PCS

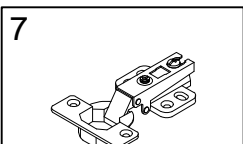


DOOR HINGES 9 PCS

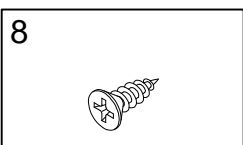


12MM SCREW 18 PCS


STEP 4

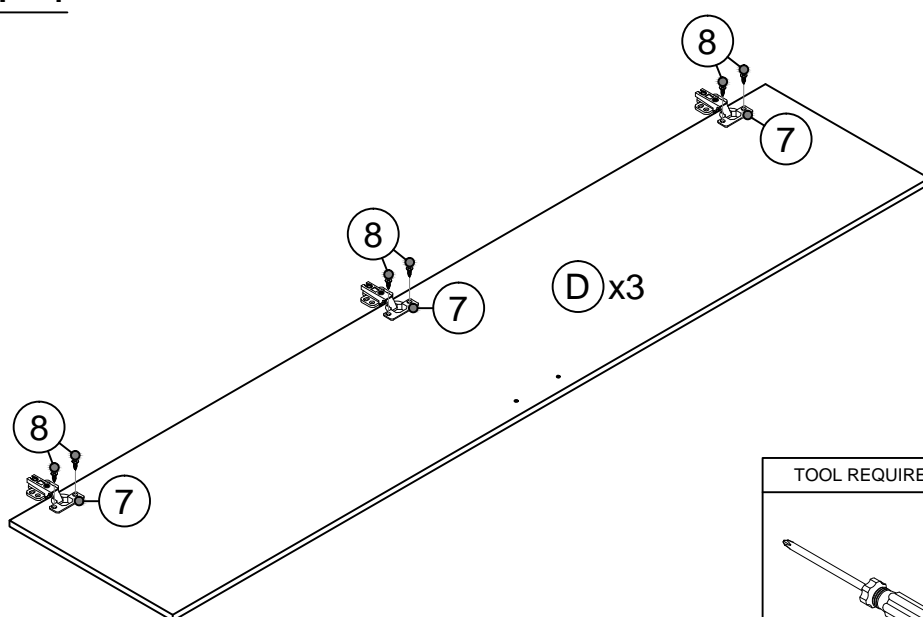

TOOL REQUIRED




C

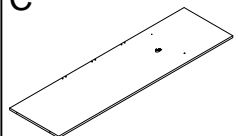CENTER
SIDE PANEL

1 PC


F

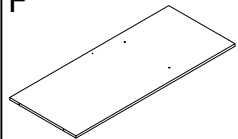

TOP PANEL

1 PC


G

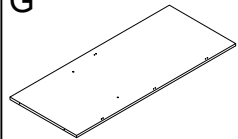

BOTTOM PANEL

1 PC


1




40MM SCREW

4 PCS


STEP 5

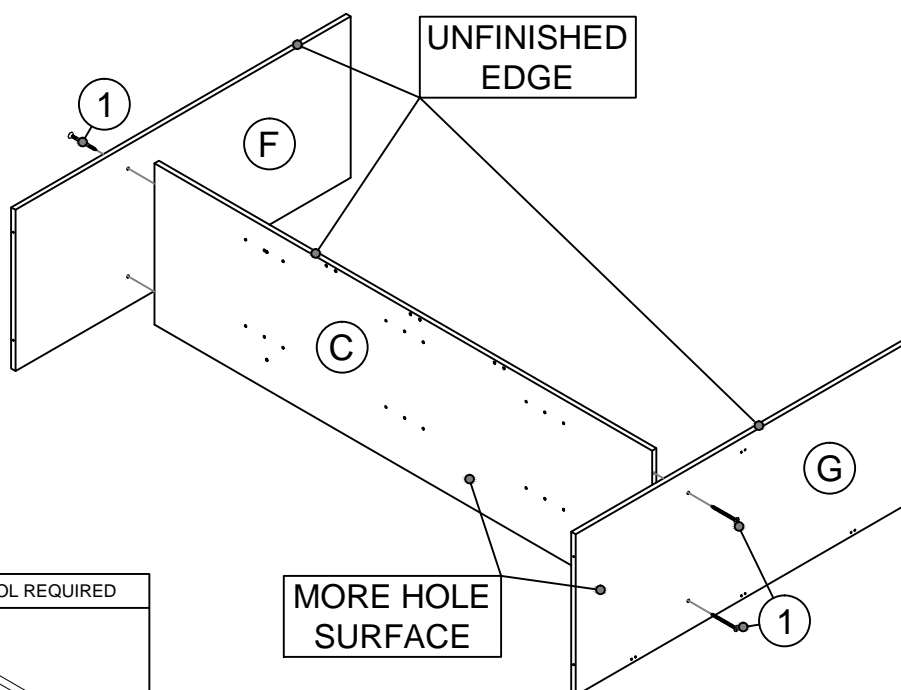

TOOL REQUIRED




STEP 6

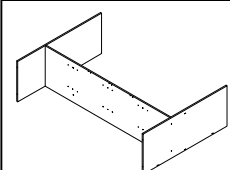


ASSEMBLED UNIT

H

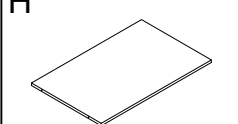LEFT
SHELF PANEL


1 PC

1





40MM SCREW

2 PCS

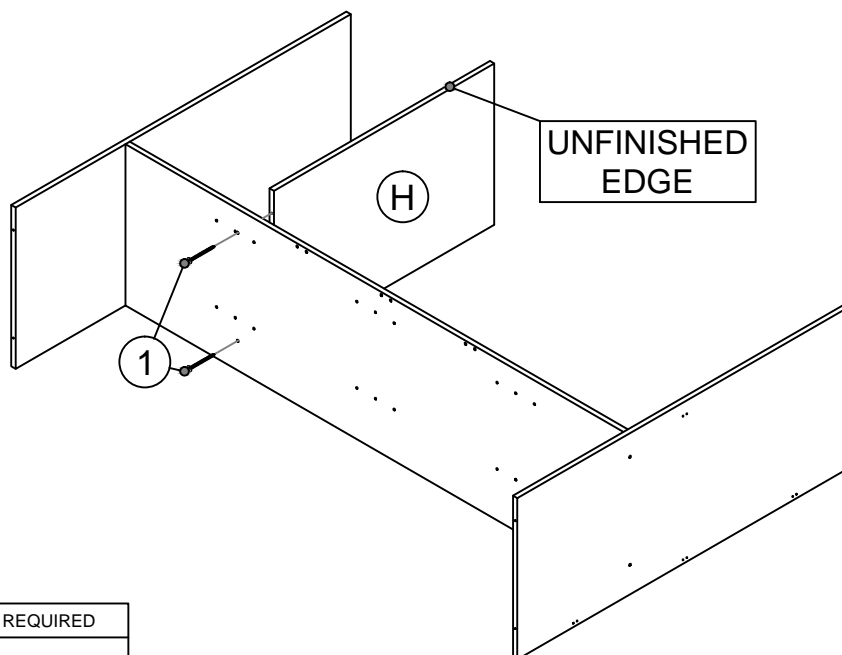


TOOL REQUIRED




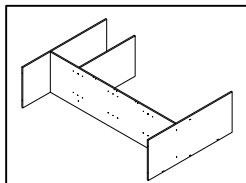


ASSEMBLED UNIT

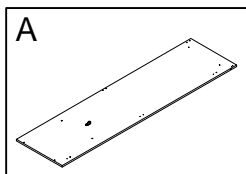

LEFT SIDE PANEL 1 PC

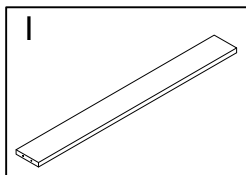


LONG SUPPORT PANEL 1 PC


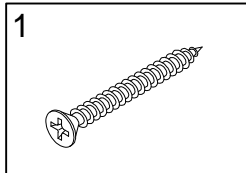


40MM SCREW 10 PCS


STEP 7

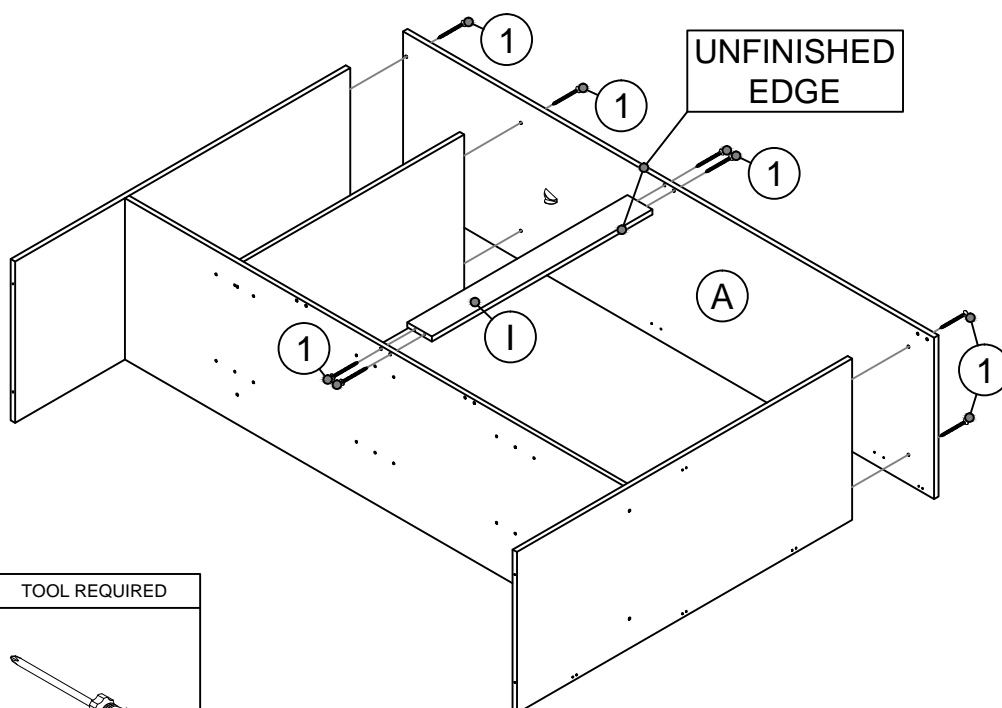


TOOL REQUIRED

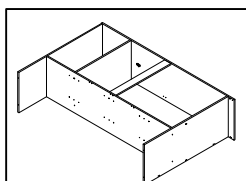

ASSEMBLED UNIT

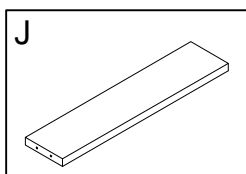


SHORT SUPPORT PANEL 2 PCS

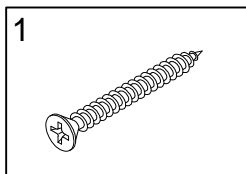



40MM SCREW 4 PCS

STEP 8

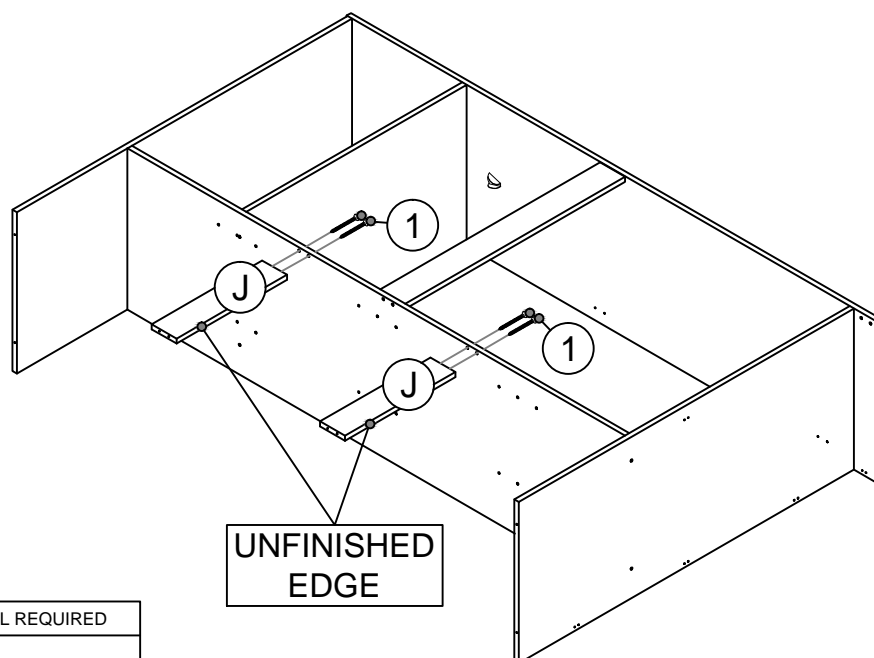


TOOL REQUIRED




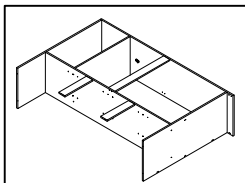


ASSEMBLED UNIT

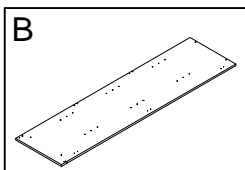

RIGHT SIDE PANEL 1 PC

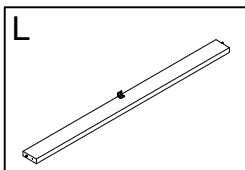


BACK LEG SUPPORT PANEL 1 PC


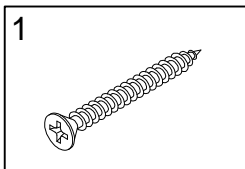


40MM SCREW 10 PCS


STEP 9

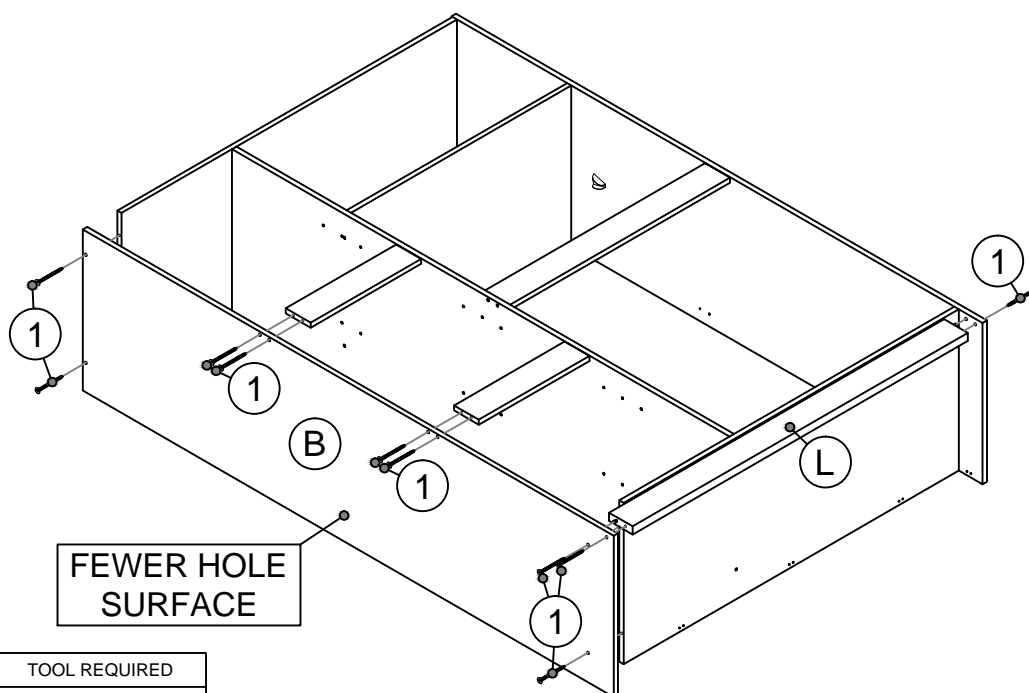


TOOL REQUIRED

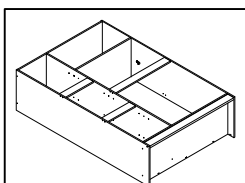

ASSEMBLED UNIT

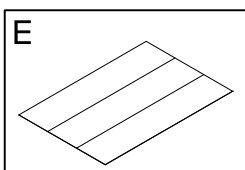


BACK PANEL 1 PC

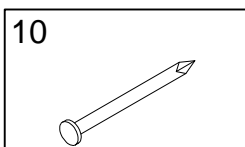



NAIL 62 PCS

STEP 10

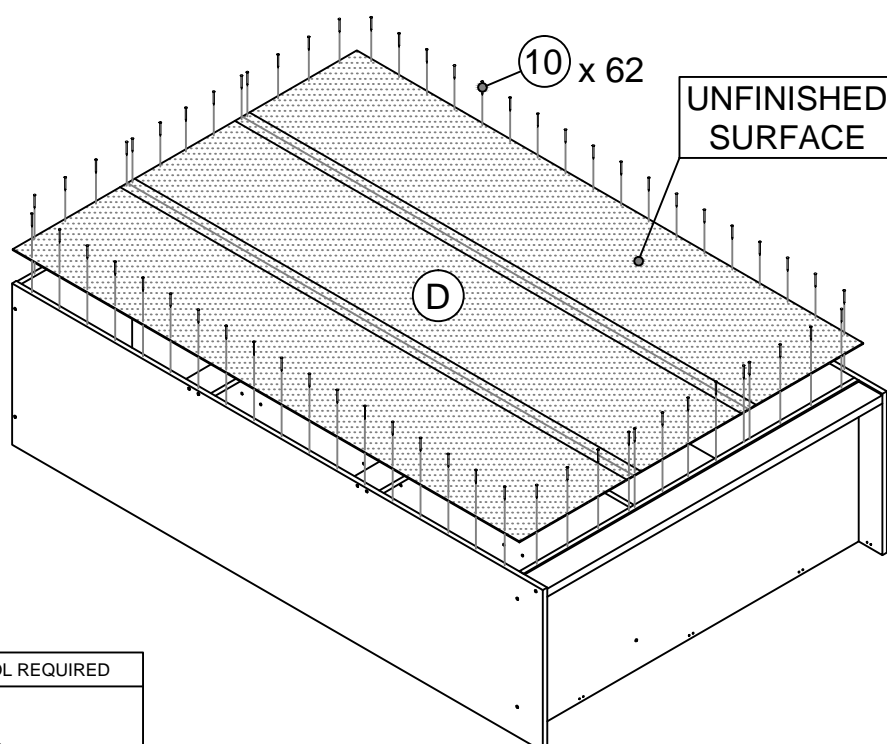


TOOL REQUIRED

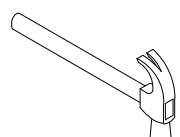

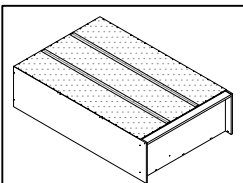


ASSEMBLED UNIT

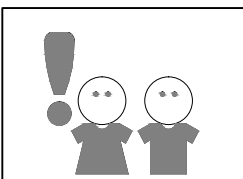


HELPER


STEP 11

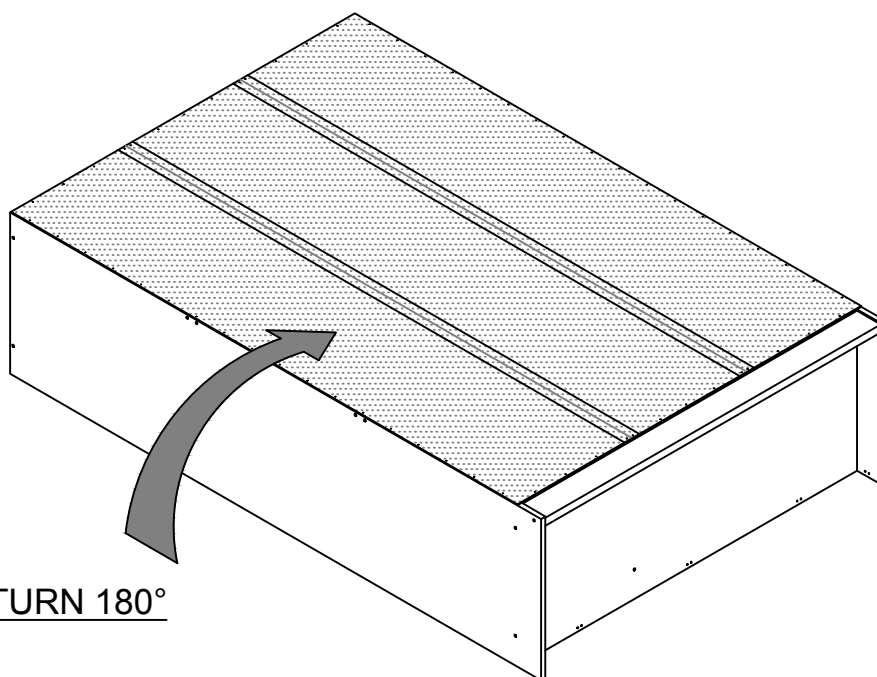


TURN 180°

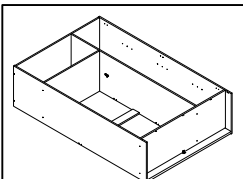

ASSEMBLED UNIT

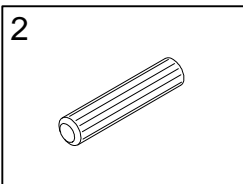


30MM
WOOD DOWEL 2 PCS

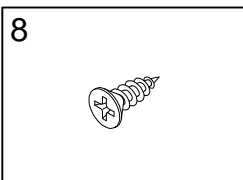



12MM SCREW 2 PCS

STEP 12

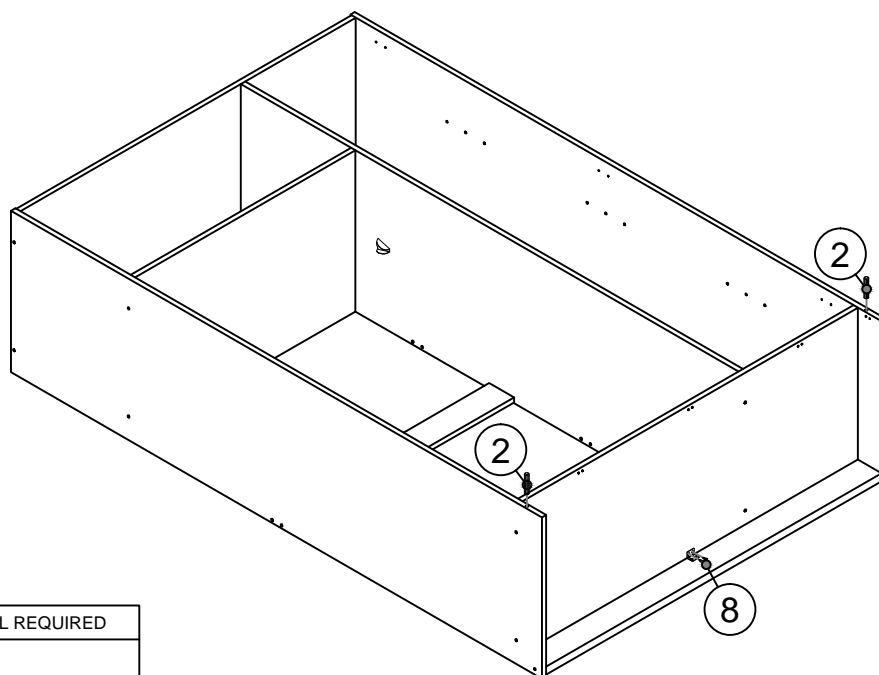


TOOL REQUIRED




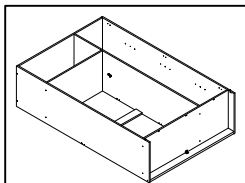


ASSEMBLED UNIT

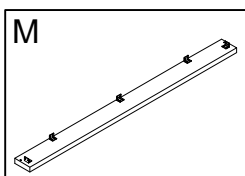


FRONT LEG
SUPPORT PANEL 1 PC

STEP 13

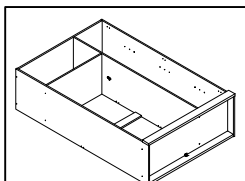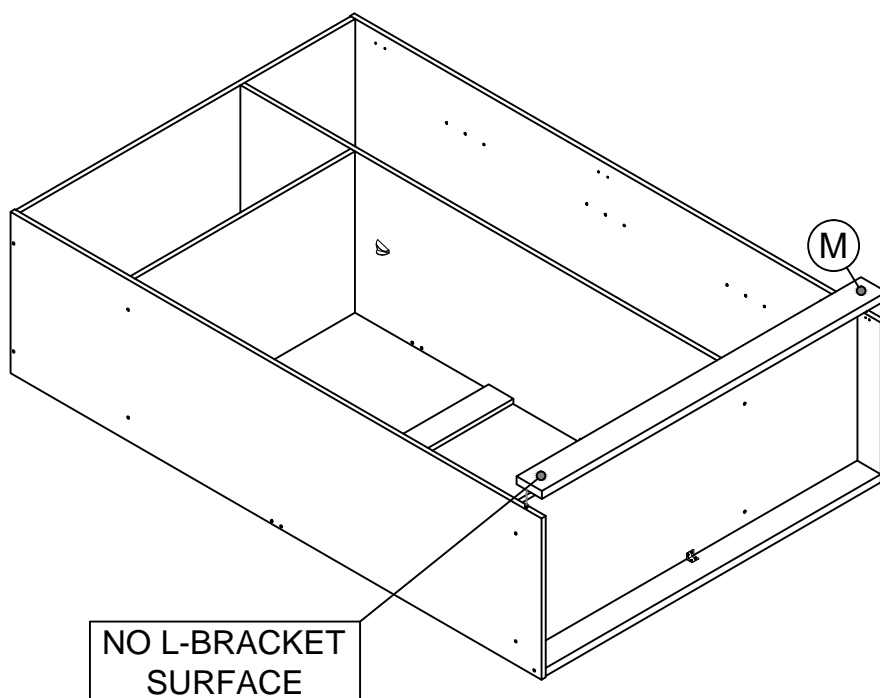


ASSEMBLED UNIT

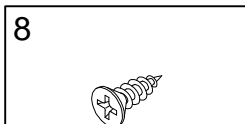


12MM SCREW 10 PCS


STEP 14

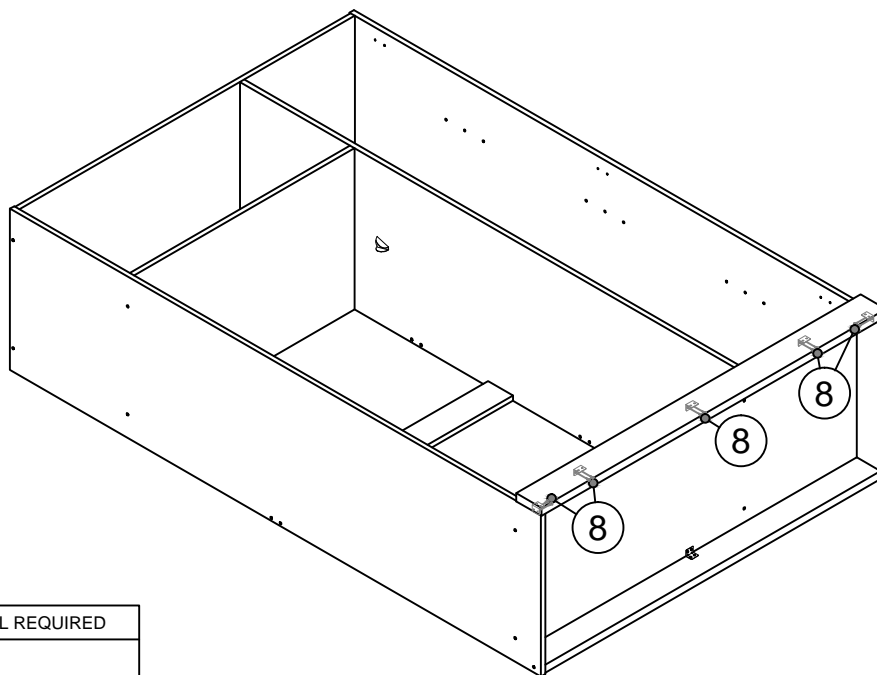


TOOL REQUIRED




STEP 15

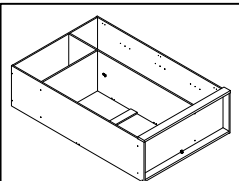



ASSEMBLED UNIT

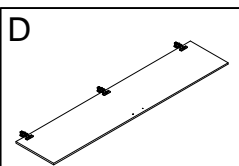


DOOR PANEL 3 PCS

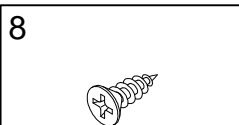


12MM SCREW 18 PCS

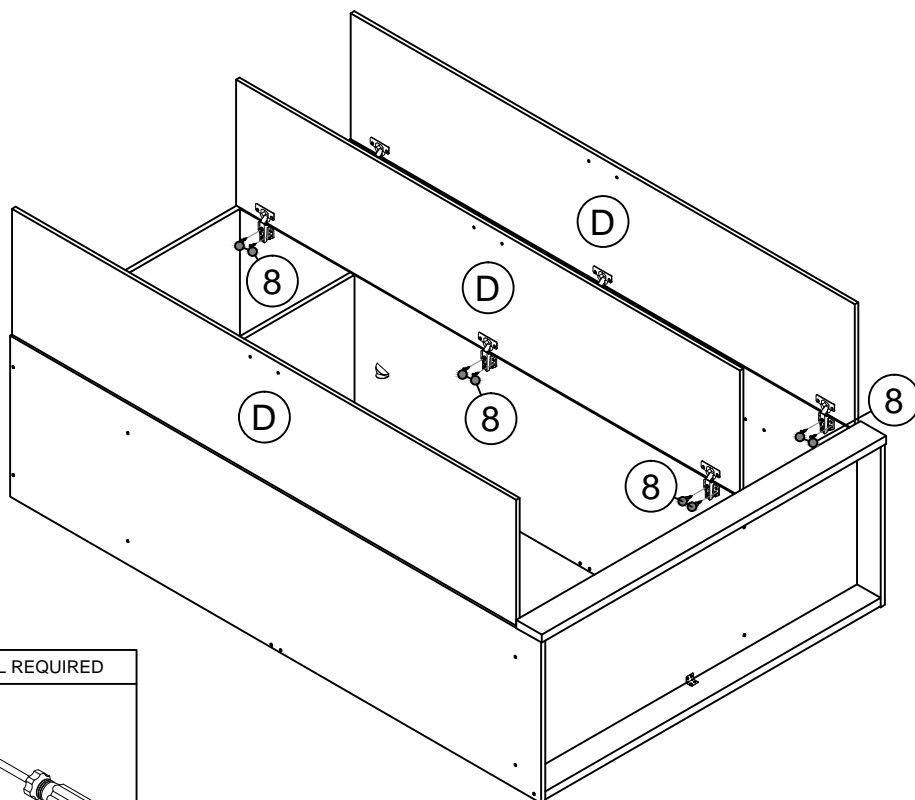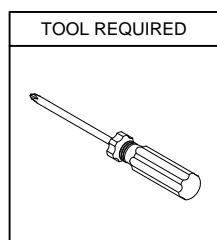


STEP 16

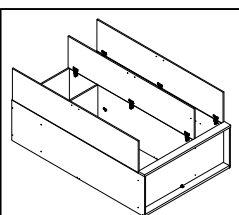



ASSEMBLED UNIT

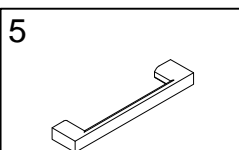


HANDLE 3 PCS

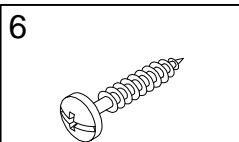

23MM SCREW 6 PCS

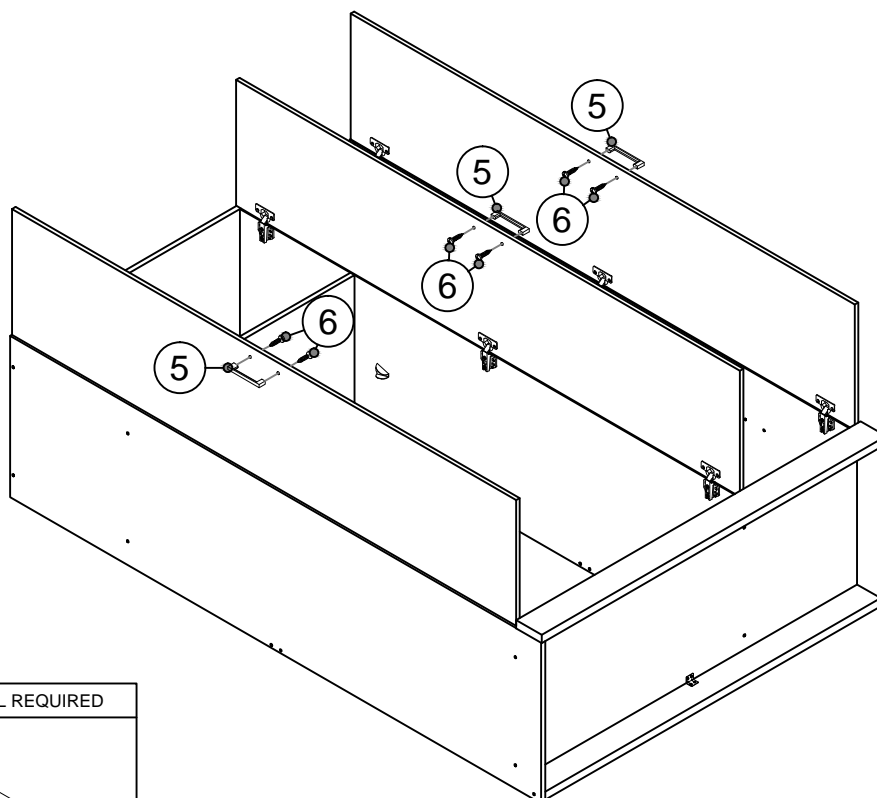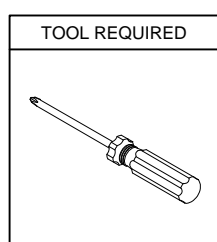


STEP 17

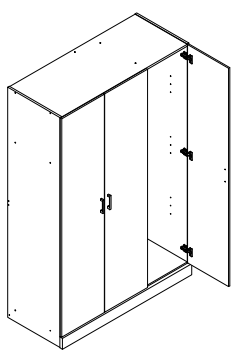



ASSEMBLED UNIT

13




SHELF SUPPORT 12 PCS

96

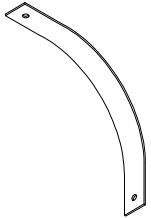


WALL MOUNT SET 1 PC


Mark and drill a 1/8" hole into the wall stud.

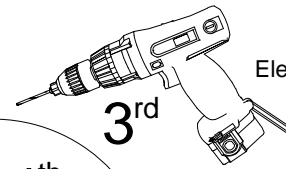


Electric drill with 1/8" bit

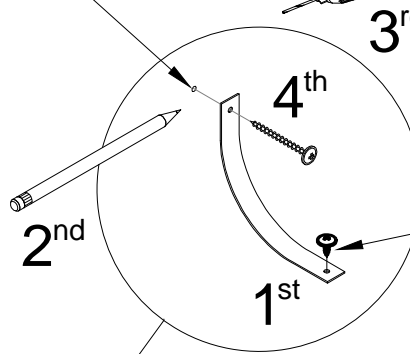


Use the short screw through the hole in the strap and into the PANEL (F).

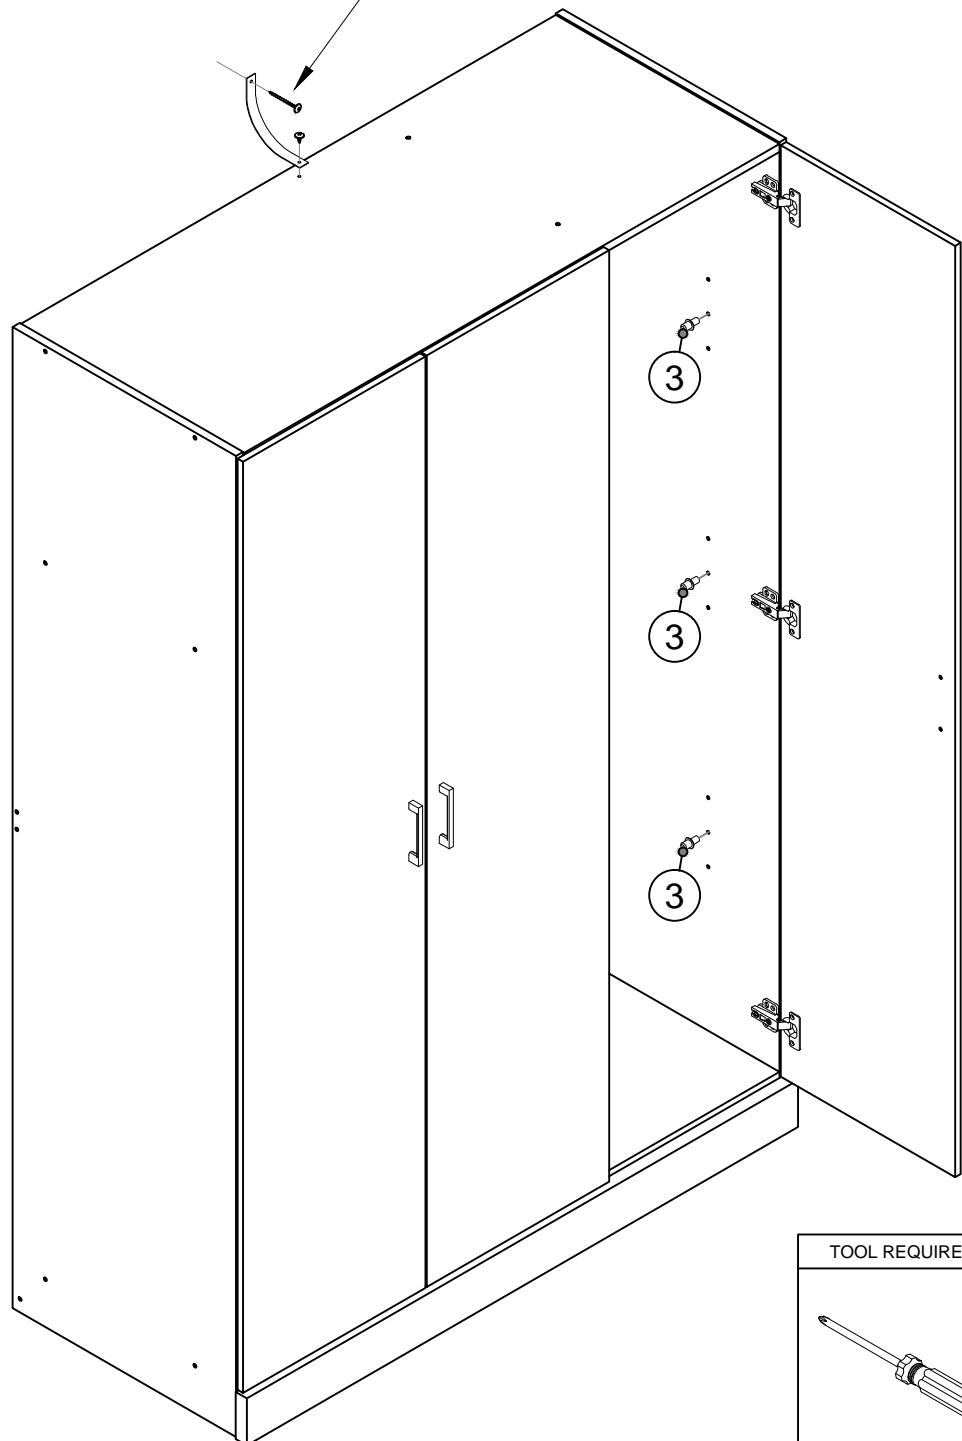

TOOL REQUIRED




STEP 18

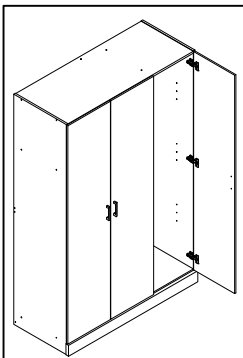


ASSEMBLED UNIT

96

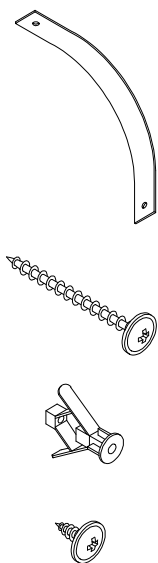


WALL MOUNT SET 1 PC


Mark and drill
a 3/8" hole
into the wall.

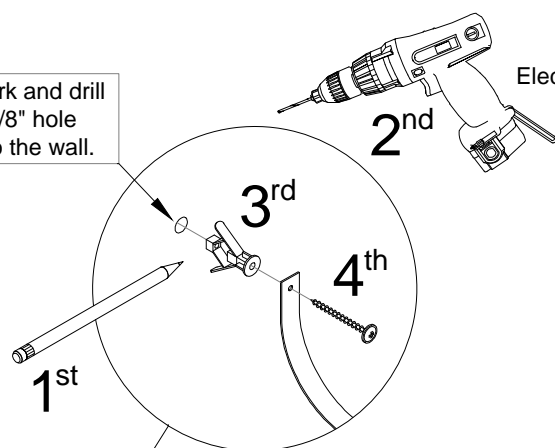


Electric drill with 3/8" bit

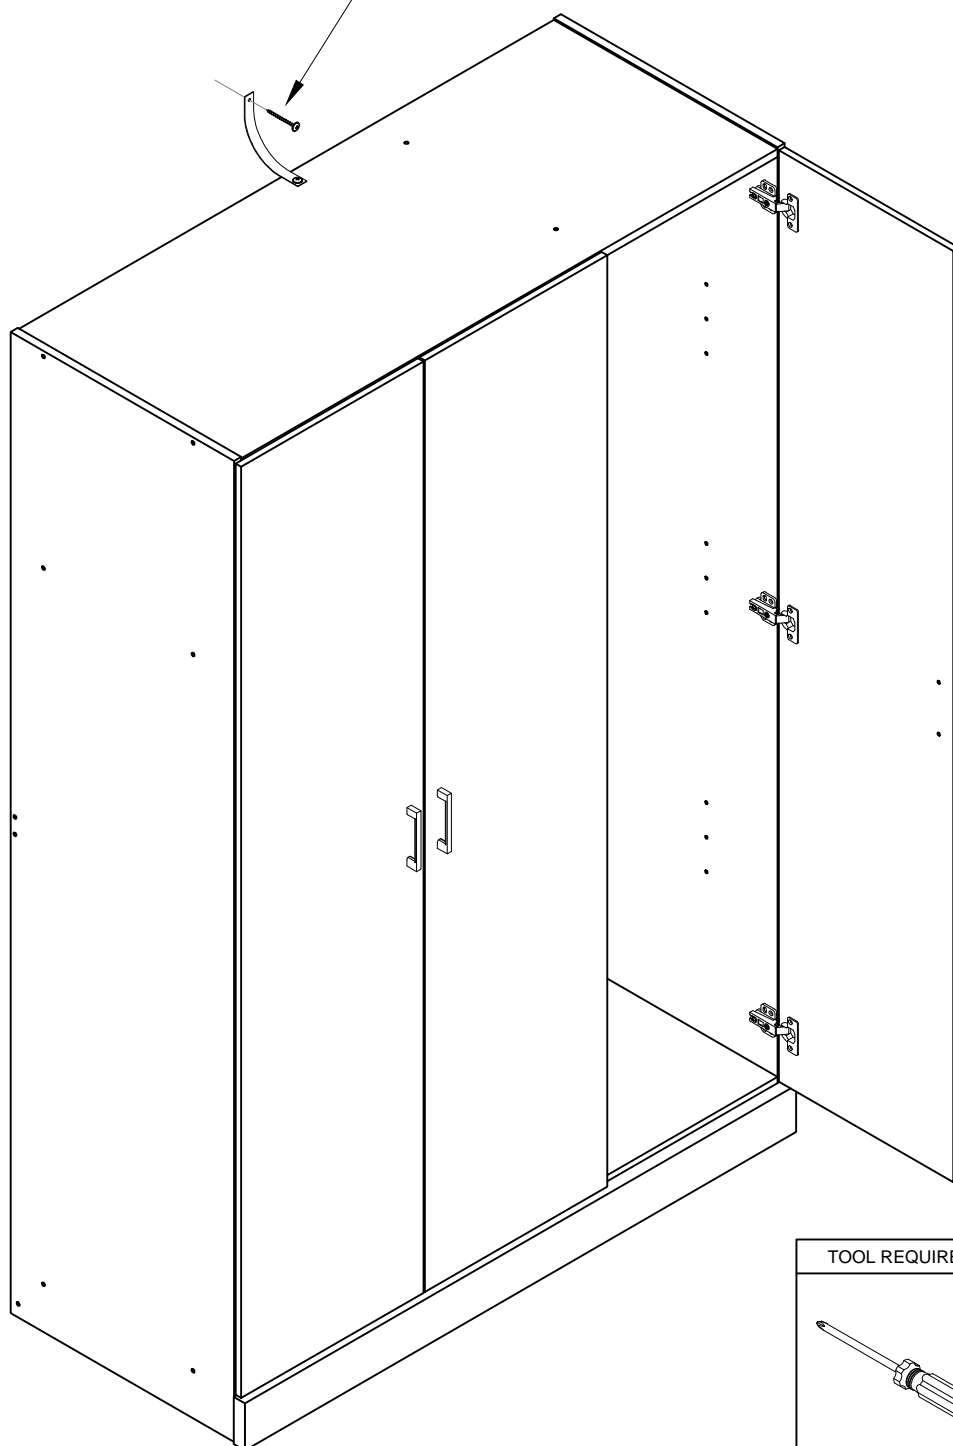


TOOL REQUIRED




STEP 19

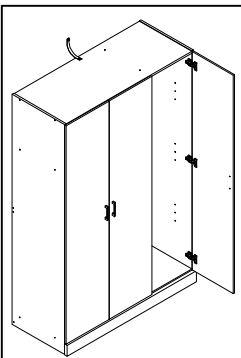

ASSEMBLED UNIT

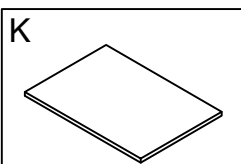

RIGHT
SHELF PANEL 3 PCS


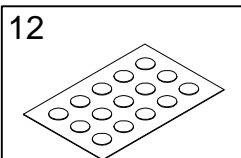


STICKER 30 PCS


(vertical adjustment)

Adjusting Screw
(Horizontal)

Mounting Screw
(Depth)

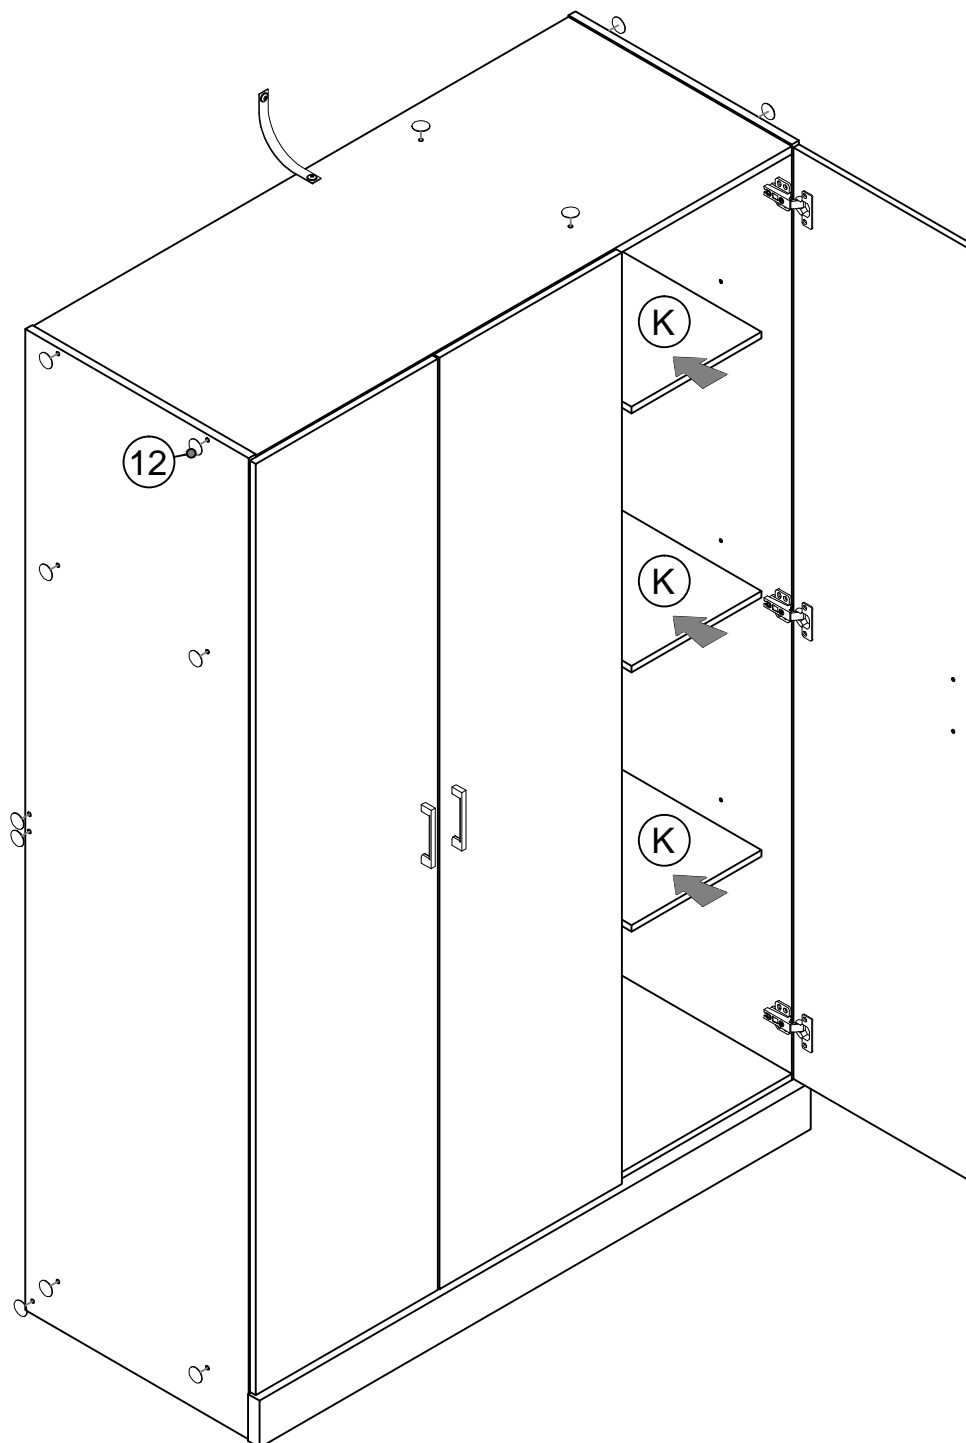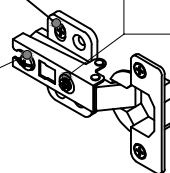

STEP 20

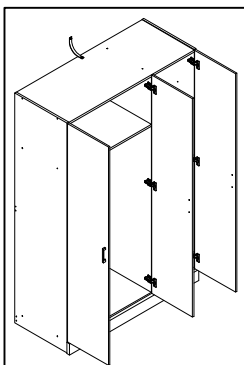

ASSEMBLED UNIT


4



HANGING ROD


1 PC

11




BUMPER
PARECHOC

6 PCS

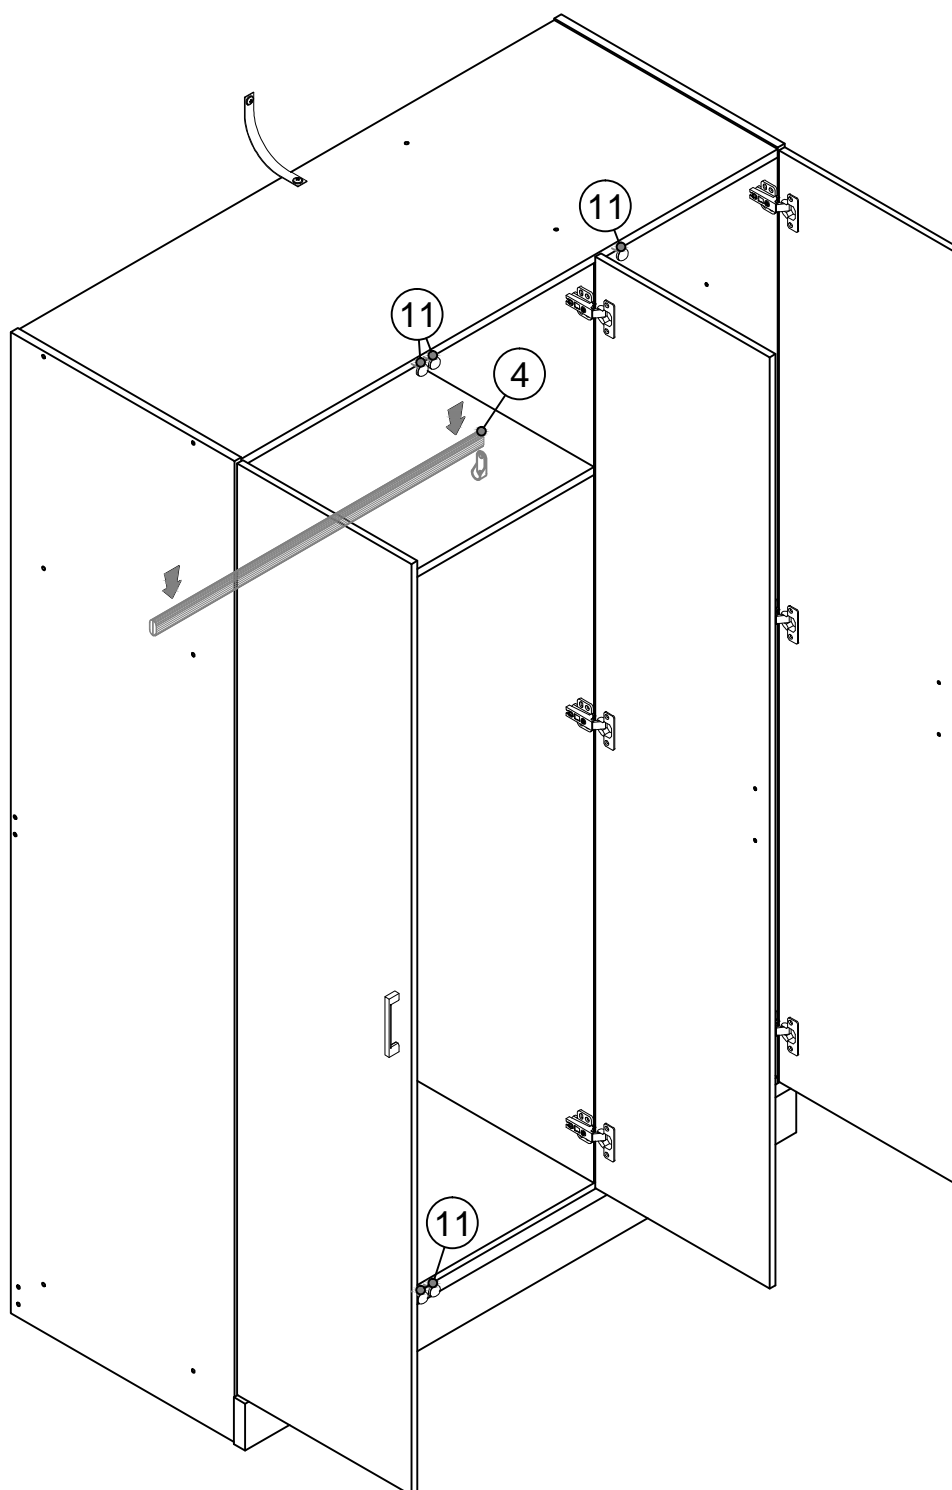

Recommended Maximum Weight

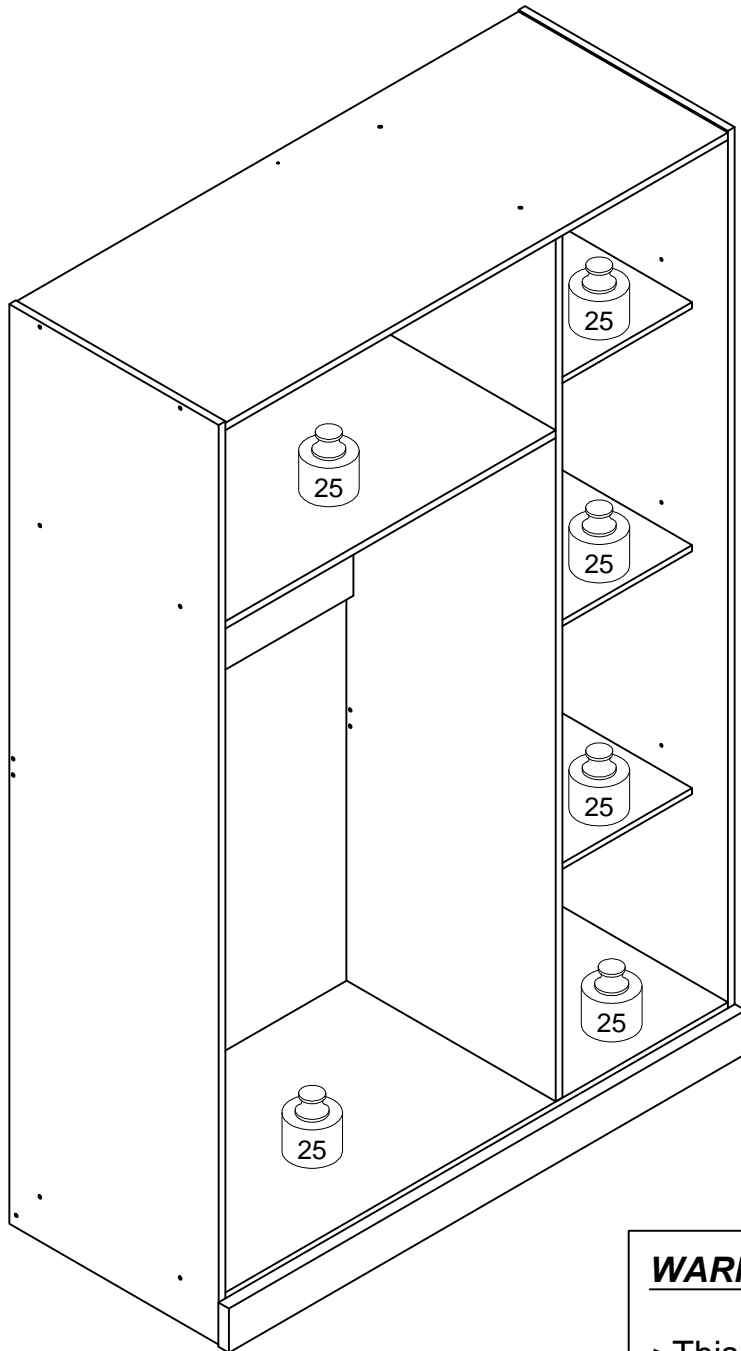

*Unit in Pound(lbs.)

WARNING:

>This unit has been designed to support the maximum loads shown. Exceeding these load limits could cause sagging, instability, product collapse, and/or serious injury.

>DO NOT allow children to climb on unit.

> Put heavier items on lower shelves.