
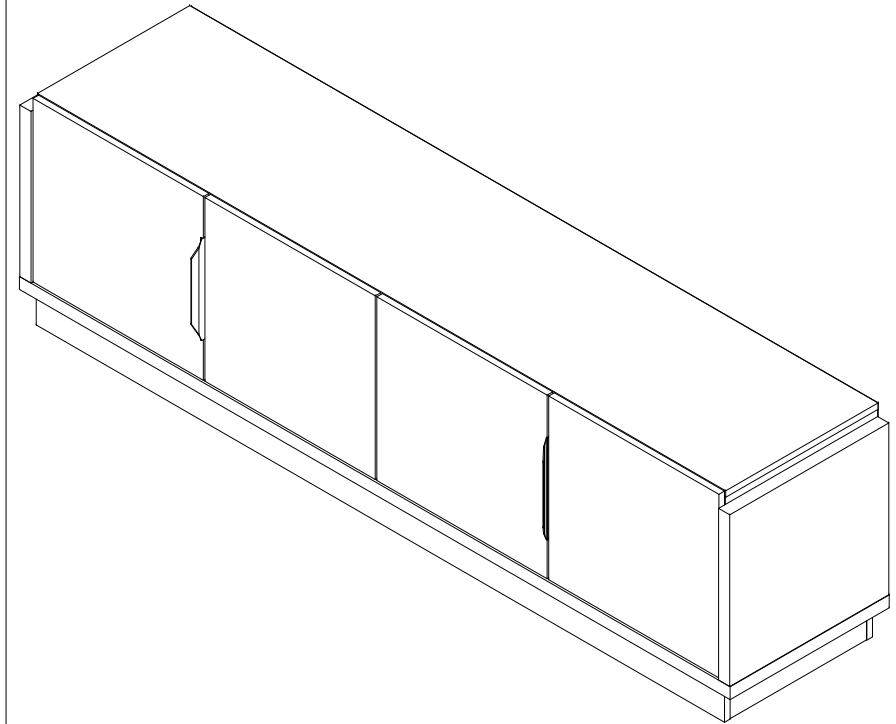


PART LIST

CODE	QTY
A	1
B	1
C	1
D	1
E	2
F	3
G	1
H	2
I	1
J	1
K	1
L	2
M	1
N	1

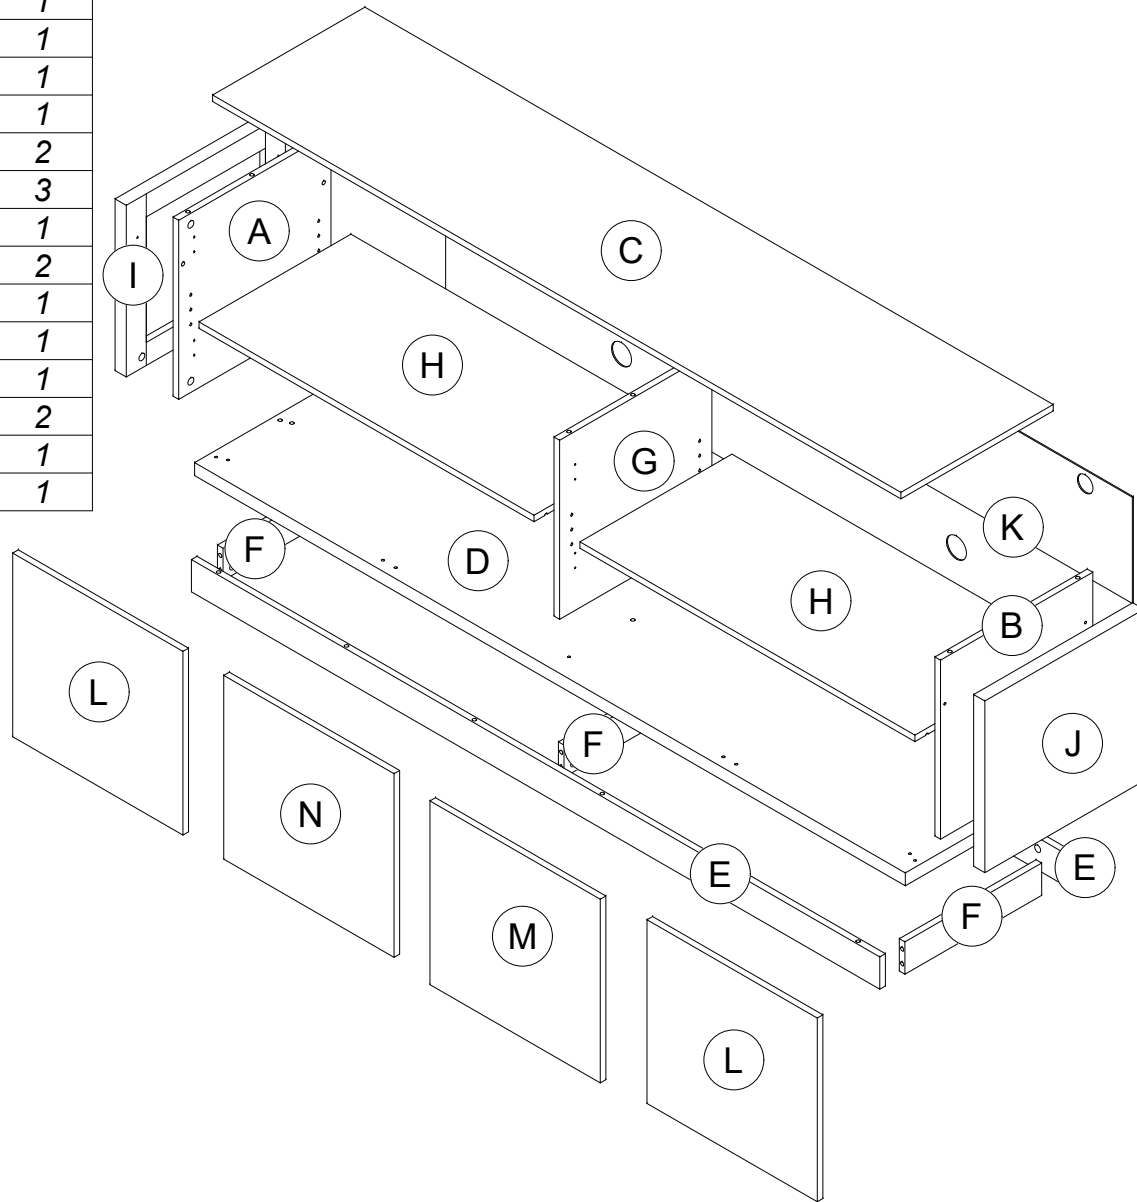

ASSEMBLY INSTRUCTIONS

DO NOT FULLY TIGHTEN ANY BOLTS BEFORE ALL PARTS ARE LOOSELY ASSEMBLED. THE PRODUCT/FITTINGS MAY BE DAMAGED IF OVERTIGHTENED. BEWARE OF CROSS THREADING SCREWS AND BOLTS DURINGS ASSEMBLY. SMALL COMPONENT PARTS COULD CHOKE A CHILD IF SWALLOWED. WE STRONGLY RECOMMEND THAT YOU KEEP CHILDREN AWAY FROM THE WORK AREA.


97034

4 DOOR TV CABINET


HARDWARE LIST

1		Handle - 160mm	2 pcs
2		Wood Dowel φ8x30mm	18 pcs
3		Minifix Bolt	33 pcs
4		Minifix Cam	33 pcs
5		Hinges 5/8"	4 pcs
6		Hinges 2/8"	4 pcs
7		Shelf Support φ5x16mm	8 pcs
8		Tapping Screw #10 x 1/2	32 pcs
9		Screw φ5x35mm	4 pcs
10		PVC Stopper	2 pcs
11		Nail	26 pcs
12		Screw φ3.5x14mm	4 pcs
AA		1.2 x 15 x 32 x 75mm Mounting L Bracket	2 pcs
BB		Flat Washer φ6	2 pcs
CC		Tapping Screw #10 x 1/2	2 pcs
DD		Screw φ4x38mm	2 pcs


Minifix Setup :

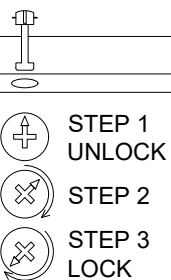


STEP 1

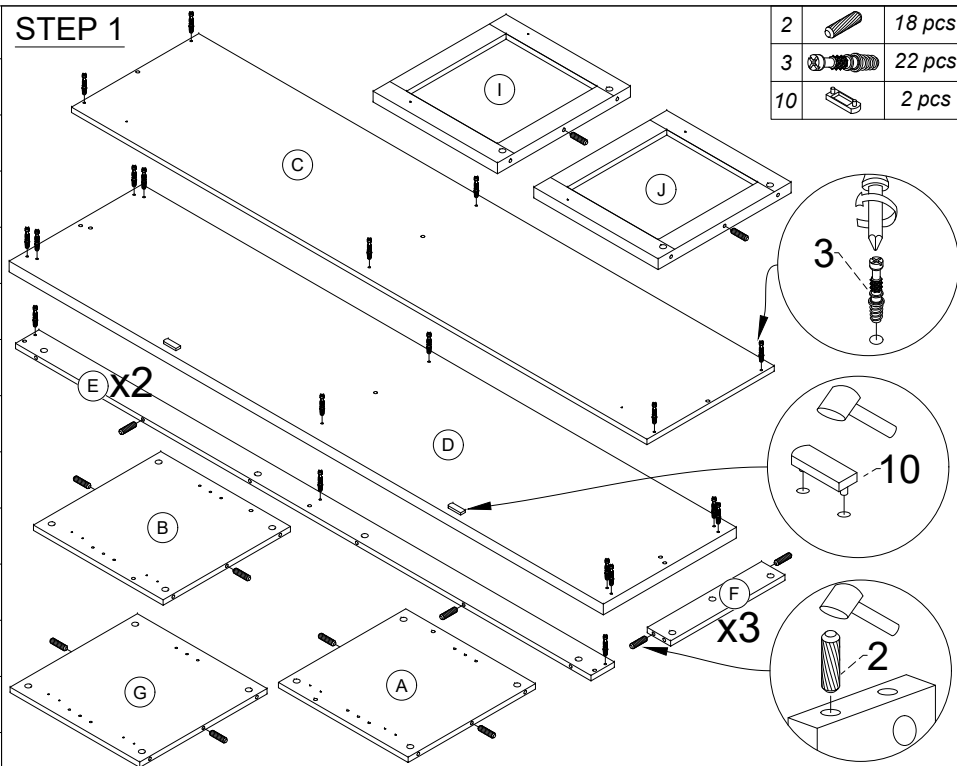


STEP 2

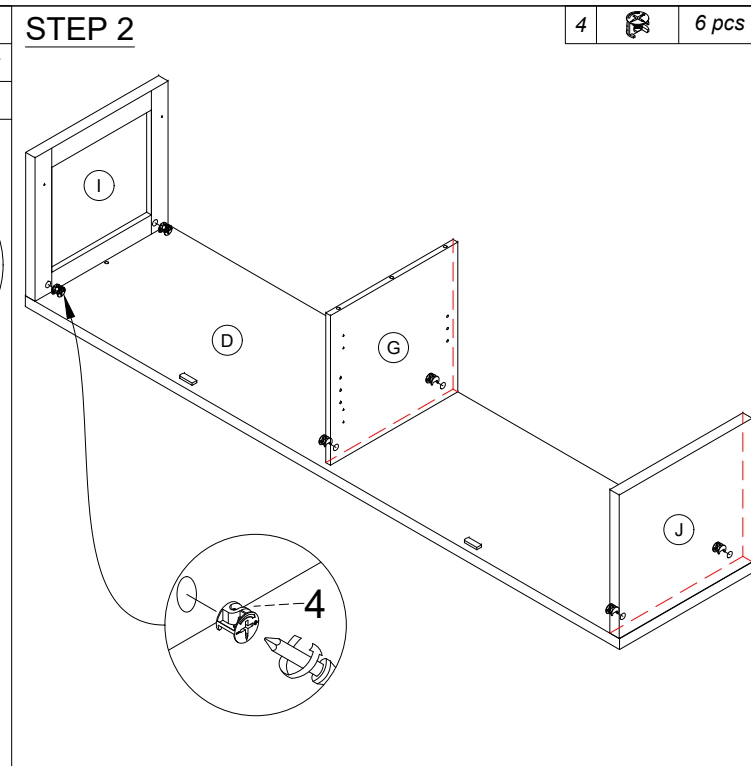

STEP 3

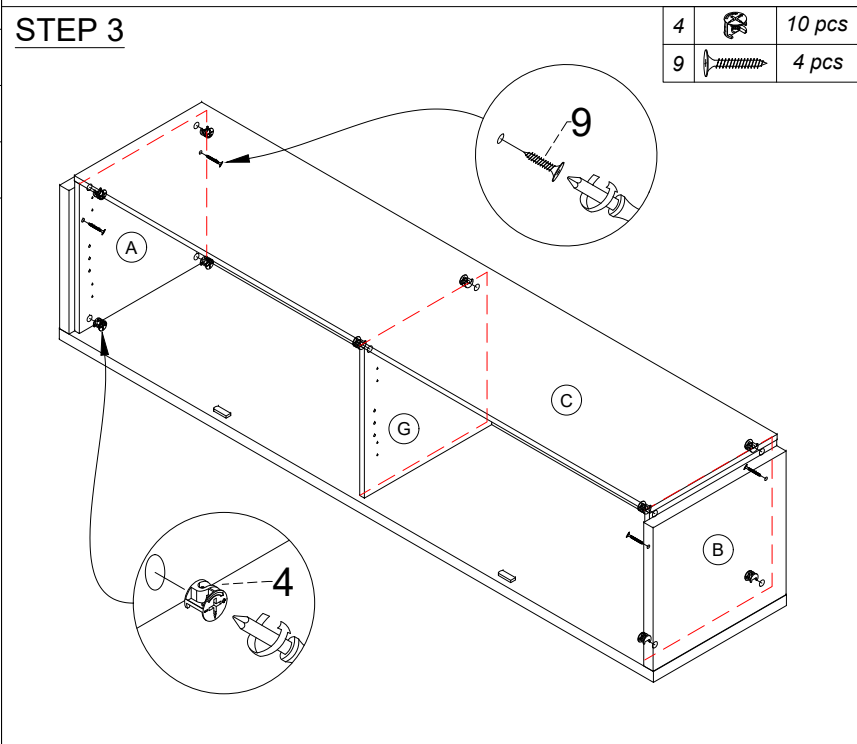

STEP 4

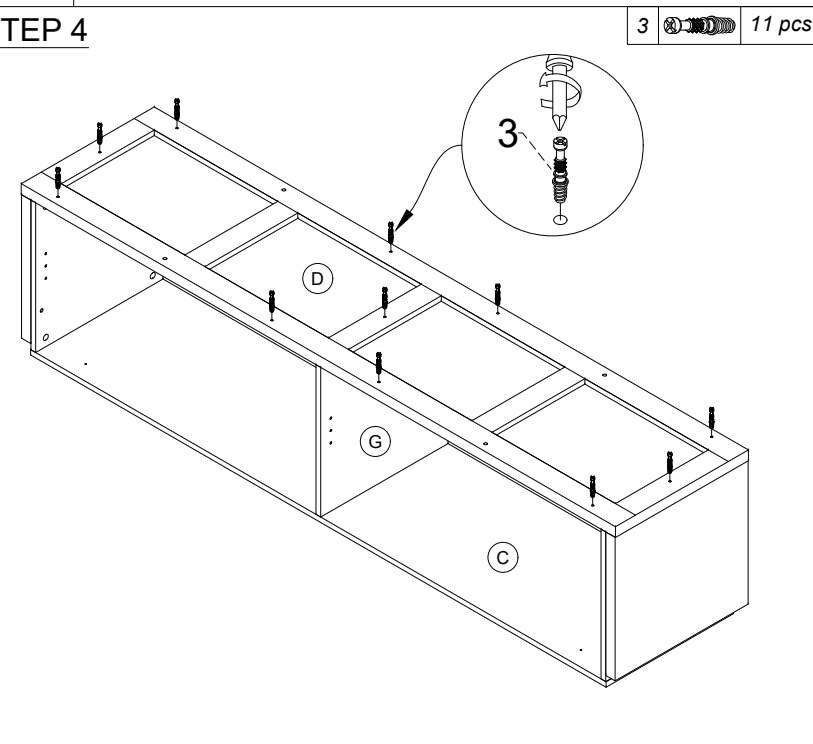


4		10 pcs
9		4 pcs

3		11 pcs
---	--	--------


STEP 5

4  17 pcs

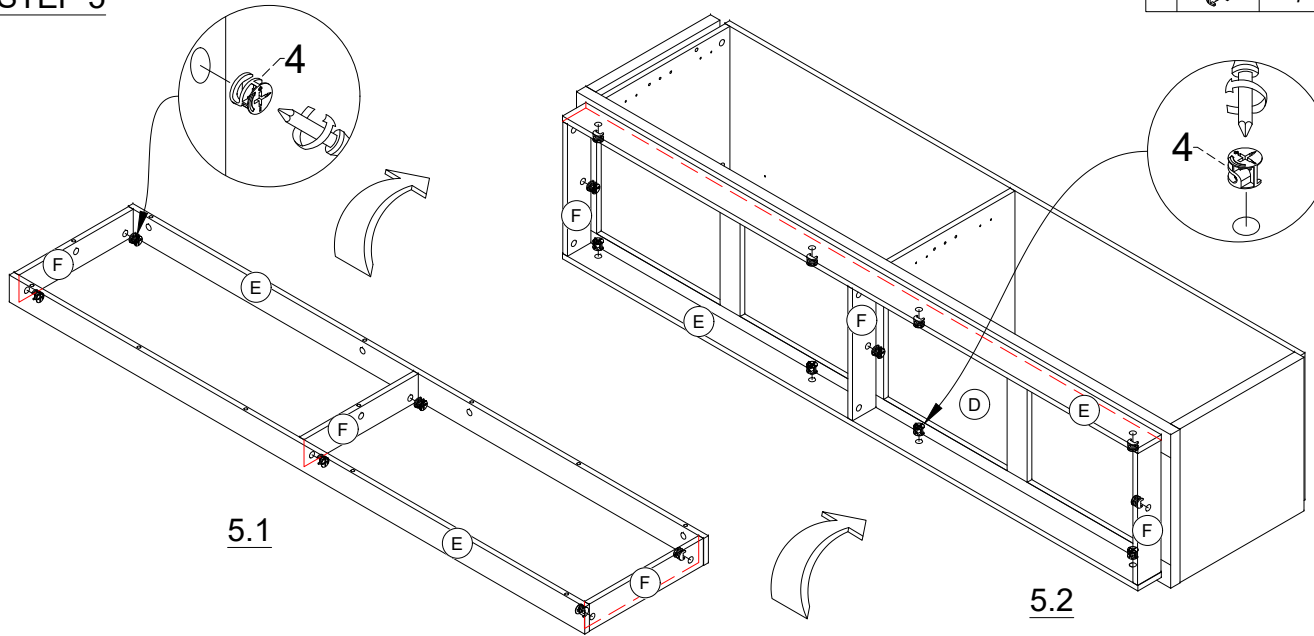


STEP 6

11  26 pcs

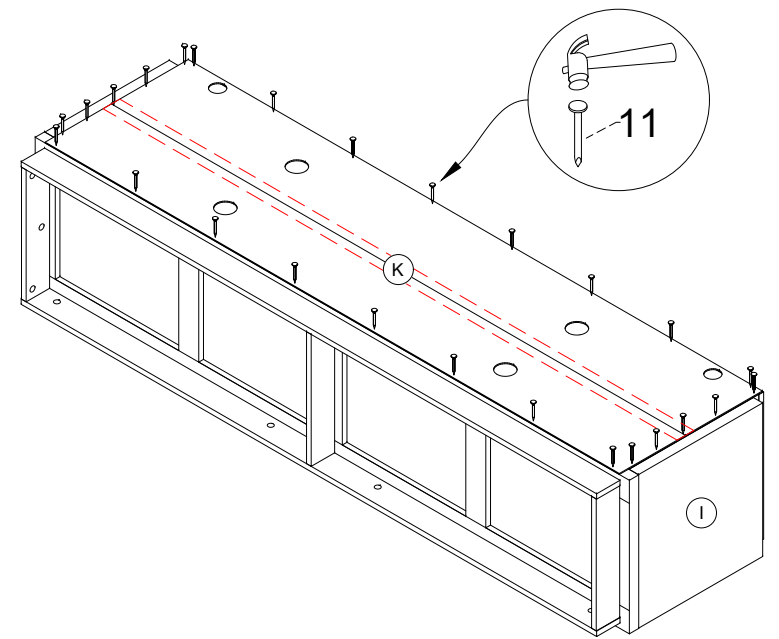




STEP 7

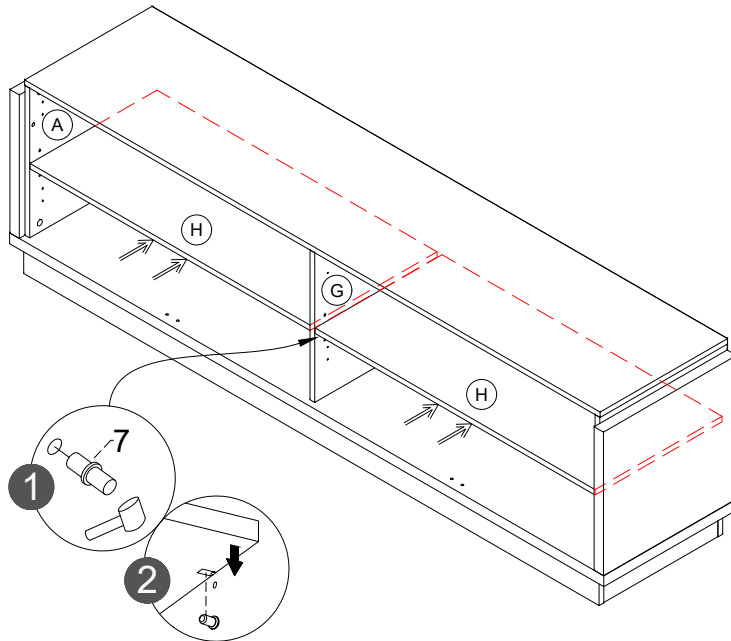
7  8 pcs



STEP 8


Panel L = Hinges 5/8"
 Panel M & N = Hinges 2/8"


5  4 pcs
 6  4 pcs
 8  16 pcs

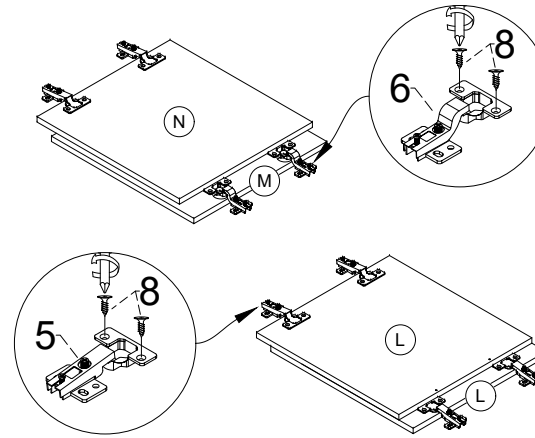

PLEASE PUT ANOTHER BOARD IN
 ORDER TO ALIGN THE HINGES
 ACCORDINGLY.




STEP 9

8  8 pcs

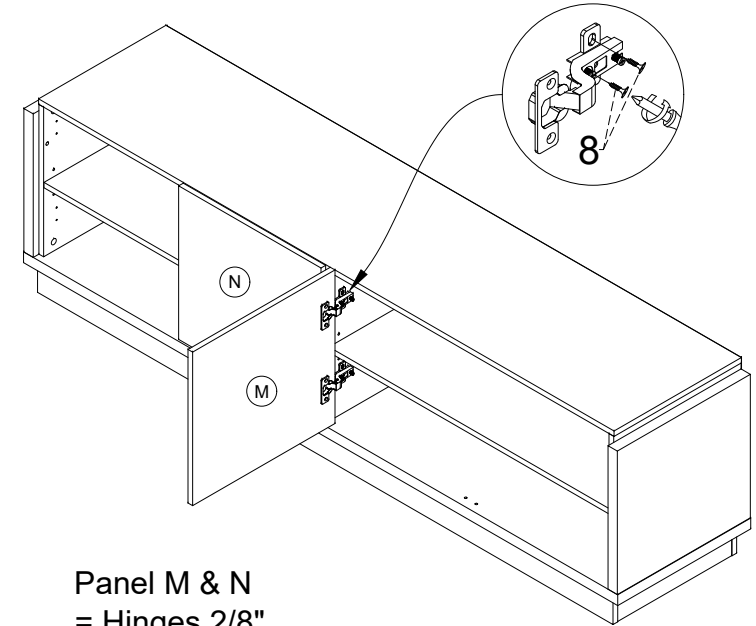





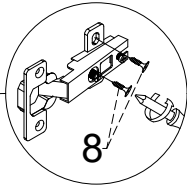
Panel M & N
 = Hinges 2/8"

STEP 10

1		2 pcs
8		8 pcs
12		4 pcs

ANTI-TIPPING STEP

AA		2 pcs
BB		2 pcs
CC		2 pcs
DD		2 pcs



Panel L = Hinges 5/8"

